

NAME

getcsw — read console switches

SYNOPSIS

getcsw ()

DESCRIPTION

The setting of the console switches is returned (in r0).

ASSEMBLER

(syscb = 45.; getcsw = 1)

sys syscb; getcsw