

Schematic Entry
Reference

SYNARIO

Universal FPGA Design System

Synario is a Data I/O Product

Schematic Capture System Command Reference

981-0330-002

August 1994

090-0556-002

Data I/O has made every attempt to ensure that the information in this document is accurate and complete. Data I/O assumes no liability for errors, or for any incidental, consequential, indirect or special damages, including, without limitation, loss of use, loss or alteration of data, delays, or lost profits or savings, arising from the use of this document or the product which it accompanies.

No part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, for any purpose without written permission from Data I/O.

Data I/O Corporation
10525 Willows Road N.E., P.O. Box 97046
Redmond, Washington 98073-9746 USA
(206) 881-6444

Acknowledgments:

Data I/O is a registered trademark and Synario and ABEL-HDL are trademarks of Data I/O Corporation.

Data I/O Corporation acknowledges the trademarks of other organizations for their respective products or services mentioned in this document.

© 1993-4 Data I/O Corporation
All rights reserved

Table of Contents

Command Reference

Quick Command Reference	2
Add Menu	
Add: Arc	5
Add: Attribute Window	6
Add: Bubble / Big Bubble	8
Add: Bus Tap	9
Add: Circle	10
Add: Expanded Bus Name	11
Add: I/O Marker	12
Add: Instance Name	13
Add: Line	16
Add: Net Attribute	17
Add: Net Attribute Window	19
Add: Net Name	20
Add: New Block Symbol	25
Add: Number Pins	27
Add: Pin	28
Add: Pin Attribute	29
Add: Pin Name Location	31
Add: Rectangle	32
Add: Symbol	33
Add: Symbol Attribute	36

Add: Table	38
Add: Text	41
Add: Wire	42
Edit Menu	
Edit: Attribute Location	44
Edit: Change Type	46
Edit: Constants	47
Edit: Copy	48
Edit: Copy Image	50
Edit: Cut	51
Edit: Delete	52
Edit: Drag	54
Edit: Duplicate	56
Edit: Mirror	58
Edit: Move	59
Edit: Net Attribute	60
Edit: Paste	61
Edit: Pin Attribute	62
Edit: Redo	63
Edit: Rotate	64
Edit: Schematic	65
Edit: Set Origin	66
Edit: Symbol	67
Edit: Symbol Attribute	68
Edit: Table Data	69
Edit: Undo	70

File Menu

File: Back Annotate	71
File: Check; Consistency Check	74
File: Exit	76
File: Expand	77
File: Matching Symbol	78
File: New	79
File: Open	80
File: Print	81
File: Print Image	82
File: Print Setup	83
File: Resequence Sheets	84
File: Restart	85
File: Save	86
File: Save As	87
File: Sheet; Sheet Setup	88
File: Statistics	90
File: View Report	92

Help Menu

Help Menu	93
---------------------	----

Object Menu

Object: HiLite	94
Object: Mark	95
Object: Query	96

Options Menu

Options: Attribute Display	100
Options: Display Options	101
Options: Graphic Options	103

Package Menu

Package: Add Pin Numbers	105
------------------------------------	-----

Package: Add Reference Designator	107
Package: Auto Package	108
Package: Check Packaging	109
Package: Clear Packaging	111
Package: Pin Numbers	112
Package: Query Packaging	113
Package: Reference Designator	114
Process Menu	
Processes Menu	116
Tools Menu	
Tools Menu	117
Tools: Check Circuit	118
Tools: Find Item	119
Tools: Probe Item	120
View Menu	
View: Full Fit	121
View: Pan	122
View: Push / Pop	123
View: Redraw	124
View: Zoom In	125
View: Zoom Out	126



Command Reference


This section is a detailed explanation of the Symbol Editor, Schematic Editor, and Hierarchy Navigator commands. The following conventions are used:

- ◆ Commands are listed in alphabetical order by menu, then command.
- ◆ Many commands have a keyboard accelerator key. This key is shown in the following quick-reference table, as well as on the top line of each command.
- ◆ The abbreviations Sch, Sym, and Nav at the right of the header indicate which program(s) the command appears in. If a command appears in a different menu in one of the programs, the alternate menu is shown in parentheses.

For example, the Symbol Attribute command appears in the Add menu of the Schematic Editor and the Edit menu of the Hierarchy Navigator. The right side of the header for the Add menu listing shows:

Sch, Nav (Edit)

The figure below explains how the commands are shown in the reference.

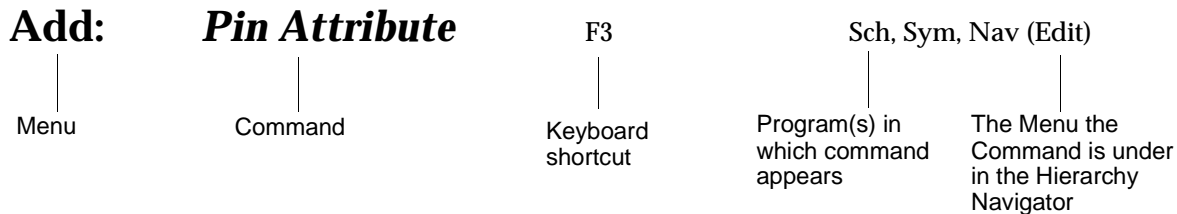

Quick Command Reference

Menu: Command	Accelerator	Program
Add: Arc		Sch, Sym
Add: Attribute Window	F4	Sym
Add: Big Bubble		Sym
Add: Bubble		Sym
Add: Bus Tap		Sch
Add: Circle		Sch, Sym
Add: Expanded Bus Name		Sch
Add: I/O Marker		Sch
Add: Instance Name		Sch
Add: Line		Sch, Sym
Add: Net Attribute		Sch, Nav (Edit)
Add: Net Attribute Window		Sch, Nav (Edit)
Add: Net Name	F4	Sch
Add: New Block Symbol		Sch
Add: Number Pins		Sym
Add: Pin	F2	Sym
Add: Pin Attribute	F3	Sch, Sym, Nav (Edit)
Add: Pin Name Location		Sym
Add: Rectangle		Sch, Sym
Add: Symbol	F2	Sch
Add: Symbol Attribute	CTRL+A	Sch, Sym Nav (Edit)
Add: Table		Sch
Add: Text		Sch, Sym
Add: Wire	F3	Sch
Edit: Attribute Location		Sch
Edit: Change Type		Sym
Edit: Constants		Nav
Edit: Copy	CTRL+C	Sch, Sym
Edit: Copy Image		Sch, Sym, Nav
Edit: Cut	CTRL+X	Sch, Sym
Edit: Delete	F5	Sch, Sym

Menu: Command	Accelerator	Program
Edit: Drag	F8	Sch, Sym
Edit: Duplicate	F6	Sch, Sym
Edit: Mirror	CTRL+E	Sch, Sym
Edit: Move	F7	Sch, Sym
Edit: Paste	CTRL+V	Sch, Sym
Edit: Redo	SHIFT+F9	Sch, Sym
Edit: Rotate	CTRL+R	Sch, Sym
Edit: Schematic		Sym, Nav
Edit: Set Origin		Sym
Edit: Symbol		Sch, Nav
Edit: Table Data		Sch
Edit: Undo	F9	Sch, Sym
File: Back Annotate		Nav
File: Check		Sym
File: Consistency Check		Sch
File: Exit		Sch, Sym, Nav
File: Expand		Sym
File: Matching Symbol		Sch
File: New		Sch, Sym
File: Open		Sch, Sym, Nav
File: Print		Sch, Sym, Nav
File: Print Image		Sch, Sym, Nav
File: Print Setup		Sch, Sym, Nav
File: Restart		Nav
File: Save		Sch, Sym, Nav
File: Save As		Sch, Sym, Nav
File: Sheet		Nav
File: Sheet Setup		Sch
File: Statistics		Sch, Nav
File: View Report		Nav

Menu: Command	Accelerator	Program
Help	F1	Sch, Sym, Nav
Object: HiLite		Sch
Object: Mark	F3	Nav
Object: Query	CTRL+Q	Sch, Nav
Options: Attribute Display		Sch, Nav
Options: Display Options		Sch, Nav
Options: Graphic Options	CTRL+G	Sch, Sym
Package: Add Pin Numbers		Sch, Nav
Package: Add Reference Designator		Sch, Nav
Package: Auto Package		Sch, Nav
Package: Check Packaging		Sch, Nav
Package: Clear Packaging		Sch, Nav
Package: Pin Numbers		Sch, Nav
Package: Query Packaging		Sch, Nav
Package: Reference Designator		Sch, Nav
Processes		Nav
Tools: Check Circuit		Nav
Tools: Find Item		Nav
Tools: Probe Item		Nav
View: Full Fit	CTRL+F	Sch, Sym, Nav
View: Pan	CTRL+W	Sch, Sym, Nav
View: Push/Pop	F2	Nav
View: Redraw		Sch, Sym, Nav
View: Zoom In		Sch, Sym, Nav
View: Zoom Out		Sch, Sym, Nav

Add: Arc

Sch, Sym

Description

Adds arcs to the drawing. These arcs are graphic only and have no electrical meaning in either the schematic or symbol.

Use

An arc is drawn from a starting to an ending point. These points can be defined by either clicking or dragging:

- Click** Point the cursor at the starting point of the arc and click. Move the mouse to the end point and click again.
- Drag** Drag the mouse from the starting point to the end point, then release the button.

In either case, you see a “rubber-band” arc that starts and ends on the selected points and passes through the cursor. Move the cursor to change the shape of the arc. When the arc has the shape you want, click to add the arc to the drawing. If you decide not to draw the arc, click right anywhere in the window to discard the selected points and restart the command.

If you move the cursor outside the sheet’s border, the arc disappears until you move the cursor inside.

The start and end points must fall on the grid. If the Primary grid is not fine enough, use the Graphic Options command from the Options menu to choose half- or quarter-grid resolution.

You can use the Graphics Option dialog box at any time to change the text size, justification, or orientation for the next attribute window you place. The graphics of previously placed windows are not changed.

Attribute windows can be reassigned after the symbol and schematic have been created. This reassignment can be temporary or permanent.

- ◆ Attribute Windows are permanently reassigned with the INI Editor.
- ◆ Attribute Windows are temporarily reassigned with the Attribute Display command from the Options menu in the Schematic Editor or the Hierarchy Navigator.

See Also

Add: Symbol Attribute

Options: Attribute Display

Refer to “Attributes” in the *SCS User Manual* for a more detailed explanation of attributes and attribute windows.

Add: ***Bubble / Big Bubble***

Sym

Description

Add “negation bubbles” to symbols. They are graphic and have no electrical meaning.

Use

The Big Bubble command draws a bubble one major grid in diameter. The Bubble command draws a bubble one-half a major grid in diameter. A bubble of the selected size is attached to the cursor. Click to add a bubble.

For the Bubble commands, the cursor tracks a finer grid. The grid selected is the smaller of the bubble’s radius or half the currently active grid. For more precise positioning, use the Graphic Options command from the Options menu to choose half- or quarter-grid resolution.

Add: *Bus Tap*

Sch

Description

A bus tap is the point at which a signal enters or leaves a bus. The Bus Tap command creates a bus tap from an existing named signal, or a signal that can be named at a later time.

The tap is shown as a small triangle on the side of the bus, with a signal wire leaving the triangle perpendicular to the bus. Each signal tapped from a bus should have a net name to identify it.

Use

Bus taps can be made only on vertical or horizontal sections of a bus. A tap cannot be made on a diagonal section.

To create a tap:

1. Select the Bus Tap command.
2. Click on the bus or wire at the location you want the tap to originate. If a tap is made from a wire, that wire is promoted to a bus.
3. Click at the desired end point. The tap is drawn from the bus to this point.

Once a tap has been added, you can use the Wire command to extend the connection to a symbol pin, net name, or another net.

The Net Name command can be used to create bus taps because it simultaneously places the tap, a wire, and the net name.

See Also

Add: Net Name

Add: Wire

Add: ***Circle***

Sch, Sym

Description

Draws circles. They are graphic and have no electrical meaning. You can draw as many circles as you want until you select another command.

Use

This command operates in both click and drag modes.

Click

1. Click at the desired center of the circle.
2. Move the cursor to set the size of the radius.
3. Click again to draw the circle.

Drag

1. Position the cursor at a point on the circumference of the circle.
2. Drag the mouse. The diameter of the circle is the distance between the first point and the cursor. The center of the circle is the mid-point of the line joining the first point to the cursor.
3. Release the button to draw the circle.

The points that define the circle can only be placed on a grid point. If the Primary grid is not fine enough, use the Graphic Options command from the Options menu to choose half- or quarter-grid resolution.

Add: ***Expanded Bus Name***

Sch

Description

Breaks a bus name attached to the cursor into its constituent signal names. Each successive element of the bus is then attached to the cursor as you click on the bus elements to name them.

Use

This command is available only when the Net Name command is active and there is a bus name attached to the cursor. Use the following procedure to expand a bus name:

1. Use the Net Name command to attach a compound name (bus name) to the cursor.
2. Select the Expanded Bus Name command, or click right anywhere in the window. The first element of the bus is now attached to the cursor, ready for placement. (See the Net Name command for details on net name placement.)
3. After you place the first bus element, the second is attached to the cursor. This continues until all individual elements of the compound name have been extracted and placed on the schematic.

See Also

Add: Net Name

Add: I/O Marker

Sch

Description

An I/O marker is a special indicator attached to a net name that identifies it as an input, output, or bidirectional signal. All primary inputs and outputs must be marked with I/O markers. In hierarchical designs, all schematics must have I/O markers whose names and polarities match those assigned to the pins of the corresponding symbol.


The Schematic Editor Consistency Check command uses I/O markers to ensure that the polarity of marked signals agrees with the polarity of any corresponding symbol pins. Any discrepancies are displayed. Discrepancies in polarity are also displayed each time you use the Hierarchy Navigator.

Use**To mark a net as input, output, or bidirectional:**

1. Select the I/O Marker command. Then:
2. Select the appropriate polarity from the pop-up dialog box (Figure 2). Or select None to remove the marker.
3. Click on the net name at the end of a horizontal or vertical wire segment or bus. (Several markers can be placed (or removed) at one time by dragging a box around the wire ends that are to receive markers.)

An I/O marker can only be added to flags at the end of a horizontal or vertical wire segment. A net should have only one I/O marker in the schematic.

Figure 2
I/O Markers Dialog Box

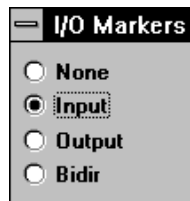**See Also**

Add: Net Name

Add: *Instance Name*

Sch

Description

Each symbol instance must have a unique reference name. The Schematic Editor automatically assigns names to unnamed symbols each time the schematic is saved. These names are of the form I_n, where *n* is an integer between 1 and $2^{32} - 1$ (4,294,967,295).

The Instance Name command lets you assign your own instance names. An instance name can be any alphanumeric sequence of up to 80 characters (including all-number sequences). Names are not case-sensitive.

Use

You are prompted for an instance name. Type in the name, then press ENTER. The name is now attached to the cursor. (If your instance name is already in use, you will receive the error message "Name Already Assigned to Another Instance.")

Click on an instance to attach the name. If the instance already has a name, the new name will overwrite it. You are then prompted for another instance name. The Instance Name command remains active until you select another command.

The Editor always checks to be sure the name is not already used. If it is, you will receive an error message and be prompted for a new name.

If you decide not to place the name, or want to change it, click right anywhere in the window. The name is removed from the cursor and you are prompted for a new name.

Instance Name is most often used to add a single name. You can also add a sequence of names, such as INV4, INV5, INV6, This is called *auto-increment* mode.

To use auto-increment mode to add instance names:

1. Type the prefix, the first sequence number, and a plus sign without spaces or tabs. For example, INV4+. Then press ENTER.
2. Click on the first instance. This attaches the instance name, consisting of the prefix name and the first number in the sequence (for example, INV4). If the name is already assigned elsewhere, the number increments to the next unused number.
3. Click on each additional instance in the sequence. The next name in the sequence is attached to the cursor after each placement (in this example, INV5, INV6, INV7, ...).

4. To terminate auto-increment, click right anywhere in the window. You can then enter a new instance name.

Iterated Instances

Add: Instance Name can also be iterated (automatically generate an array of instances), even though only a single symbol is shown in the schematic. Only Block, Cell, and Component symbol instances can be iterated. (The count of the instances is specified by assigning an instance name of the form *name[x:z]*, where *x* and *z* are the beginning and ending values of the desired range of values separated by a colon.)

To create an array of eight inverters:

1. Type in the base or prefix name, such as INV.
2. Add a numerical sequence in brackets, such as [8:15].
3. Press ENTER. The expression is attached to the cursor.
4. Click on the desired instance.

The example of INV[8:15] now represents a bank of eight inverters with the names INV[8], INV[9], INV[10], ... INV[15]. This is a compact notation for representing bit-slice structures.

Even though only one inverter is displayed, the Schematic Editor has placed eight inverters. You can push into an inverter instance in the Hierarchy Navigator by selecting the inverter name. For example, if you are viewing the iterated instance INV[8:15], you can push into INV[9]. This also allows you to change the attributes of individual members.

Connections to the pins of iterated instances are made according to the following rules:

Connection	Rule
Simple net to simple pin	The net connects to corresponding pin on each instance.
Bus to bus pin	Successive bus signals connect to successive bus pins on each instance. The bus and bus pin must have the same number of nets.
Simple net to bus pin	Not permitted. Only a bus can connect to a bus pin.
Bus to scalar pin	The Nth signal of the bus connects to the scalar pin of the Nth instance. The width of the bus and the number of instances must match.

To assign reference designators to iterated component symbols, provide a comma- or blank-delimited list of reference designators as the reference designator attribute on the iterated symbol. A sequence of reference designators can be included by enclosing the numeric range in parentheses () or brackets [].

For example, instance name C[1:20] specifies 20 iterations of a symbol. Reference designator C1,C3,C(5:20),C22,C24 assigned to the symbol causes the 20 iterations to be assigned the reference designators: C1, C3, C5, C6, C7–C20, C22, C24.

Add: ***Line***

Sch, Sym

Description

Adds line segments to the drawing. These line segments are graphic and have no electrical meaning in the schematic or symbol. You can draw as many lines as you want until you select another command.

Use

The Line command operates in either click or drag mode.

Click

1. Click where you want the line to start.
2. Each subsequent click adds a single line segment. The segment can be placed only at 45° increments.
3. Terminate the line by clicking left a second time at the last point, or clicking right anywhere in the window.

Drag

4. Drag the mouse from the starting point of the line to its end point. The line can be at any angle, not just at 45° increments.
5. Release the button. A line is drawn between the two points.

Lines can be drawn only between grid points. If the regular grid is not fine enough to let you position the line as you want, use the Graphic Options command from the Options menu to choose half- or quarter-grid resolution.

Add: *Net Attribute*

Sch, Nav (Edit)

Description

Assigns values to net attributes.

Use

The command displays the Net Attribute Editor dialog box with one edit field on the top and two list boxes on the bottom. The status bar prompts you to select a net.

The left list box displays the names of the selected nets. The right list box displays all attributes that are assignable for the selected nets.

To select a net or nets:

- ◆ Click on the desired net.
- ◆ Shift-click to select additional nets.
- ◆ Drag a box around the desired nets. It will select all nets that have a name, window, or end point contained in the box.

After a net is selected, the list box contains the attributes that can be modified. The value of an attribute is changed in the edit field at top.

Note: *When you select more than one net, attribute changes apply to all selected nets.*

Note: *You may need to define a net attribute window before new attributes are displayed.*

To modify a net attribute:

1. Click on the net (or nets) you want to change.
2. Click on the name of the attribute you want to modify. The attribute name and its current value appear in the edit box.
3. Edit the attribute value.

Buses

In the Hierarchy Navigator, selecting a bus selects all nets in the bus. Click in the left list box to select or de-select nets in the bus. The Net Attribute dialog box shows the net attributes that can be modified. Attribute values are changed in the edit field at top.

Note: *Do not alter bus attributes in the Schematic Editor.*

To modify a bus attribute:

1. Click on the bus whose attribute you want to change. The elements of the selected bus are displayed in a list box.
2. Click in the left list box to select or de-select nets in the bus.
3. Click on the name of the attribute you want to modify. The attribute name and its current value appear in the edit box. When you change an attribute value, it is changed for all selected nets.
4. Edit the attribute value.

To delete an attribute value:

You can remove any attribute value by erasing it, instead of editing it. If the attribute has a default, the default value then becomes the active value.

Attributes are defined in the INI Editor. Access to the definitions is through the Attribute menu of the INI Editor.

See Also

Add: Pin Attribute

Add: Symbol Attribute

Add: Net Attribute Window

The "Attributes" chapter in the user manual.

Add: ***Net Attribute Window***

Sch, Nav (Edit)

Description

Defines display locations for net attributes.

Use

Net attributes are typically not displayed unless or until a display location is defined.

To define a net attribute window:

1. Choose Add: Net Attribute Window.
2. Click on the net where you want the attributes to be displayed. The attributes are displayed as a flag at the location you clicked.

Note: *If displayable attributes are already defined for the selected net, those attributes are displayed in the new location. Nothing is displayed if no attributes are defined.*

Add:	Net Name	F4	Sch
-------------	-----------------	----	-----

Description >

Each net must have a unique reference name. The Schematic Editor automatically assigns names to unnamed nets each time the schematic is saved. These names are of the form N_n, where n is an integer between 1 and $2^{32} - 1$ (4,294,967,295).

The Net Name command lets you assign your own net names. Only alphanumeric characters are allowed (except in compound bus names or iterated instances). Names can start with numbers or contain all numbers. (If you check the First Character Must be Alphabetic box in the System Controls dialog box of the INI Editor, the first character cannot be a number. If you check Coerce Net Names To uppercase, all characters are converted to uppercase) You can use any mixture of upper- and lowercase for readability.

Simple and Compound Names

A simple name is a single name that represents a single signal. A simple name can be no more than 64 characters. Examples of simple names are:

```
READ
WRITE
MYGOODNESSTHISISALONGSIMPLENAME
```

Compound names are used to name buses. A compound name can be a list containing more than one net name, separated by commas. For example:

```
READ, WRITE, MYNAME
```

which represents the three signals READ, WRITE, and MYNAME. Spaces within compound names are ignored.

You can also create a compound name by appending a numerical sequence to a simple name. The sequence is specified as a starting number, an ending number, and an optional increment (default = 1). The numbers are positive integers and are delimited by commas (,), dashes (-), or semicolons (;). The sequence can be enclosed in parentheses (), brackets [], or curly braces {}.

The following are examples of sequential names.

```
DATA[0-7] represents DATA[1] ... DATA[7]
ADDR(0,14,2) represents ADDR(0) ADDR(2) ADDR(4) ... ADDR(14)
ZIPPY{0:15:2} represents ZIPPY{0} ZIPPY{2} ZIPPY{4} ... ZIPPY{14}
```

If the increment is greater than one, and the ending number does not equal the starting number plus an integral multiple of the increment, the sequence might not include the ending number (as in the third example above).

A compound name can itself be a list of sequences. For example:

```
CLOCK,ADDR[0-7],DATA(0:7) represents
CLOCK ADDR[0] ... ADDR[7] DATA(0) ... DATA(7)
```

Entering the Net Name

There are two ways to enter net names.

- ◆ Single or compound names can be entered from the keyboard. Or ...
- ◆ A name can be copied from an existing net or bus by clicking on the wire.

Once the name is attached to the cursor, it is placed by clicking on the selected wire. A compound name promotes a net to a bus. (The constituent signals of the bus are the individual signals obtained by expanding the compound name.)

A compound name can be very long. Long names can be wrapped onto several lines using a backslash (\) as the continuation character. The backslash replaces a comma (,) in the compound name at the point you want the line to break. This multi-line naming is only available on net names at right or left ends of buses. The following example shows how the compound name is entered to achieve the multi-line effect:

```
A_NAME\ANOTHER\DATA[0-3]\AND, MORE\LAST
```

This results in the net name below, where the net extends to the right:

```

A_NAME    --\
ANOTHER   ---\
DATA[0-3] ----->-----
AND, MORE ---/
LAST      --/
```

Attaching the Net Name

Once a name (or sequence of names) has been entered, the name (or the first name in sequence) is attached to the cursor. There are three ways to place the net name:

- ◆ Click on an empty point to place a net name flag. Note that this will be an error in the completed schematic unless a wire is eventually connected to the name.
- ◆ Click on a wire. A name placed at the end of a wire is left- or right-justified. A name in the middle of a wire is centered.

The position of the name is determined by the segment ends. If both ends are connected, the name is placed in the middle. If neither end of the segment is connected, the name is placed at the starting point. If only one end of the segment is connected, the name is placed at the *unconnected* end.

- ◆ **Drag the mouse to simultaneously add a single wire segment and its name to a pin, wire, or bus.** If either end of the segment connects to a perpendicular wire or bus, a bus tap is created at that end. If the wire was not a bus, it is promoted to a bus.

Once you have dragged the mouse to or from a pin, you can place subsequent wires and names by clicking on a pin. (You don't need to drag.) A wire segment the same length as previously created is added, with the name attached as above.

Attaching Names Sequentially

If the net name is a compound name, you can attach the individual names sequentially to individual wires. After entering the name, select the Expanded Bus Name from the Add menu, or click right anywhere in the Editor's window. As you click on wires, the individual names from the compound name are added sequentially. Click right at any time to cancel the operation.

You can also add a sequence of names for non-compound nets, such as NET4, NET5, NET6, This is called *auto-increment* mode.

To use auto-increment mode to add net names:

1. Type the prefix, the first sequence number, and a plus sign without spaces or tabs separating them. For example, NET4+. Then press ENTER.
2. Click on the first net. This attaches the net name, consisting of the prefix name and the first number in the sequence (for example, NET4). The number increments to the next number.
3. Click on each additional instance in the sequence. The next name in the sequence is attached to the cursor after each placement (in this example, NET5, NET6, NET7, ...).
4. To terminate auto-increment, click right anywhere in the window. You can then enter a new net name.

Regardless of how you attach the name, the Schematic Editor highlights the net you are attaching the name to when you click.

The Net Name command remains active, prompting for the next name, until you select a different command.

Renaming a Net

To rename all branches of a net, across all sheets:

1. Select the Net command, or click right to restart the command (if it is already selected).
2. Type the new net name and press ENTER.

3. Hold down SHIFT and click on the net to be renamed. The net is automatically renamed on all sheets.

Be sure to click directly on the name to avoid an error. An error is also flagged if you try to rename a branch that has been named at more than one point. (You must remove the extra names before you can rename the branch.)

If the net to be renamed has an I/O marker:

- ◆ The I/O marker is kept if you hold down SHIFT to rename all branches of the net.
- ◆ The I/O marker is removed if you only click to rename an individual branch.

Editing Existing Net Names

You can also edit net names with the Net Name command.

To edit a net name:

1. Select the Net Name command, or if it's already active, click right anywhere on the screen to restart it. Then:
2. Hold down SHIFT and click on the net whose name you want to edit. The name of the net is placed on the prompt line.
3. Edit the name using the BACKSPACE, DELETE, and ARROW keys. Press ENTER when you have the name the way you want it.
4. The edited name is then attached to the cursor and can be placed on the schematic in the ways described above.

Global Net Names

Global signals can be accessed from all schematics and hierarchy levels in a design. Names assigned as global signals cannot, therefore, be used as local signal names. Figure 3 shows the Global Signals dialog box in the INI Editor.


You can choose from three different types of global signals. They are:

Unlabeled Symbol

You can attach a single name to each symbol in columns 1 and 3 of Figure 3. When you name a net with one of these names, the corresponding symbol is attached to the net. The name is not shown. The symbol is the only external indication of the net name. Use the Query command to view the name.

The selection of unlabeled symbols is limited to the power and ground symbols shown in columns 1 and 3 of Figure 3.

Figure 3
Global Signals Dialog Box

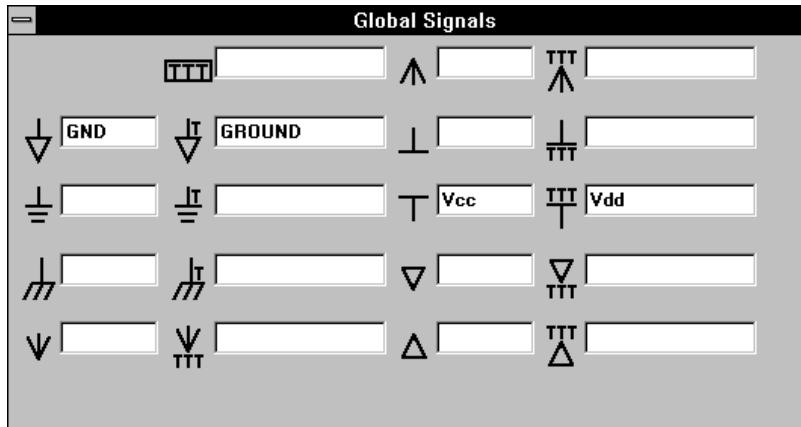

Labeled Symbol

You can attach one or more names to the symbols in columns 2 and 4 of Figure 3. The names are separated with spaces, not commas. When a net is assigned one of these names, the corresponding symbol is attached to the net. (The symbol will be displayed only if the net is a vertical wire whose upper end is free (for VCC or VDD) or whose lower end is free (for GND).) The “T” or “TTTT” in a symbol is replaced with the actual net name.

The selection of named symbols is limited to the power and ground symbols shown in columns 2 and 4 of Figure 3.

No Symbol

You can attach names to the box containing “TTTT” at the center top of the of the global signal editor. (See Figure 3.) These names are global at all hierarchy levels. The name appears attached to the net.

Global supply symbols are drawn only at the top of vertical wires. Global ground symbols are drawn only at the bottom of vertical wires. In all other cases, global signals are shown with their names inside a box, like `[net_name]`.

See Also

Add: Bus Tap

Add: Expanded Bus Name

Add: *New Block Symbol*

Sch

Description

Complex or repeated sections of circuitry are often represented as hierarchical blocks to simplify a schematic. The New Block Symbol command is a quick and efficient way to create symbols for these blocks without leaving the Schematic Editor.


All Block symbols have the same basic design: a rectangle with pin leads extending outward. Input pins are on the left side and output pins on the right. Pin lead length is based on the Default Pin Name Offset parameter from the Symbol Controls dialog box of the INI Editor.

The Block symbol has an attribute window near the top for displaying the name, and a window near the bottom for displaying the instance name. Rectangle height and width are proportional to the number of pins and the length of their names, respectively.

Use

The New Block Symbol command displays a dialog box (Figure 4) with four edit fields in which you specify the symbol name, plus the names of the input pins, output pins, and bidirectional pins. The pin names are separated by commas.

Figure 4
New Block Symbol Dialog Box

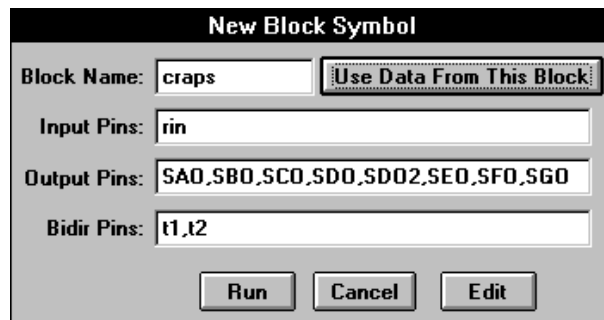

Block Name	Your name for the symbol
Input Pins	The names of all nets with an Input I/O marker
Output Pins	The names of all nets with an Output I/O marker
Bidir Pins	The names of all nets with a Bidirectional I/O marker

Use Data... Creates a block symbol using information from the current schematic

Bus Pin Names

A bus pin name (whether single or compound) must be enclosed in equals signs (= =). If a compound name is not surrounded by equals signs, each name is expanded to an individual pin. The following examples illustrate three possible ways to enter pin names in the Inputs field:

A, B[0:3], C Creates 6 pins: A B[0] B[1] B[2] B[3] C

A, =B[0:3]=, C Creates 3 pins: A B[0:3] C

=A, B[0:3], C= Creates 1 pin: A,B[0:3],C

Pin Order

Block symbols are completely arbitrary and do not have to be based on existing schematics or behavioral files. However, if you are eventually going to connect an ordered bus to the symbol's pins, you should make sure the pin order specified in the symbol matches the order of the signals in the bus. The *names* of the signals do not have to match.

Making a Symbol for the Current Schematic

If you want to create a symbol that represents the current schematic, click on "Use Data From This Block." The edit fields are automatically filled with the names of those nets that are labeled with I/O markers. If you have already labeled all nets with I/O markers, you won't have to enter anything manually. See also File: Matching Symbol.

Creating the Symbol

Once all information has been entered, the symbol can be created or edited.

Click on the Run button to create a **.sym** file in the project directory. If the symbol's name is *different* from the name of the currently loaded schematic, the new symbol is also attached to the mouse cursor for immediate placement.

Click on the Edit button to create the symbol and load it into the Symbol Editor. You can inspect the symbol, or alter it as desired.

See Also

File: Matching Symbol
Add: Symbol

Add: ***Number Pins*** Sym

Description

Adds pin numbers to physical devices that will be mounted on a circuit board.

Use

The Number Pins command is used only for symbols of type COMPONENT in PCB designs. It is not available unless the Application Mode is set to PCB Only or Both IC & PCB. (Application Mode is set in the System Controls dialog box of the INI Editor.)

After selecting this command, type the pin number you want on the prompt line, then press ENTER. The number is attached to the mouse cursor. Click on the pin you want to have this number.

After each click, the pin number attached to the mouse cursor is automatically incremented. If this is not the number you want, click right anywhere in the window. Then enter the desired number on the prompt line and press ENTER.

Number Pins remains active until you select another command.

See Also

Package: Pin Numbers

Package: Add Pin Numbers

Add: Pin Attributes

Add:	<i>Pin</i>	F2	Sym
-------------	-------------------	----	-----

Description

Specifies the locations of symbol pins. Pins correspond to I/O markers on the underlying schematic and connect the device represented by the symbol to the rest of the circuit.

Use

To add a pin, click at the desired location. If that point already has a pin, an error message is displayed. Pins appear in the Symbol Editor as small squares.

Pins are usually attached to the symbol on short lines extending outward from the symbol's body. However, pins can be attached anywhere inside or outside the symbol, with or without connecting lines.

Pins are electrical elements and are therefore restricted to locations on major grid intersections. There can be only one pin at any location.

You can create special pin symbols to indicate items such as test points and edge connectors. These pin symbols are added to schematics with the Symbol command. The use of these symbols of type Pin is described in "Using the Schematic Editor" in the *SCS User Manual*.

Add:	<i>Pin Attribute</i>	F3	Sch, Sym, Nav (Edit)
-------------	-----------------------------	----	----------------------

Description

The Pin Attribute command adds and edits pin attributes. Each pin can have its own set of attributes. These attributes are assigned during the symbol's creation and are the default attributes. Pin attributes can also be added or changed in the Schematic Editor or Hierarchy Navigator.

Use

Selecting this command displays a dialog box. The left side of the dialog box lists the names for each pin. Until names are assigned, unnamed pins are represented by rows of dashes.

The right side of the dialog box lists the attributes that can be assigned to a symbol pin. In the Schematic Editor and Hierarchy Navigator, only attributes that have a value defined are displayed. To display all assignable attributes, check List All Attributes.

If more than one pin is selected, attribute changes apply to all selected pins.

If one pin is selected, any attributes that have been assigned to the pin are shown in the format:

```
attribute_name = value
```

To assign a pin attribute:

1. Select a pin or pins using one of the following methods:
 - ♦ In the Pin Attribute Editor, click on a pin name.
 - ♦ In the Pin Attribute Editor, shift-click for additional pin names.
 - ♦ Click on a pin.
 - ♦ In the Schematic Editor and Hierarchy Navigator, click on a symbol to select all pins on the symbol.
 - ♦ In the Symbol Editor, drag a box around pins.

Note: *You can select pins from only one symbol at a time.*

The pin is highlighted and the right list box is updated to show the attributes assigned to the selected pin.

2. Select the attribute to be assigned or modified by clicking on the corresponding line in the right-hand list box. The attribute name is copied to the top line in the dialog box. If a value has already been assigned, that value appears in the edit field.

3. Change the attribute by editing the existing value or typing a new one. Then press ENTER.
4. Repeat steps 2 and 3 to assign or modify attributes.

You can select pins and attributes in any order. You would typically assign one attribute to all the pins before moving to the next attribute. Press ENTER to move from pin to pin while keeping the same attribute active.

Pin attributes generally have no meaning except as literal text. It is only when other programs read this text that it acquires any other meaning. There are a few exceptions:

- ◆ The Pin Name on Block symbols must match the name of the net connected to this pin on the underlying schematic in the hierarchy. The Pin Name can represent a single signal, or be a compound name representing a bus. (See the *Net Name* command.) All signals represented by a pin must exist on the underlying schematic.
- ◆ The Use or Polarity attribute has a default value of Input. You need to assign a value only if the Use or Polarity is other than Input. The other legal values are Output and Bidir (bi-directional).
- ◆ The Load and Drive attributes are used in the load analysis in the Electrical Rules Check Process. These values must be integers and use consistent units. Input pins use the attributes LoadLow and LoadHigh. Output pins use the attributes DriveLow and DriveHigh, while bidirectional pins use both the Drive and Load attributes.
- ◆ The Pin Number attribute is used in the Symbol Editor to assign a single pin number for Component symbols, or a list of pin numbers for gate symbols. Specific pin numbers are then assigned in the Schematic Editor or Hierarchy Navigator.

Add: *Pin Name Location*

Sym


Description

Specifies where to display the pin name. Its position is expressed as a direction and offset from the pin. The direction is limited to the four primary directions (up, down, left, and right). The distance is limited to 0 through 31 fine grids (one-fourth of a major grid).

Use

The Pin Name Location command displays the dialog box shown in Figure 5.

Figure 5
Pin Name Location Dialog Box

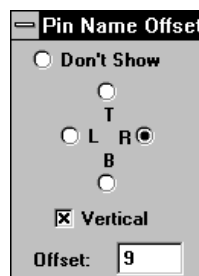**To change the position of a pin name:**

- ◆ **To indicate where the name should display:** click the appropriate radio button (L, R, T, or B), then click on the pin.
The L (“left”) button is typically used for pins on the left of the symbol and displays the name to the right of the pin. The R (“right”) button displays the name to the left of the pin. The T (“top”) button displays the name below the pin. The B (“bottom”) button displays the name above the pin.
- ◆ **To display a pin name as vertical text:** click the Vertical button .
- ◆ **To hide a pin name:** click the Don’t Show radio button, then click on that pin.
- ◆ **To change the distance of the pin name from the pin:** click in the Offset edit box, then enter an offset value (0–31). This value is in units of one-quarter the main grid. The initial setting for the offset is set by the PinNameOffset parameter in the INI Editor.

You can select more than one pin at a time by dragging a box around them. All the pin names are added, repositioned, or deleted when you release the mouse button.

Add: ***Rectangle***

Sch, Sym

Description

Adds rectangles to the drawing. These rectangles are graphic only and have no electrical meaning.

Use

The Rectangle command operates in either click or drag mode.

Click

1. Click at one corner of the rectangle.
2. Move the cursor to the diagonally opposite corner. A dotted line shows the outline of the rectangle.
3. Click again to draw the rectangle.

Drag

1. Drag the mouse from one corner of the rectangle to the diagonally opposite corner. A dotted line shows the outline of the rectangle.
2. Release the button to draw the rectangle.

The corners of a rectangle must fall on grid points. If the regular grid is not fine enough, use the Graphic Options command from the Options menu to choose half- or quarter-grid resolution.

You can continue drawing rectangles until you select another command.

Add: *Symbol* F2 Sch

Description


Places instances of symbols in schematics. You can place symbols from a supplied library, or create your own symbols with the Symbol Editor. The symbol files can be in the project directory or in library directories. Symbol files have the file extension **.sym**. Symbol libraries have the file extension **.lib**.

Use

Selecting the Symbol

When you select the Symbol command, a dialog box with two list boxes appears. (Figure 6.)

Figure 6
Symbol Library Selection Box

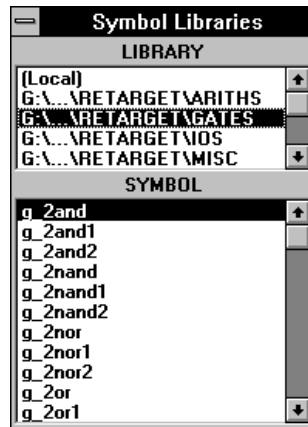

The upper list box contains the libraries or library directories in their search order. One of these lines is highlighted, indicating the currently selected directory. Use the ARROW keys or click on a name to select a different library. The lower list box contains a list of the symbol files contained in the selected directory. Select a symbol by clicking on its name.

There are two other ways to specify the symbol:

- ◆ Enter the file name of the symbol in the Prompt line and press ENTER. (Only the base name is needed, not the `.sym` suffix.) The system selects the first symbol it finds (following the search path specified in the Symbol Libraries dialog box of the INI Editor) with the name you entered. *Or ...*
- ◆ If a symbol of the desired type is already on the schematic, click on an instance of it.

Placing the Symbol

Once a symbol is selected, the symbol outline is attached to the mouse cursor. Click left to place it, as many times as you want. Click right anywhere in the Schematic Editor window to reset the Symbol command and choose another symbol.

Changing the Symbol's Orientation

Before a symbol is placed, you can rotate or mirror it with the Rotate and Mirror commands from the Edit menu. These commands can be combined to create any of eight possible orientations. The outline on the mouse cursor changes to show the new orientation. Refer to the Rotate and Mirror commands for a full description.

Replacing a Symbol

To replace an existing symbol

Position the cursor so that at least 50% of the new symbol overlaps the one to be replaced, then click. If the overlap is less than 50%, the new symbol does not replace the old one, but overlaps it. None of the override attributes associated with the previous symbol are applied to the new symbol.

Pre-Placement Checks

The Schematic Editor will not place a symbol if:

- ◆ Any part of it extends past the edge of the sheet. The symbol's "extent" is an imaginary rectangle enclosing the symbol and its pins. (This rectangle is also used to evaluate the 50% overlap described in the preceding paragraph.) You can view the extent rectangle by selecting the Query command from the Object menu, then clicking on the symbol.
- ◆ A pin falls on the intersection of crossing wires. This would implicitly connect two previously unconnected nets, and the command fails.
- ◆ The placement directly connects two pins (there must be a wire between pins). A pin may not directly touch an isolated net name.

If none of these checks fail, an instance of the symbol, rotated and mirrored as specified, is added to the schematic. If any check fails, the symbol is not placed, and you can try again.

Pin Connections

Each symbol pin that touches a wire is connected to its respective net. If the appropriate display options are enabled, unconnected pins are marked with a error dot, and pins with two or more wires are marked with a connect dot.

Occasionally a symbol is placed so that a pin lands on the wire near, but not on, its end. The resulting stub may be obscured by the symbol graphics. This condition is identified by the connect dot on the pin and the hanging end mark on the end of the stub. (Both the Show Connect Dots and Mark Hanging Wires options must be enabled.)

See Also

Edit: Mirror

Edit: Rotate

Add: ***Symbol Attribute*** CTRL+A Sch, Sym, Nav (Edit)

Description

Assigns values to symbol attributes.

Use

Selecting this command displays a dialog box with two edit boxes at the top and two list boxes at the bottom (the Symbol Editor has one edit box and one list box).

The left list box displays the selected symbols. The right list box displays all the attributes that can be modified. Their values are changed in the edit box.

To select a symbol or symbols:

- ◆ Click on the desired symbol.
- ◆ Shift-click to select additional symbols.
- ◆ Drag a box around the desired symbols.
- ◆ Use the **Find** button (Sch, Nav only) to select all symbols that match a specific criteria (see "Selecting Symbols by Attribute Criteria" below).

In the Schematic Editor and Hierarchy Navigator, after a symbol is selected, the list box contains the assigned attributes. To list all assignable attributes, check the **List All Attributes** box. Change the value in the edit field.

In the Symbol Editor, all attributes that can be assigned to a given symbol are visible in the Attribute Editor list box when you edit a symbol .

Note:** When you select more than one symbol, attribute changes apply to all selected symbols. Also, if the values for an attribute are different for selected symbols, the value is displayed as * Mixed ****.*

***Note:** You may need to define a attribute window in the Symbol Editor before new attributes are displayed.*

Selecting Symbols by Attribute Criteria

The **Find** button brings up the **Instance Filter** dialog box. You use this dialog box to select all instances that satisfy a comparison criteria on their attributes.


1. Select the attribute to be compared to from the left box.
2. Select the comparison function (such as ==, <, or <=) from the center box.
3. Enter a value for the attributes to be compared against.

To add the selected symbol to the list instead of replacing it, unmark the **Replace Current Selection** check box.

To modify a symbol attribute:

1. Select Add: Symbol Attribute.
2. Select the symbol or symbols as described above.
3. Click on the name of the attribute you want to modify. The attribute name and its current value appear in the edit box (Figure 7).

Figure 7
Symbol Attribute Dialog Box

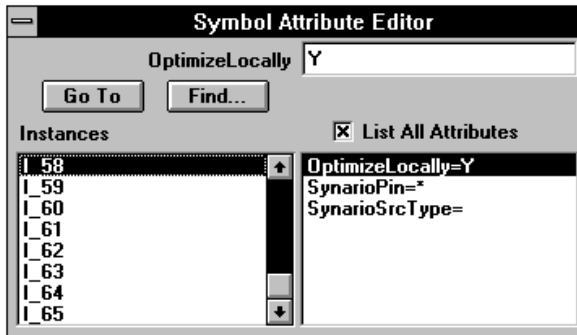

4. Edit the attribute value.

These attributes are defined in the INI Editor. Access to the definitions is through the Attribute menu of the INI Editor.

To go to a specific symbol:

1. Select a single symbol in the left list box.
2. Click the GoTo button to center the selected instance in the display window.

See Also

Add: Net Attribute

Add: Pin Attribute

Add: Attribute Window

Edit: Attribute Location

“Attributes” in the *SCS User Manual* for a detailed description of attributes.

“The Synario INI Editor” in the *SCS User Manual* for an explanation of how to modify attribute definitions and values.

Add: *Table*

Sch

Description

Adds a table of information, which is displayed graphically (that is, it has no electrical meaning). Elements in the schematic can reference values stored in these tables.


Graphical Format

A table displays rows and columns of data with lines separating the rows and columns. The first row of the table is the column labels. The height of the first row can be different from the height of the remaining rows. The text in the first row can have a different size and justification from the rest of the table, allowing column labels to be written vertically. Column labels are typically names of attributes or the value of a global constant.

The first column of the table is the row labels. The width of the first column can be different from the width of the remaining columns. The text in the first column can have a different size and justification from the rest of table. Row labels are typically instance names or reference designators of symbol instances in the schematic.

In addition, each table has an optional title written above the table. Each table has a name that identifies the table to the symbol instances.

Figure 8
Table Command Dialog Box

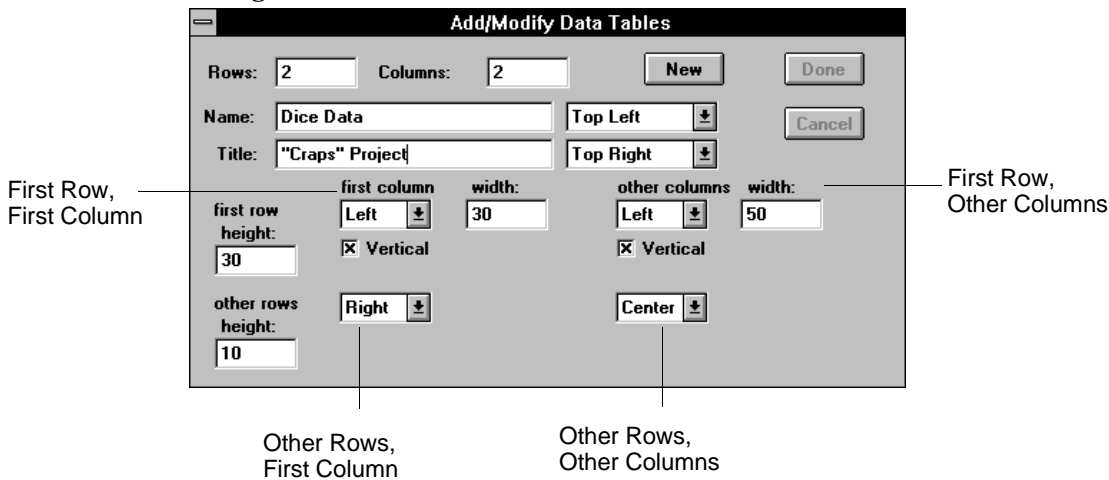

The Table command displays a dialog box as in Figure 8. This dialog box provides independent control of the following parameters:

- ◆ Number of rows
- ◆ Number of columns
- ◆ Height of first row
- ◆ Height of remaining rows
- ◆ Width of first column
- ◆ Width of remaining columns
- ◆ Table name (Identifies table to symbol instances.)
- ◆ Table title (Any text the user wants displayed at the top.)
- ◆ Justification of table name
- ◆ Justification and rotation of column labels (first row)
- ◆ Justification of row labels (first column)
- ◆ Justification of remaining data
- ◆ Justification of title

The Edit: Table Data command is used to enter the data after you have created the table.

Accessing Table Data

Derived symbol attributes can reference values stored in tables. To retrieve information from a table, you have to specify the table (T), row (R), and column (C).

Specifying Rows and Columns

There are several ways to specify R and C. The simplest method for rows is to enter the row number. A more flexible method is to request the row whose label is equal to *value*, where *value* may be specified as a string, the value of a global constant, or the value of an attribute (for example, RefDes).

The simplest method for columns is to enter the column number. A more flexible method is to request the column whose label is equal to *value*, where *value* can be the value of a string, the value of a global constant, or the value of an attribute. You can then change many references to that column by editing the single value of the global constant.

A useful way to access rows is to reference them using instance names. The row labels can correspond to instance names in a schematic. When you reference the table from a given instance, the row labels are scanned to see if any correspond to the given instance name. This lets you change the order of rows in the table without altering the data references.

Command Syntax

To access table data using derived attributes, use the following syntax:

`&table_name[row, column]`

<i>table_name</i>	The table's name spelled exactly.
<i>row</i>	Can be either a number, or = <i>value</i> , or = <i>#attr</i> , or = <i>\$const</i> . When <i>row</i> contains an equals sign (=), the table is searched for the row with a label equal to <i>value</i> or equal to the value of the attribute on the current symbol instance. Row numbers start at one. Row zero is the column label.
<i>column</i>	Can be either a number, or = <i>value</i> , or = <i>#attr</i> , or = <i>\$const</i> . When a column contains an equals sign (=), the table is searched for the column with a label equal to <i>value</i> or equal to the value of the global constant. Column numbers start at one. Column zero is the row label.

Example

The following example shows how to specify a symbol attribute to retrieve data from a table. The table Ohm contains resistor values that correspond to symbol attribute #3, whose name is Value. The resistance is therefore determined by the table entry rather than by the value attribute.

<code>&Ohm[2, 3]</code>	Gets the data from row 2 and column 3 of the table named Ohm.
<code>&Ohm[=R1, =Resistance]</code>	Gets the data from the column labeled Resistance and the row labeled R1.
<code>&Ohm[=#[RefDes], 3]</code>	Gets the data from column 3 and the row whose label matches the RefDes of the current symbol.
<code>&Ohm[=#2, \$[country]]</code>	The row whose label matches the value of attribute #2 (RefDes) of the current symbol determines which row the data is taken from. The global constant "country" determines which column to use.

Since global constants can be used anywhere for string substitution, you can simplify entry by defining the string in the preceding example as a global constant. For example, set the global constant 0 to `&Ohm[=#2, $[country]]`. Then set the Value attribute of the symbol to \$0.

Add: *Text*

Sch, Sym

Description

Adds fixed text to the drawing (as opposed to the text that appears in attribute windows).

Use

Text is used to add notes, title blocks, and other information to the symbol or schematic. Text has no electrical meaning.

The size, orientation, and justification of text is set by parameters in the Graphic Options dialog box. Eight text sizes are available (3 on UNIX). Text can be left-justified, right-justified, or centered.

The Text command operates in either the Add or Edit modes:

Add Type the desired text, then press ENTER. (Use the Graphic Options command from the Options menu to change the font size and justification before entering the text.) The text is attached to the cursor.

Click at the desired point to place the text. If you make a mistake, or decide not to place the text, click right anywhere in the window to remove the text from the cursor and reset the command.

Edit Click on an existing text string. The text is removed from the drawing and placed on the edit line where it can be modified. Justification and font size can be changed with the Graphic Options command.

When the text has been edited, press ENTER. The text is returned to the drawing in its original position. If you change your mind, click right anywhere in the Editor's window to cancel your changes and restore the previous version of the text.

The Text command remains active until you select another command.

Add:	Wire	F3	Sch
-------------	-------------	----	-----

Description

Wire is the principal command for adding wires between symbol pins. Net Name and Bus Tap can also be used to add single wire segments.

The Wire command operates in several modes. The mode is set when the first point is entered. Click right at any time to cancel the wire.

Point-to-point Mode

Point-to-point mode draws single line segments, one segment at a time.

Point-to-point is commonly used to draw multi-segment wires.

1. Click at the first point. This is the starting point for the wire. A “rubber band” line, consisting of a horizontal and a vertical segment stretches to the current mouse location.
2. Move the mouse until the segment connected to the first point has the length and orientation you want.
3. Click to fix the first segment. The line becomes solid and takes the “wire” color.
4. Repeat steps 3 to 4 to place additional wire segments.
5. Click a second time on the last point of the wire to terminate the wire. If the new segment ends on a pin, name, or other wire, the segment is automatically completed.

The Wire command remains active until you select another command. You can continue to place wires without having to reselect the Wire command.

Wires are normally constrained to the four 90° directions. Hold down SHIFT while clicking to position the next wire segment diagonally (at 45° angles).

Point-to-point is the only mode in which diagonal wires can be added.

Single-segment Mode

Single-segment mode draws just one segment, and automatically completes it.

Drag the mouse *horizontally* from one point to another, then release the mouse button. A single-wire segment is added, and the Wire command returns to its initial state.

“Z” and “C” Mode

Drag the mouse vertically or diagonally to partially automate routing the wire.

- ◆ Drag the mouse between two points that are *not* on a horizontal line. A three-segment connection appears as dotted lines. (See Figure 9.)

If you drag the mouse vertically, the segments form a “C” shape. If you drag the mouse diagonally, the segments form a “Z” shape instead.

In either case, you move the mouse to alter the length of the horizontal segments without changing their spacing. When the lines are where you want them, click to set the wire.

- ◆ If you drag *vertically* and can’t properly route the wire using the initial “C” shape, click right to cancel the Wire command.
- ◆ If you drag *horizontally* and can’t properly route the wire using the initial “Z” shape, click right. The pattern changes to two vertical lines, with a horizontal line connecting them (a reverse “Z” shape). (See Figure 9.)


Move the mouse to change the length of the vertical segments without changing their spacing.

Move the mouse above or below the ends of the vertical segments to change the connection to a vertical C shape. Click left to create a wire.

- ◆ If you still can’t route the wire properly, or you decide not to place the wire, click right to cancel the wire and reset the Wire command.

Crossing wires are not normally connected. To form a four-way connection, start with a single wire, then add two additional wires at right angles to the first wire. This type of connection is automatically marked with a connect dot to distinguish it from unconnected crossing wires.

Figure 9
Z and C Wire Connections

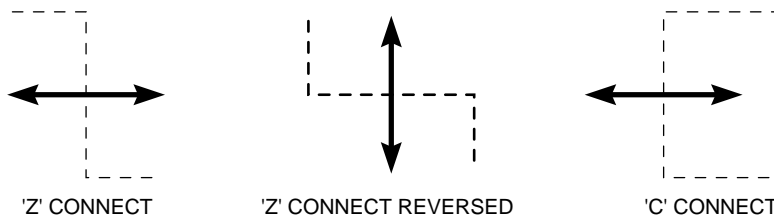

1822-1

See Also

Add: Bus Tap

Add: Net Name

Edit: *Attribute Location*

Sch

Description

Moves attribute windows on an instance-by-instance basis.

Use

1. Select the Attribute Location command. You are prompted to select a symbol.
2. Select a symbol instance whose attribute windows you want to modify. The Attribute Windows dialog box (Figure 10) displays the attributes that are or can be displayed on the selected instance.

Figure 10

Attribute Windows Dialog Box in Schematic Editor



For an attribute value to appear in the list box, the attribute must have both an attribute window number and an attribute value assigned to it. (Attribute window numbers are assigned with the INI Editor.)

3. Click on the attribute whose window you want to modify.
There are two buttons above the list of attributes. If the attribute you select is already displayed, these buttons will be labeled Move and Restore. If the attribute you select is not displayed, these buttons will be labeled Add and Delete.

4. Click on the appropriate button:

Move	Repositions the selected attribute, attaching it to the cursor. Click where you want to reposition it. The attribute is displayed at the new location using the current graphic options for size, orientation and justification.
Restore	Restores an attribute displayed on the selected instance to its original location on the symbol definition.
Add	Attaches a selected attribute that is not displayed on the target instance to the cursor. Click where you want to position it.
Delete	Deletes the selected attribute.

See Also

Refer to “Attributes” in the *SCS User Manual* for a more detailed explanation of attributes and attribute windows.

Add: Attribute

Add: Attribute Window

Edit: Attribute Location

Edit: *Change Type*

Sym

Description


Changes the symbol type from within the Symbol Editor.

Use

Change Symbol Type displays a dialog box like the one in Figure 11. Click the radio button corresponding to the desired symbol type, then click OK. This symbol is immediately changed to the new type.

You cannot reverse Change Symbol Type with Undo. You must apply the command a second time to return the symbol to its original type.

Figure 11
Change Symbol Type Dialog Box

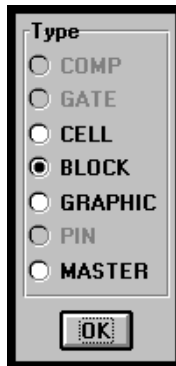

Edit: Constants

Nav

Description

Changes global constants in the Hierarchy Navigator.


Use

Use the following procedure to temporarily change the value of a global constant:

1. Select the Constants command. A list box is displayed as shown in Figure 12.
2. Click on the constant you want. The selected constant is highlighted and its value is displayed on the edit line.
3. Change the value. Press ENTER to accept the new value.

These changes last only for the current session. Use the Global Attributes dialog box in the INI Editor to make permanent changes.

Figure 12
Global Constants List Box

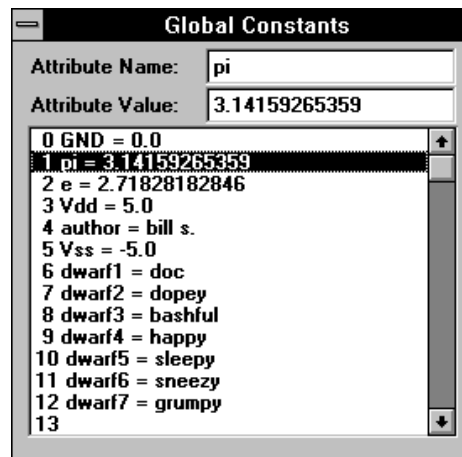

Edit:	<i>Copy</i>	CTRL+C	Sch, Sym
--------------	--------------------	--------	----------

Description

Copies items from the symbol or schematic to the Clipboard. The items can then be pasted in another symbol or schematic. The copied item is not deleted from the drawing.

Use

The Copy command has three modes: Single-Item, Box-Select, and Group-Select.

Single-Item

Single-item mode copies one item at a time. Click on the desired item. Net names and attributes are copied, as well as the physical representation of wires and symbols. Instance names are not copied, because each instance must be unique.

If the cursor points at more than one item when you click, the Editor decides which item is selected according to a priority list. This priority is outlined in the description of Delete.

Box-Select

In box-select mode, the items contained in a rectangular area are copied. Drag the mouse from one corner of the desired area to the diagonally opposite corner and release the button.

All items *totally enclosed* by the box are copied to the Clipboard. Portions of wire segments enclosed by the box are also copied. Net names and attributes are copied, as well as the physical representation of wires and symbols. Instance names are not copied, because each instance must be unique.

The Copy command fails if wires cross on the boundary of the area. See Delete for a discussion of this restriction.

Group-Select

The group-select mode combines single-item and box mode to permit copying arbitrary groups of items.

To group-select items:

1. Press and hold SHIFT before selecting the first item or area.
2. Select one or more items, in either single-item or group mode. As each item or area is selected, it is redrawn in the phantom color. You can continue to select items, in either mode, as long as you hold down SHIFT.
3. To complete the group, click right anywhere in the window after making the last selection. Or release SHIFT *before* selecting the last item or area. All selected items are then copied from the drawing to the Clipboard. The relative position of the items in the group is maintained. It is therefore not possible to group items from different sheets.

Note: *Schematic items cannot be copied to symbol drawings, and vice versa.*

See Also

Edit: Duplicate

Edit: Delete

Edit: Paste

Edit: *Copy Image*

Sch, Sym, Nav

Description

Copies a rectangular portion of a schematic or symbol to the Clipboard. You can then paste the Clipboard contents into another application, such as a word processor or DTP program.

If the ClipboardFormat variable in the INI file is set to Yes (the default value), the image is in Windows MetaFile (**.wmf**) format. If this variable is set to No, the image is in bitmap (**.bmp**) format. This variable cannot be accessed from the INI Editor; you must modify it manually.

Use

Select the Copy Image Command. You are prompted for one corner of the rectangle.

- ◆ Click at any corner. Move the mouse to the diagonally opposite corner, then click a second time to fix the rectangle. Its contents are copied to the Clipboard. *Or ...*
- ◆ Point the mouse cursor at any corner, then drag the mouse to outline the rectangle in a single motion. When you release the button, the contents of the rectangle are copied to the Clipboard.

The Copy Image command remains in effect until you select another command. If you make a mistake or change your mind, you can select a different area without having to reselect the command.

See Also

File: Print Image

Edit:	<i>Cut</i>	CTRL+X	Sch, Sym
--------------	-------------------	--------	----------

Description

Removes items (wires, graphics, symbols, or text) from the schematic or symbol and places them on the Clipboard. The previous contents of the Clipboard are erased. The items can then be pasted from the Clipboard into another schematic or symbol.

Cut operates in the same three modes as Copy. See the description of Copy for a full explanation.

See Also

Edit: Copy

Edit: Delete

Edit: Paste

Edit:	Delete	F5	Sch, Sym
--------------	---------------	----	----------

Description

Deletes items from the schematic or symbol drawing. Deleted items *are not* copied to the Clipboard and the Clipboard's contents are not altered.

Use

Delete operates in the single-item mode or box-select mode.

Single-Item Mode

Click on any item to delete it. If the cursor points at more than one item, the item nearest the top of the following lists is deleted. Click on the indicated point or item to delete it unambiguously.

Schematic Editor Selection Priority

Net Names	Click on the connect point.
Wire Segments	Click anywhere on the wire.
Symbols	Click within the symbol extent box.
Graphics	Click on the graphic element.
Text	Click on the text.

Symbol Editor Selection Priority

Symbol Pins	Click on the pin.
Graphics	Click on the graphic element.
Text	Click on the text.

Attribute Windows Click within the window text area.

If you click at the point where a net flag is attached to a wire, the net flag is deleted first. A second click removes the wire segment. To delete a wire segment and leave the net name, you must click on a section of wire away from the net name.

Box-Select Mode

Drag the mouse to form a rectangle. All *totally enclosed* items are deleted when you release the mouse button. Portions of wire segments enclosed by the rectangle are also deleted.


Crossing Wires Limitation

If a corner of the box coincides with the crossing point of a vertical and a horizontal wire, deleting the two partial segments would leave the remaining segments ending on the original crossing point, and thus would be connected.

A similar condition occurs when diagonal wires cross on the perimeter of the rectangle. (See Figure 13.) Deleting the wire segments inside the box would leave the remaining wires connected.

If the nets have different names, either of the above conditions is an error. If one or both nets are unnamed, the results are logical, but probably not what you intended. The Editor therefore flags an error and does not allow the deletion.

Figure 13
Illegal Delete Selections

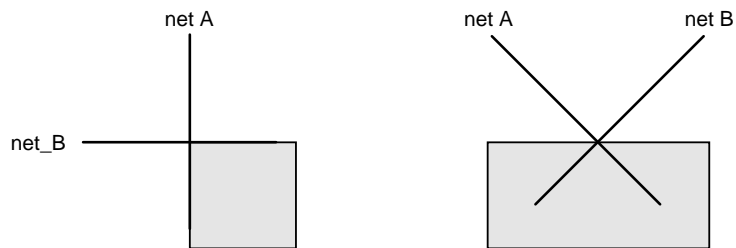

1821-1

Edit:	<i>Drag</i>	F8	Sch, Sym
--------------	--------------------	----	----------

Description

Moves portions of objects while the rest of the object remains in place. The effect is to “stretch” or reposition the item, altering its basic shape or direction. Drag works differently in the Symbol and Schematic Editors.

Use in the Symbol Editor

The Drag command is used principally to resize or reposition a graphic element. Click on (or near) an item to select it. Drag works only in single-item mode and only on the following graphic elements:

Lines	Moves the end nearest the point at which the line was selected.
Rectangles	If the selection point is near a corner, the rectangle can be stretched by moving the corner. If the point is closer to the center of a side, the rectangle can be stretched by moving the side.
Circles	The radius of the circle can be changed; the center remains fixed.
Arcs	The end of the arc nearest the point where the arc is selected can be moved to increase or decrease the angle of the arc. The center and radius of the arc remain fixed.

Use in the Schematic Editor

The Drag command moves one or more elements while keeping them connected to the rest of the circuit. There are two modes, drag-point and drag-box.

Drag-Point

Click on any point in the schematic. There are three possibilities:

- ◆ If the point is within the extent box of a symbol, the command switches to the drag-box mode, with the extent box of the symbol as the area to be dragged.
- ◆ If the point is on a wire or net name, the name and/or any wires connected to the point are highlighted. The connections are shown as moving lines connected to the cursor.
- ◆ If the point is on a graphic element, the drag command operates the same way it does in the Symbol Editor.

Drag the connection to the desired location and click. You cannot, in general, move the cursor to a point that would create a broken or illegal wire pattern. If the connections do not violate any interconnection constraints, the connections are made.

The command fails if a new connection violates a layout rule. If this occurs, the Editor returns the drawing to its original state and you can try again. See the Delete command for a discussion of layout rules.

Note: *Clicking on or near a pin may disconnect the wire from the pin, or connect two wires you didn't intend to connect. Select Undo (or press F9) to restore the drawing. Then try clicking further away from the symbol.*

Drag-Box

Drag the mouse to define a rectangular area, or click within the extent box of a symbol. In the latter case, the extent box defines the rectangular area selected.

All items within the rectangle, including partially-enclosed wires, are highlighted. Symbols must be totally enclosed by the rectangle in order to be included.

The highlighted items are attached to the cursor. Any connections that cross the border of the area are kept. As the cursor is moved, these connections are maintained with three-segment wires. The cursor cannot be moved to a position that would force these connections to be broken. Click to reposition the items and make the new connections.

The command can fail if a new connection violates a layout rule. If this occurs, the Editor returns the drawing to its original state and you can try again. See the Delete command for a discussion of layout rules.

Note: *Clicking on a wire selects the entire wire segment. Dragging a box around part of a wire selects only that section of the wire. If you want to move a complete wire segment, either click on the segment, or drag a box around the entire segment.*

Edit:	<i>Duplicate</i>	F6	Sch, Sym
--------------	-------------------------	----	----------

Description

The Duplicate command lets you copy one or more elements, then place them at different locations within the same symbol or schematic. You can place the duplicated item(s) as many times as you want until you select another command.

Net names and attributes are copied as well as the physical representation of wires and symbols. Instance names are not copied, because each instance must be unique.

Use

The Duplicate command can be used in three modes:

Single-Item Mode

Single-item mode duplicates one item at a time. Click on the desired item. A copy is attached to the cursor. Place the item by clicking at the desired position.

A priority system determines which item is selected if the cursor points at two or more items when the mouse is clicked. The priority order is outlined in the description of the Delete command.

Box-Select Mode

Box-select mode copies all items within a rectangular area. Drag the mouse to define the area. When the mouse button is released, all items *totally enclosed* by the rectangle are selected. Portions of wire segments enclosed by the rectangle are also selected. Net names and attributes are copied as well as the physical representation of wires and symbols. Instance names are not copied because each instance must be unique.

The selected items are attached to the cursor. Click to place them at the desired position. The rectangle outlining the selected items must be entirely within the boundaries of the symbol or schematic sheet when you click, or the command will fail. In this case, the group remains attached to the cursor and you can try again.

Duplicate also fails if a crossing point of wires is on the boundary of the area. See Delete for a discussion of this restriction. The command can partially fail if a rules violation occurs for one or more items. Everything is duplicated *except* the item(s) that violate the rules. Use the Undo command to erase the duplicated items and restore the drawing to its original state.

Group-Select Mode

The group-select mode combines the two other modes to move arbitrary collections of items.

To group-select items:

1. Press SHIFT before selecting the first item or area.
2. Select one or more items and/or areas, keeping SHIFT depressed. As each item or area is selected, it is redrawn in the phantom color to indicate that it has been selected.
3. To complete the group, click right anywhere in the window. Or, release SHIFT *before* selecting the last item or area. The group of items is removed from the drawing and attached to the cursor. The last point clicked on becomes the group's origin when it is placed.
4. Click to place the group at the desired position. The group has the same placement restrictions as described for box-select mode.

The relative position of the items is maintained. It is therefore not possible to group items from different sheets.

If you make a mistake, or decide not to place the selected items, click right anywhere in the window to cancel the selection and restart the Duplicate command.

See Also

Edit: Copy

Edit: Delete

Edit:	<i>Move</i>	F7	Sch, Sym
--------------	--------------------	----	----------

Description

Moves one or more elements to a different location within the symbol or schematic.

Use

Move has three modes:

- ◆ Single-Item Mode
- ◆ Box-Select Mode
- ◆ Group-Select Mode

Operation is identical to the Duplicate command, except the selected objects are removed from the drawing rather than being copied. And, unlike Duplicate, objects can be placed only once. Since the original object is being repositioned (not just duplicated), its instance name and all other attributes are moved with it.

Refer to the Duplicate command for details of the operating modes.

See Also

Edit: Duplicate

Edit: ***Net Attribute*** CTRL+A Nav, Sch (Add)

Description

Refer to the Attribute command under the Add menu for a full description.

Edit:	<i>Paste</i>	CTRL+V	Sch, Sym
--------------	---------------------	--------	----------

Description

Pastes the contents of the Clipboard into the schematic or symbol.

Use

Selecting the Paste command attaches the Clipboard item(s) to the cursor. They are placed in the usual way, by clicking at the desired position. The Rotate and Mirror commands can be used to rotate and/or mirror the item before placement.

Paste fails if any of the items extend beyond the border of the sheet or symbol. In this case, the group remains attached to the cursor and you can try again.

Paste can partially fail if a rules violation occurs for one or more items. Everything is pasted *except* the item(s) that violate the rules. Use the Undo command to erase the pasted items and restore the drawing to its original state.

The Paste command does not clear the Clipboard. You can use Paste repeatedly to add as many copies as you want. The Clipboard is not cleared until the next Cut or Copy command.

Note: *Schematic and symbol items are not compatible; you cannot paste schematic items into a symbol, or vice versa. However, you can open more than one Schematic Editor or Symbol Editor session, and paste items copied or cut from one session into the other.*

See Also

Edit: Mirror

Edit: Rotate

Edit: ***Pin Attribute*** CTRL+A Nav, Sch (Add)

Description

Refer to the Attribute command under the Add menu for a full description.

Edit:	<i>Redo</i>	SHIFT+F9	Sch, Sym
--------------	--------------------	----------	----------

Description

Reverses changes caused by the Undo command.

Use

Redo can move forward, recreating the undone events until it reaches the end of the Undo log (the point when the first Undo in the sequence was issued).

The Undo and Redo logs are discarded when

- ◆ The current version of a symbol or schematic is saved. *Or ...*
- ◆ The sheet size is changed. *Or ...*
- ◆ The symbol work space expanded.

Once the logs are discarded, Redo cannot recover undone commands.

Redo does not work with the Sheet Setup command. That is, if Undo is used to restore the original sheet size after changing the sheet size, Redo cannot return the drawing to the changed sheet size.

Undo and Redo do not work with View commands, since those commands do not change the symbol or schematic.

See Also

Edit: Undo

Edit: *Schematic*

Sym, Nav

Description

Use the Schematic command start the Schematic Editor while you're working in the Symbol Editor or Hierarchy Navigator. You can modify the schematic for the symbol being edited or the hierarchical design you're analyzing, then return to the Symbol Editor or Hierarchy Navigator.

If you use the Schematic Editor to change a schematic currently being analyzed in the Hierarchy Navigator, the design being viewed is automatically rebuilt the next time you execute a Hierarchy Navigator command.

See Also

Edit: Symbol

Edit: *Set Origin*

Sym

Description

Symbols are placed on a schematic relative to a fixed point on (or near) the symbol called the *origin*. Set Origin positions (or repositions) the origin on a symbol.

Use

When a symbol is created, it has no origin. When a symbol with no origin is saved for the first time, the origin defaults to the upper-left corner of the symbol.

To set (or change) the origin, select the Set Origin command and click at the desired location. The location of the assigned origin is marked with long pin-color tick marks along the border of the symbol window.

Master Symbols

The position of the origin determines the location of a Master symbol on the schematic. For example, if a Master symbol's origin is at the lower-right corner, that Master symbol will automatically be positioned at the lower-right corner of the schematic sheet.

CAUTION: The Origin is not part of the symbol. If you reposition a symbol in the Symbol Editor, the Origin does not move. If you move the symbol, you must also reposition the Origin.

Edit: *Symbol*

Sch, Nav

Description

Use the Symbol command to run the Symbol Editor while working in the Hierarchy Navigator or Schematic Editor.

Use

The Symbol command is run as follows:

1. Choose the Symbol command. You are prompted to select a symbol.
2. Click inside the desired symbol. The Symbol Editor is run on that symbol.

If you use the Symbol Editor to change a symbol from the Hierarchy Navigator, the hierarchical design currently being viewed is automatically rebuilt the next time you execute a Hierarchy Navigator command.

You can also edit a Symbol by calling the Symbol Editor directly. Select Symbol Editor from the Window menu of the Synario Project Navigator (or from the SCS Executive on UNIX/Motif systems).

See Also

Edit: Schematic

Edit: ***Symbol Attribute*** CTRL+A Nav, Sch (Add)

Description

Refer to the Attribute command under the Add menu for a full description.

Edit: *Table Data*

Sch

Description

Enters or modifies data in tables. A table must first have been created with the Table command.

Use

Use the following procedure to modify existing data or enter new data:

1. Select the Table Data command. You are prompted to select an entry from an existing table.
2. Click on a table entry. The selected element in the table is highlighted.
3. Type the required data, then press ENTER. The next element in the table is highlighted. Enter data for that element, press ENTER, and continue until you've entered all the data.

The data entered can be any keyboard character except ENTER. ENTER is used to terminate data entry.

See Also

Add: Table

The sections on derived attributes in "Attributes" in the *SCS User Manual*.

Edit:	<i>Undo</i>	F9	Sch, Sym
--------------	--------------------	----	----------

Description

Reverses the editing process.

Use

Undo backs up one edit each time it is issued. Undo can reverse all changes since the file was opened or last saved. Saving a file, or changing the sheet size or expanding the symbol work space discards the record of the preceding changes, and they cannot be undone or redone.

Undo operates on all commands that change a schematic or symbol. It does not reverse the View or Sheet Setup commands, since these do not change the drawing. In the Symbol Editor, Undo cannot reverse a change in symbol type; you must use the Change Type command.

If you Undo too far, you can recover with Redo.

See Also

Edit: Redo

File: *Back Annotate*

Nav


Description

Back annotates attribute values to the Hierarchy Navigator. Its typical use in IC design is to add the loading parasitics determined during the layout process. This allows the schematic to reflect the physical realization of the design. (Refer to "PCB Back Annotation Interfaces" in the *SCS User Manual* for PCB back annotation.)

Use**To back annotate attribute values:**

1. Select the Back Annotate command. A dialog box similar to Figure 16 appears.
2. Enter the filename (default extension .atr) containing the attribute information to be back annotated.
3. Click on OK. The attribute information in the back annotation file is read into the Hierarchy Navigator.
4. If you want to record the back annotated changes, you must use the Save command to save the attribute modifications to the Hierarchy Navigator .tre file.

Figure 16
Back Annotate Dialog Box

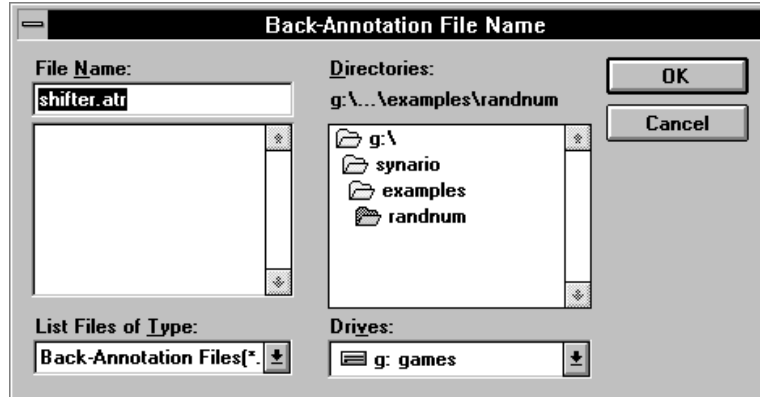

The back annotation file (.atr) is typically created as ASCII output from another program, but can also be prepared manually with a text editor. Each line in the file contains a command that adds or changes an attribute value for a specific instance of a net, symbol, or symbol pin.

Each line in the attribute-update file consists of four fields separated by a space. The last field, the attribute value, can contain embedded spaces.

```
attr_type attr_name inst_name attr_value
```

The following sections describe the four fields.

Attribute Type

The first field is a single letter indicating the type of attribute described by the remainder of the line. The choices are:

I	Symbol attribute, applied to a symbol instance
N	Net attribute, applied to a signal
P	Pin attribute, applied to the instance of a symbol pin

Attribute Name

The second field is the attribute's name. The current attribute names are listed in the Symbol Attributes, Pin Attributes, and Net Attributes sections of the INI Editor. Attribute names must be listed in these sections before they can be used in the attribute update file.

An attribute number can be used in place of the attribute's name.

Instance Name

The third field specifies the name of the specific instance of a net, symbol, or symbol pin that receives the attribute.

The hierarchical instance name of a symbol and the schematic it represents are equivalent. The name is formed by concatenating the local instance name of the symbol with the hierarchical instance name of the schematic in which the symbol appears. The names are delimited by periods (.).

Many nets appear in more than one block. When naming a net, the instance name of the highest-level schematic in which the net appears is used. A dash (-), followed by the local name of the net in that schematic, is added to the instance name of the schematic to form the hierarchical net name.

If the net is global or appears in the root schematic, the net name is created by preceding its local net name with a period and dash (.-). For example, net DATA0 referenced in the top level schematic is referred to as .-DATA0.

The pin instances are named by appending a dash (-) and the pin name to the symbol instance name in which the pin appears.

Attribute Value

The last field of the line contains the attribute value. The Hierarchy Navigator does not check this value for correctness.

Sample Attribute Update File

In the following example, the root schematic contains symbol instance AA1. The schematic represented by this symbol instance contains symbol instance BB1. The following entries in the `.atr` file set the Value attribute of symbol AA1.BB1 and the Load attributes of its input pins:

```
I Value .AA1.BB1      3456
P Load  .AA1.BB1-IN1  2.2
P Load  .AA1.BB1-IN2  2.4
```

The following entries set the capacitance attribute of the global net CLOCK, the net XX in the root schematic, and YY in the schematic instance.AA1:

```
N Cap  .-CLOCK  0.5
N Cap  .-XX     0.6
N Cap  .AA1-YY  0.7
```

The file format is the same as that of a Hierarchy Navigator `.tre` file.

File: *Check; Consistency Check*

Sym, Sch

Description

These commands locate errors (and potential errors) in schematics and symbols.

Use

The error report is written to the file *design.err* and displayed in a pop-up text window. Click on an error in the window to display the sheet (or section of the symbol) with that error and highlight the error.

Schematic Errors (Consistency Check Command)

The Consistency Check command warns about the following potential schematic errors:

- ◆ Bus taps should be named.
- ◆ Isolated net names are not permitted.
- ◆ If the Show Symbol Pins option is enabled, each pin on symbols in this schematic should be connected to a net (unless the pin has its OpenOK attribute set to Yes).
- ◆ If the Mark Open Ends option is enabled, there should not be any unconnected wire ends.
- ◆ Unordered buses must not be connected to a bus pin on a symbol.
- ◆ Unordered buses must not be marked with I/O markers.
- ◆ Nets should not be marked with more than one I/O marker.
- ◆ A bus tap and its bus should not both be marked with an I/O marker.

If there is a Block symbol for this schematic, the Consistency Check command marks the following as errors:

- ◆ Each pin must have a corresponding net with an I/O marker whose direction matches the Polarity of the pin.
- ◆ Each net marked with an I/O marker must correspond to a pin.

Symbol Errors (Check Command)

The Check command warns about the following potential symbol errors:

- ◆ Block symbols should have a schematic with the same name in the symbol's directory.
- ◆ Symbols other than Blocks are usually primitives and should not have a schematic of the same name.

- ◆ Each pin in a Block or Cell should have a Name. Each pin in a Gate or Component should have a PinNumber.
- ◆ Pins in Component and Pin symbols should have only one PinNumber.
- ◆ Pins on non-Block symbols should specify Load or Drive. Input pins should have Load but not Drive. Output pins should have Drive, but not Load, unless the pin is tristate. In that case it should have a Load that represents the load in the High-Z state. Bidirectional pins should have both Load and Drive.

The Check command marks the following as symbol errors:

- ◆ Every pin in a Gate must appear in the same number of sections. Therefore, all PinNumber attributes must have the same number of pin numbers.
- ◆ Pins in the same Gate group must have the same Polarity, Load and Drive.

File: ***Exit***

Sch, Sym, Nav

Description

Exits the program.

Use

Exit checks the drawing (or Hierarchy Navigator database) for changes since it was last saved. If the drawing was modified, Exit offers three options:

- | | |
|----------------|--|
| Save | If a file for this drawing (or database) already exists, the drawing is saved to this file. If there is no file, a dialog box prompts you for a file name. The .sym file extension for the Symbol Editor, .sch for the Schematic Editor, and .tre for the Hierarchy Navigator are automatically supplied. (If you specify an extension, it's ignored.) The drawing (or database) is then saved in the specified file and the program is exited. |
| Discard | Discards any changes made since the drawing was last saved and exits. |
| Cancel | Returns to the current editing session. |

File: ***Expand***

Sym

Description

Increases the work area for the symbol.

Use

The initial work area is 40 x 40 Primary grids. After a symbol has been created, the Symbol Editor provides a work area that is approximately twice the height and width of the symbol.

When a symbol grows too large to fit, use Expand to enlarge the work area. Its initial use increases the size to 80 x 80 Primary grids. Subsequent use adds increments of 20 grids, up to a maximum of 400 x 400 grids.

The extra area is added at the right and bottom of the symbol. If more space is needed on the left or top, use the Move command to shift the entire symbol.

CAUTION: The Origin is not part of the symbol. If you move the symbol, the Origin does not move with it. Be sure to reposition the Origin if you move the symbol.

File: ***Matching Symbol***

Sch

Description

Creates a symbol file representing the currently loaded schematic.

Use

File creation is automatic. The **.sym** file is given the base name of the schematic file currently loaded. The symbol's pins are given the names of the I/O markers, with the appropriate directions (in, out, bidirectional).

Once the symbol has been created, the Add/Symbol command can be used to place it in another schematic. You should not place a symbol representing a schematic *within* that schematic, as it would create an unresolvable self-reference.

See Also

Add: New Block Symbol

File: New

Sch, Sym

Description

Closes the current drawing and starts a new drawing without exiting.

Use

New checks the drawing for changes since it was last saved. If the drawing was modified, New offers three options:

Save If a file for this drawing (or database) already exists, the drawing is saved to this file. If there is no file, a dialog box prompts you for a file name. The **.sym** file extension for the Symbol Editor, **.sch** for the Schematic Editor, and **.tre** for the Hierarchy Navigator are automatically supplied. (If you specify an extension, it's ignored.) The drawing (or database) is then saved in the specified file.

New then clears the current drawing from the window and starts a new schematic or symbol. The new drawing is untitled until you save it.

Discard Discards any changes made since the drawing was last saved, clears the current drawing from the window, and starts a new schematic or symbol. The new drawing is untitled until you save it.

Cancel Returns to the current drawing.

File: *Open*

Sch, Sym, Nav

Description

Closes the current drawing and loads a different drawing or design, without exiting.

Use

Open checks the current drawing (or Hierarchy Navigator database) for changes since it was last saved. If the drawing was modified, Open offers three options:

- | | |
|----------------|--|
| Save | If a file for this drawing (or database) already exists, the drawing is saved to this file. If there is no file, a dialog box prompts you for a file name. The .sym file extension for the Symbol Editor, .sch for the Schematic Editor, and .tre for the Hierarchy Navigator are automatically supplied. (If you specify an extension, it's ignored.) The drawing (or database) is then saved in the specified file. |
| Discard | Discards any changes made to the drawing or design since the last Save. |
| Cancel | Cancel the Open command and returns to the current drawing or design. |

Once changes to the current file have been saved or discarded, the Open command displays a dialog box with a list of the drawings or designs in the current directory. The list displays only those files that are of the correct type for the application. Click on a file from the list, then click on OK. (Or, just double-click on the file's name.) You can also type a name in the File Name edit box and click on OK .

If the file you want to edit is not located in the current directory, you can change directories in the Directories edit box. Or, type the file's full path name in File Name edit box and click on OK.

File: *Print*

Sch, Sym, Nav

Description

Produces a hard copy of a schematic or symbol.

Use

- ◆ **Symbol Editor** — Print immediately sends an image of the symbol to the printer.
- ◆ **Schematic Editor** — Print checks for multiple sheets. If there is only one sheet, that sheet is printed.
If the schematic has more than one sheet, the sheet-selector dialog box is displayed. Select a sheet by clicking on the corresponding line, then clicking on the Print button. Click on the All Sheets button to print all sheets.
- ◆ **Hierarchy Navigator** — The sheet-selector dialog box is always displayed. Click on All Sheets to print all the sheets. Or highlight a sheet from the list box and click on This Sheet to print just that sheet.
Click on **All Instances** to print an image of every instance in the Hierarchy.

CAUTION *The All Instances option prints each device instance on a separate page. This can be a time- and paper-consuming print job: be sure you want to print all of the instances before selecting this option.*

See Also

File: Print Image

File: Print Setup

File: ***Print Image***

Sch, Sym, Nav

Description

Prints a rectangular portion of the current drawing.

Use

Drag the mouse from one corner of the area you want to print to the opposite corner. A dotted line outlines the area. This area is sent to the printer when you release the mouse button.

If the area you outline is vertically oriented (that is, it's taller than it is wide), you might want to use the Print Setup dialog box to set the paper orientation to Portrait. The image will then fill the paper.

See Also

File: Print

File: Print Setup

File: ***Print Setup***

Sym, Sch, Nav

Description

Calls the Windows function that sets print options.

Use

The most commonly used option is Orientation. Most text documents are printed with the long edge of the paper vertical (portrait orientation). Most schematics and symbols are printed with the long edge horizontal (landscape orientation).

The default setting for Synario is Landscape, and this is the orientation you would use for full schematics. However, if you are printing only a selected area from a schematic, and that area is taller than it is wide, select Portrait Orientation before printing. The selected area will then fill the sheet.

The other options (such as file type and paper tray) vary with the printer. Refer to your printer's manual for information on these options.

See Also

File: Print

File: Print Image

File: ***Resequence Sheets***

Sch

Description

Renumbers all sheets in the schematic sequentially beginning at 1 according to their current order (collapsing any gaps in numbering).

Use

To resequence sheets in your schematic, choose File: Resequence Sheets.

To change the order of the sheets, change the numbers assigned in File: Sheet Setup.

See Also

File: Sheet Setup

File: *Restart*

Nav

Description

Initiates a forced rebuild of the current design tree loaded in the Hierarchy Navigator.

Use

Use Restart if you used the Symbol Editor or Schematic Editor to modify the design while it was loaded in the Hierarchy Navigator. Rebuilding the design incorporates the new symbols and new schematics in the Hierarchy Navigator's design database.

There is no need to use Restart before running a netlister (or other process). The Hierarchy Navigator automatically rebuilds the design before calling the process.

The Restart command is also used to incorporate back annotation data. If you had a design loaded in the Hierarchy Navigator and either modified a back annotation file or created a completely new back annotation file, you could incorporate the new data by executing the Restart command.

File: Save

Sch, Sym, Nav

Description

Saves the current work session in the existing file. In the Symbol and Schematic Editors, the items saved consist of wires, symbols, attributes, or graphic material added to the drawing. In the Hierarchy Navigator, they consist of the context and assigned attributes of the navigation.

Use in the Schematic and Symbol Editors

Save checks for an existing file. If the file exists, the drawing is updated and saved. If no file had been specified (as when saving a new drawing), you are prompted for a file name.

The Schematic Editor automatically discards any blank sheets when a Save, Save As, or Exit is performed.

Note: *Whenever you save a symbol or schematic, its file is fully updated and the log file containing the previous series of editing changes is discarded. You cannot, therefore, undo or redo any of those changes. Do not save a file if there are still changes you wish to undo or redo.*

Use in the Hierarchy Navigator

Save saves the display context for the schematics being viewed. This includes such items as marked nets, the hierarchy level being viewed, and the image magnification. Save also saves any attributes added to the hierarchy since the beginning of the work session.

When the Hierarchy Navigator is started, it requires the name of the file containing the root (top-level) schematic. The Save command derives the save file name by replacing the `.sch` extension with `.tre`. Subsequent Save commands store changes in the `.tre` file.

See Also

File: Save As

File: *Sheet; Sheet Setup*

Sch, Nav

Description

The Schematic Editor can create multiple-sheet drawings. It can also display several views of the same sheet. The Sheet Setup command controls these functions. In the Hierarchy Navigator, this command is called Sheet, and it works almost identically (see the end of this reference section).

The Sheet Setup command creates a new window for each sheet displayed. Each new window is opened on top of the previous with enough offset so that some of the previous window can be seen. You can bring any sheet to the front by clicking on the visible part of its border.


Up to three views of a sheet can be opened. This permits working with a combination of an overview and two detail views of the drawing. Up to eight windows can be open at one time.

A window that is no longer needed can be closed. When only one window is left, it is enlarged to fill the main window. The title bar and border are also removed.

Use in the Schematic Editor

The Sheet Setup command displays a dialog box with a list of the existing sheets. Click on the desired sheet or enter a sheet number in the edit box, then click on one of the buttons (Figure 17).


Figure 17
Select Sheet Dialog Box

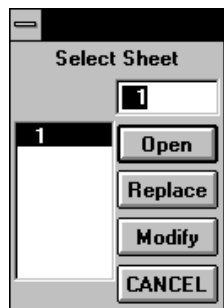

- | | |
|----------------|--|
| Open | Opens the selected sheet. The sheet being edited remains open. |
| Replace | Closes the sheet you were previously editing, then opens the selected sheet. |

Modify	Allows you to modify the sheet size and sheet number. Modify displays a list box containing the sheets in the current schematic, as shown in Figure 18. To change the sheet size, click on the new size, then click on the OK button. (Only sheet sizes large enough to accommodate the schematic data are listed.) To change the sheet number, type the new number in the edit field and click on the OK button. The maximum sheet size is 4095 x 4095 Primary grid units.
Cancel	Exits the Sheet Setup command and returns to the drawing you were editing.

Figure 18
Modify Sheet Dialog Box

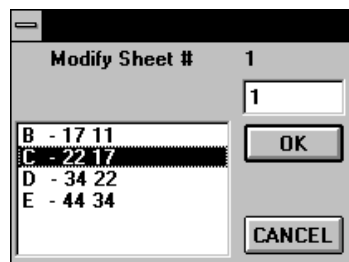

Undo returns the sheet to the previous state and clears the Undo buffer. Redo is therefore not available after Undoing a change in sheet size.

Selecting and Adding Sheets

To select a sheet, click on its number in the list box. To add a new sheet, type a number for the sheet in the edit box and press ENTER. You can enter any number, even one that is not the next number in the current sequence.

When the desired sheet has been selected, click on Open or Replace. If the designated sheet does not exist, it is created using the default sheet size.

The Schematic Editor automatically deletes any blank sheets when the Save, Save As, or Exit commands are executed.

Use in the Hierarchy Navigator

The Hierarchy Navigator can view the sheets of a multiple-sheet schematic. The Sheet Setup command in the Hierarchy Navigator works identically to the command in the Schematic Editor, except that you cannot create new sheets, or modify sheet sizes or numbers.

File: *Statistics*

Sch, Nav

Description

Displays the amount of memory used by the Schematic Editor or Hierarchy Navigator. The report appears in a pop-up text window. This command has different displays in the Schematic Editor and Hierarchy Navigator.

Use in the Schematic Editor

The Schematic Editor report lists each type of element in the schematic database. In most cases, the report includes the number of elements consumed, the number available, and the percentage of the block that has been consumed.

Attributes are an exception, because they're stored as variable-length records. The number of bytes consumed is shown.

On a multiple-sheet schematic, the statistics for each sheet are reported separately. The sheet numbers are at the extreme right of the line; you might need to enlarge the window to see them.

Use in the Hierarchy Navigator

The Hierarchy Navigator report lists the number of each of the following found in the design:

Types of symbols	The number of distinct symbols. It is equal to the sum of primitive cells and hierarchical blocks.
Primitive cells	The number of distinct symbols in the lowest hierarchical level.
Hierarchical blocks	The number of different non-primitive symbols.
Instances	The total number of symbol instances.
Instance pins	The total number of pin instances.
Primitive instances	The total number of symbol instances in the lowest hierarchical level.
Primitive pins	The total number of pin instances in the lowest hierarchical level.
Nets connected	The total number of nets.

This information gives a rough indication of the size of your design.

Record Types

The report is followed by a list of ten types of records used to store information. Each record type is followed by a measure of the capacity consumed. The following record types are fixed-length and are reported as number consumed, number available, and percentage of the block that has been consumed:

- ◆ Definitions
- ◆ Instances
- ◆ Nets
- ◆ Pins
- ◆ Generic pins

The remaining five types are attribute records. Because each of these records is of variable length, only the percentage of the memory block consumed is shown:

- ◆ Definition attributes
- ◆ Instance attributes
- ◆ Net attributes
- ◆ Pin attributes
- ◆ Generic pin attributes

File: ***View Report***

Nav

Description

Displays error (.err) files for the current project. You would most often use view error files, but the View Report command can display any text file, with any extension.

Use

The View Report command displays the generic “Open File” dialog box, labeled “Report File Name.” All error files in the current directory are listed. If you want to list all the files in the directory, type *.* in the File Name edit box, then press ENTER.

Highlight one of the files in the list and click on OK (or just double-click on its name) to load it. If the file you want isn’t displayed, use the Drives and Directories controls to select a different file. If you know the name and location of the file, you can type the full pathname in the File Name edit box and click on OK.

The files contents are displayed in a list box. Clicking on any line in the box highlights the error (or the component with the error) in the Hierarchy Navigator’s window.

Help	<i>Menu</i>	F1	Sch, Sym, Nav
-------------	--------------------	----	---------------

Description

Accesses the Help system.

Use

Online help is available at any time. Choose the Contents command from the Help menu to enter the top level of the help system for the Schematic and Symbol Editors, and the Hierarchy Navigator. Or choose the Search for Help On command to select from a list of Editor and Navigator topics.

Most commands remain active until you select another command. To get help on the currently active command, simply press F1.

If you are not familiar with the Microsoft Help system, the How to Use Help command explains how to navigate the Help system.

Object: *HiLite*

Sch

Description

Helps trace nets in a schematic. Highlighting a net changes its color (or turns it into a dashed line on a monochrome monitor). If the net is a signal in a bus, the bus is also highlighted.

Use

To trace a net:

1. Select the HiLite command.
2. Click on a wire in the net to be highlighted. More than one net at a time can be highlighted.

To remove the highlight from a net:

Click on any branch of the highlighted net. If a bus containing this net was highlighted, it also returns to its original color (if none of its other signals are still highlighted).

To remove the highlights from all nets in the schematic:

Click right anywhere in the window.

Object: Mark

F3

Nav

Description

Assigns nets and symbols to a special group. Nets are highlighted in the Net Highlight color (or as dashed lines on monochrome monitors). Symbols are highlighted in the HighlightSymbol color (in gray on monochrome monitors). Marked symbols are redrawn on top of a colored or shaded background.

Use Mark to trace nets through the hierarchy. By marking a net and then entering each sub-block, you can view the entire net.

Net marking can also be used by some of the post-processors to identify special nets and symbols. It's used in the Simulator interface to identify nets to be monitored or graphed.

Use

Marked nets and symbol instances are saved when the hierarchy is saved.

To mark a net or symbol:

1. Select the Mark command.
2. Mark a net or symbol by clicking on it, or by typing a full hierarchical name and pressing ENTER.

To unmark a net or symbol:

Clicking on the marked item. *Or ...*

You can unmark all nets and symbols simultaneously by typing All in the prompt line and pressing ENTER. You cannot unmark an individual net by name.

To list all marked nets and symbol instances:

Enter a question mark (?) to display a text window with a list of all the marked nets and symbol instances.

Object: Query

CTRL+Q

Sch, Nav

Description

Displays additional information about circuit elements. The information appears in a text box that pops up when the first element is selected, and is updated when another element is selected. In the Hierarchy Navigator, the Query box remains on-screen as the Push/Pop command is used to traverse the hierarchy.

Use

Select the circuit element to be queried by clicking on it, or by typing either its instance name or reference designator and pressing ENTER. In the Hierarchy Navigator, use the full hierarchical name of a bus or net as it would appear on a net name.

Four types of objects can be queried. If the mouse cursor points at more than one object when you click, the object closest to the top of the following list will be selected:

- ◆ Pin
- ◆ Net
- ◆ Bus
- ◆ Symbol

You can also select a pin or net by typing `p=pin_name` or `n=net_name` on the prompt line and pressing ENTER. If the *pin_name* does not duplicate a net name, or the *net_name* duplicate a pin name, you can enter the name directly, without the `p=` or `n=`.

Pins

Symbol pins can be queried in the Schematic Editor or Hierarchy Navigator. If you select a bus pin, a dialog box prompts you for a specific pin from that bus to query. The information displayed for a pin query is:

- ◆ Pin name
- ◆ Instance attachment
- ◆ Net attachment
- ◆ Polarity
- ◆ Fan-out
- ◆ Other pin attributes


Nets

A queried net is highlighted by a change in color (or by dashed lines on a monochrome display). The information displayed is:

- ◆ Net name
- ◆ Polarity (if input or output node)
- ◆ Local net name (applicable only on underlying schematics)
- ◆ Node number in database
- ◆ Symbol connections
- ◆ Other net attributes

Figure 19

Bus Query Net List Box

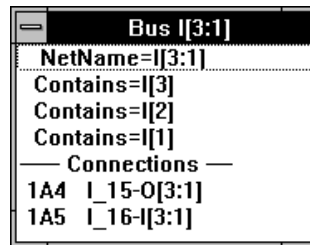

Buses

A queried bus is highlighted by a change in color (or being drawn in dashed lines on a monochrome display). The information displayed is:

- ◆ Bus name
- ◆ Individual nets contained in the bus
- ◆ Symbol connections (Schematic Editor only)

When you click on individual nets in the bus list box (Figure 20), a netlist box (Figure 19) is displayed with all the information for the selected net. The behavior of the second list box is the same as described for querying nets, with this exception. Clicking on the line

In Bus=

returns to the bus list box, allowing you to jump between all the elements in a bus and more detailed information about a single bus element.

Symbols

A symbol instance can be queried by clicking on it, or by typing its name and pressing ENTER. In the Hierarchy Navigator, use the full hierarchical name as it would appear in the instance name text window. When querying an iterated instance in the Hierarchy Navigator, a dialog box lets you choose which instance to query.


To resolve a name conflict between an instance and a net:

Precede the instance name with I= to force its selection.

The selected symbol is highlighted with a colored (or shaded) background. The field of view automatically changes to display a queried symbol that is not currently visible.

Figure 20

Bus List Box Displayed from Bus Query

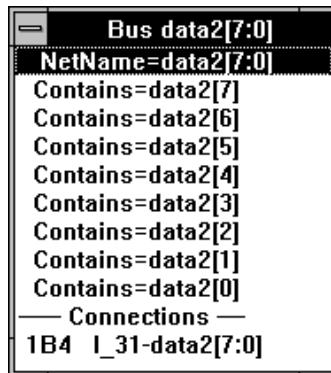

Query Information

The information displayed by Query is:

- ◆ The name (for example, NAND2, NOR3) and type (gate, component, block, cell, master, pin) of the symbol
- ◆ Full path (showing location of symbol file in the file structure)
- ◆ Instance name
- ◆ Reference designator
- ◆ Other symbol attributes
- ◆ Reference location on the schematic (sheet/vertical zone/horizontal zone)
- ◆ Gate section (A, B, C, and so on) on gate symbols
- ◆ Instance number in the hierarchical database (Hierarchy Navigator only)
- ◆ Pin/net connections

Type

All instances of a symbol type can be queried. Press SHIFT while clicking on a symbol of that type. Or, type the symbol's name and press ENTER. All instances of the selected symbol type are highlighted with a colored (or shaded) background.

To resolve a name conflict between a net or symbol instance with the same name as the symbol type:

Precede the type name with T= to force its selection.

The information displayed by Query in this case is:

- ◆ Internal net count
- ◆ Instance names and locations (sheet / vertical zone / horizontal zone)

Reference Designator**To query a symbol with a specified reference designator:**

Enter the name of the reference designator. In the case of gate symbols, the first section with a specified reference designator is queried.

The specified symbol is highlighted with a colored (or shaded) background, and a plus cursor is centered on the symbol. The queried element remains highlighted until a new element is selected, a new command is selected, or you click right anywhere on the screen. The information display remains visible as long as an element is selected for interrogation.

For Gate symbols, the Query box displays the gate letter as A for the first gate, B for the second, and so on.

To find a particular gate:

Enter the reference designator, followed by a slash (/) and the gate letter. For example, enter U1/B to find the symbol whose reference designator is U1 and whose gate is the second in the package.

Note: In the Hierarchy Navigator, Query allows querying of nodes or instances by name or number.

Options: *Attribute Display*

Sch, Nav

Description

Selects the attributes to display in an attribute window. This command temporarily overrides the attribute window definitions in the INI Editor.


Use

To display a given attribute in a window:

1. Select the Attribute Display command. The Setup Attributes dialog box, with a list of attributes, is displayed.
2. Click on the desired attribute. Its name appears to the left of the edit box at the top.
3. Click on the edit box, then type the window number into the edit field and press ENTER.
4. Click on Redraw to redraw the symbol with the new attribute window assignments.

If more than one attribute is assigned to the same window, the attribute with the lowest attribute number is displayed.

Figure 21
Setup Attributes Dialog Box

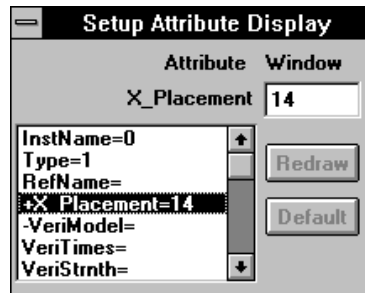

To restore a window to its original assignment, click on the Default button, then click on Redraw. *All assignments are restored to their original values, not just the highlighted line.*

Options: *Display Options*

Sch, Nav

Description

Sets a number of display options in the Schematic Editor and Hierarchy Navigator. Unless otherwise noted, an option applies to both the Editor and the Navigator. Any changes are temporary. Use the INI Editor to make permanent changes.


Use

The Display Options dialog box offers the following options:

Connect Dots	Three nets connected to a symbol pin or the junction of four nets are always drawn with a connect dot. When this check box is marked, the connect dot is also displayed when two nets are connected to a symbol pin, and at the junction of three nets.
Border	When this check box is marked, the sheet border and zone numbers are displayed.
Symbol Pins	When this check box is marked, unconnected pins are drawn with an error dot to highlight them.
Net Attributes	When this check box is not marked, text for net attribute values is not displayed. This decreases redrawing time and visual clutter. Note that only net attributes that have net attribute windows defined are displayed even when this check box is marked.
Pin Attributes	When this check box is unmarked, pin attributes are not displayed. This decreases redrawing time and visual clutter.
Symbol Text	When this check box is unmarked, fixed text in symbols is not displayed. This decreases redrawing time and visual clutter.
Symbol Attributes	When this check box is not marked, text for symbol attribute values is not displayed. This decreases redrawing time and visual clutter.
Open Ends	When this check box is marked, nets not terminating on a net name, symbol pin, or another net are marked with an error dot at their ends. An error dot is also placed on any net name not connected to a net.

Off Page Connects	When this check box is marked, nets that appear on more than one sheet will display a cross-reference to the other sheets, <i>if you placed the name at the off-page end of the wire.</i>
Simulation Values	When this check box is marked, simulation values can be displayed directly on a schematic in the Hierarchy Navigator (Hierarchy Navigator only).
Show Node Numbers	When this check box is marked, SPICE node numbers are displayed next to the node names (Hierarchy Navigator only).

Figure 22
Display Options Dialog Box

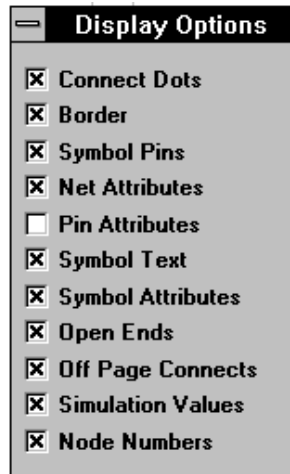

Options: *Graphic Options*

CTRL+G

Sch, Sym

Description


Sets parameter values for the graphics drawing and attribute-window commands in the Symbol and Schematic Editors.

Use

When you select the Graphic Options command, a dialog box offers the following options:

Figure 23

Graphic Options Dialog Box

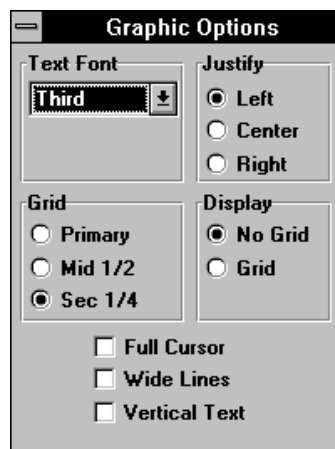

- ◆ **Text Font** — Selects the text size. The choices are Small, Medium, and Large, corresponding to 5, 7, and 9 quarter-grid units in height. Text Font affects only the text to be added, not existing text.
- ◆ **Justify** — Text can be left-justified, right-justified, or centered. This parameter applies to fixed graphic text and symbol attribute windows. Justify affects only the text to be added, not existing text.
- ◆ **Grid** — All electrical elements in schematics and symbols are drawn on the main working grid, as specified in the INI Editor. Graphic elements and text can be positioned on a finer grid of one-half (Mid) or one-quarter (Sec) the main grid.

- ◆ **Display** — Controls whether the primary grid is displayed. The grid appears as dots, with one dot at every grid intersection. Every tenth grid point is larger. As you zoom out and the grid points get closer, some grid dots might not be displayed.
- ◆ **Full Cursor** — Choose between a small “plus” cursor (the default) and a full-screen cursor. The full-screen cursor makes it easy to align objects.
- ◆ **Wide Lines** — There are two line weights for drawing lines and rectangles. The Wide Line check box selects the heavier weight. Heavy lines have the same weight as buses on schematics.
- ◆ **Vertical Text** — Fixed text and attribute window text can be horizontal or vertical. Horizontal is the default. Mark the Vertical Text check box for vertical. Vertical Text affects only the text to be added, not existing text.

Package: *Add Pin Numbers*

Sch, Nav

Description

Assigns pin numbers to Gate and Component symbols. If the design is hierarchical, pin numbers must be added in the Hierarchy Navigator. Otherwise, the Schematic Editor can be used on those portions of the design that are not replicated.

Use

Pin numbers are used in PCB designs to indicate the pin on a Gate or Component symbol that corresponds to a pin on a physical device.

Gate symbols represent one section of a multi-section physical device. Component symbols represent a complete physical device. Gate symbols have assigned pin numbers that are actually a group of numbers. For instance, the symbol for the 7400 NAND gate has pins with the following names and numbers:

```
Name= IN1  Number= 1  4  9 12
Name= IN2  Number= 2  5 10 13
Name= OUT  Number= 3  6  8 11
```

The Gate symbol above represents one-fourth of a complete 7400 IC. The IC has four sections: A, B, C, and D.

The numbers on the pins of Gate symbols are initially set to the first section of the physical device. Pin Numbers changes the pin numbers to another section and/or interchanges functionally equivalent pins.

To change a gate's section:

1. Enter the pin number for any unique pin (such as the output) in the new section, or enter the letter of the desired section (A, B, C, D).
2. Click within the outline of the symbol.

To swap two functionally equivalent pins:

Enter the desired pin number for one of the pins and click on the pin. If both pins have the same Pin Group and are in the same section, the selected pin is swapped with the pin having the given pin number.

To copy a gate letter or pin number:

Click on an instance to pick up the current gate letter

Click on a pin to pick up the pin number.

This feature makes it easy to copy the gate or pin from one instance to another, or rearrange pins on a gate.

Back Annotation Information

Any auto-packager can generate back annotation information for the pin numbers. This back annotation information can be added to the design using the **scback** or **pcbback** utilities.

Common Pins on Gates

Some Gates have common pins. For example, the 74175 quad D flip-flop has a common Clock and Clear. The pin number attribute in this case has four identical entries as below.

Name= ENAB Number= 4 4 4 4

These common pins cannot be swapped.

See Also

Package: Auto Package

Package: *Add Reference Designator*

Sch, Nav

Description

Assigns reference designators to Gate and Component symbols. If the design is hierarchical, you much use the Hierarchy Navigator to assign the reference designators. Otherwise, the Schematic Editor can be used on those portions of the design that are not replicated.

Use

Reference designators label the physical devices represented by the symbols on printed-circuit boards.

The reference designator must be unique for each Component symbol in the schematic. The same Reference Designator can be assigned to two different Gate symbols provided they are the same type of symbol. This permits two or more symbol instances to represent different sections of the same physical part. The special connector pin symbols (symbols of type Pin) are allowed to have duplicate reference designators. This permits edge connectors to have a single reference designator.

If two symbols have the same CompName (attribute #6), they are considered to be the same type. That is, they are permitted to have identical reference designator assignments. (The default value for CompName is the symbol's name.)

Any auto-packager, such as the one described in "Hierarchy Navigator" in the *SCS User Manual* can generate back annotation information for the reference designators. This back annotation information can be added to the design using the **sback** or **pcbback** utilities.

See Also

Package: Auto Package

Package: *Auto Package*

Sch, Nav

Description

Automatically selects an appropriate reference designator for Component symbols, and reference designator and pin assignments for Gate symbols. It ignores Pin symbols.

Use

Reference designators for Component symbols consist of a U, R, or C prefix (specified in the symbol's definition) plus the first number that has not already been assigned to that prefix. For example, if U1, U2, and U4 already exist, the next U-series reference designator would be U3.

If you enter the prefix (U, R, or C) without a number, the count automatically starts at 1. If you append a number to the prefix, the count starts with that number. In either case, the Editor automatically skips over any numbers that have already been used with that prefix.

If you specify a number, the prompt line shows:

```
Package (#>=nn) =
```

Gate symbols are first assigned reference designators and pin assignments from any free gate sections in existing packages. New packages are assigned only if there are no unused gates. The name is selected for new packages as it is for Component symbols.

The Auto Package command can process one, several or all unpackaged symbols in the schematic. The command packages:

- ◆ **A single symbol** — Click on the symbol.
- ◆ **All symbols** — Type ALL, then press ENTER.
- ◆ **All symbols enclosed in a drag box.**
- ◆ **All symbols of the same type** — Hold down SHIFT while clicking on one symbol of the desired type.
- ◆ **All symbols with a specified prefix** — Type the prefix, then press ENTER.

To package iterated instances, use the Hierarchy Navigator.

Note: *The Hierarchy Navigator does not "repackage" symbols that have already been assigned reference designators in the schematic. You must first clear the package information in the Schematic Editor.*

Package: *Check Packaging*

Sch, Nav

Description

Scans the schematic for packaging errors. Whenever packaging information is changed, the checking report is updated and displayed in the Packaging Error Report display.

Use

Check Packaging runs in conjunction with the other packaging commands (except Query Packaging). It can be terminated by selecting the Query Packaging command or any command not on the View or Package menus.

Packaging errors are displayed in a list box. If the error involves a conflict between two or more symbols, the error is followed by a series of indented lines showing the sheet/zone of each symbol causing the error. Errors that involve only one symbol are listed with the sheet/zone information on the same line.

Clicking on an error from the list box displays the problem symbol. The cursor is changed to an X and moved to mark the symbol. Moving the mouse restores the cursor to its original position and appearance.

The checking command also acts as a repackage command if no other packaging command is selected. Clicking on any symbol repackages the symbol as if you had Cleared, then Auto Packaged.

Error Messages

The following errors are reported by the packaging checker:

Gate Multiply Assigned	The same reference designator or the same pins appear on two or more gates. The multiply-assigned gates appear in an indented list immediately below the error message.
Invalid Pins on Gate	The pin numbers on the instance are not a valid set, according to the symbol definition.
RefDes on Different Types	The same reference designator is used on symbols of differing types, where the <i>type</i> is the base name of the symbol file. The problem symbols appear in an indented list immediately below the error message.

**RefDes Multiply
Assigned**

The same reference designator appears on two or more components. The problem symbols appear in an indented list immediately below the error message.

Unpackaged Symbol

A symbol has not yet been packaged.

Specific symbols are always shown with their respective sheet/zone locators at the beginning of the line. This sheet/zone locator is an integer representing the sheet, followed by a letter-number pair that specifies the X-Y location of the symbol. For example, a symbol having a sheet/zone locator of 3D5 would be located on sheet 3 in the region at the intersection of zones D and 5.

Package: *Clear Packaging*

Sch, Nav

Description

Clears the packaging information on one or more symbols.

Use

The Clear Packaging command can clear:

- ◆ **A single symbol** — Click on the symbol.
- ◆ **All symbols** — Type ALL, then press ENTER.
- ◆ **All symbols enclosed in a drag box.**
- ◆ **All symbols of the same type** — Hold down SHIFT while clicking on one symbol of the desired type.
- ◆ **All symbols with a specified prefix** — Type the prefix, then press ENTER.

After being cleared, the reference designator returns to the prefix you specified in the symbol definition. The pins on Gate symbols are set to the values for the first gate section in the package.

Package: *Pin Numbers*

Sch, Nav

Description

Sets the pin numbers on Gate symbols, assigns a gate symbol to a particular section of a component, and lets you swap pins on a Gate symbol.

Use

You must enter the gate section or pin number to be assigned using one of the following methods:

- ◆ Type the pin number, then press ENTER.
- ◆ Type a letter corresponding to the gate section in the package (that is, A, B, C, and so on), then press ENTER.
- ◆ Click left on a pin to copy its number.
- ◆ Click left on a symbol body to copy its gate section.

The gate section or pin number is attached to the cursor. The gate to be numbered is designated by clicking left on its body or on one of its pins. Pin Numbers checks the requested assignment to be sure it is a valid gate for the symbol.

Pin Numbers then assigns the correct pin numbers to the gate. If an explicit pin number is requested and if one of the gate's pins is selected, the command attempts to assign that pin by swapping with other pins in the same pin group.

Pin Numbers does not prevent duplicate gate assignments or common-pin conflicts. These errors are detected and reported by the Check Packaging command.

To package iterated instances, you must use the Reference Designator and Pin Numbers commands in the Hierarchy Navigator.

Package: *Query Packaging*

Sch, Nav

Description

Scans the schematic and lists groups of Gate and Component symbols according to their packaging information.

Use

The Query Packaging command has three operating modes:

- ◆ Typing a specific reference designator, such as U12, displays the sheet/zone location and gate section of all elements designated U12 in a list box. Clicking on a symbol produces the same result.
- ◆ Typing a reference designator prefix, such as C, displays the sheet/zone location and gate sections of all elements whose reference designators start with C in a list box. Any elements whose reference designators have not been assigned are indicated as such. Clicking on a symbol whose reference designator has not been assigned produces the same result.
- ◆ Typing a symbol's file name, such as NAND2, displays the sheet/zone location and gate sections of all NAND2 elements in the schematic in a list box. Clicking on a symbol while holding down the Shift key produces the same result.

Package: *Reference Designator*

Sch, Nav

Description

Explicitly sets the reference designator on a Gate, Component, or Pin symbol.

Use

You first specify the reference designator to be assigned by one of the following methods:

- ◆ Enter the full name (for example, U23) and press ENTER. *Or...*
- ◆ Enter the prefix (for example, U) and press ENTER. The Schematic Editor selects the first unused name with that prefix. *Or...*
- ◆ Click left on a symbol. The system selects a unique name with the same prefix as the selected symbol. *Or...*
- ◆ Click left on a Gate or Pin symbol while holding down SHIFT. The system copies the name from the symbol.

The name you're assigning is attached on the cursor.

Do This	To Assign the Name to
Click Left on a symbol	A single symbol. The name on the cursor is then set to the next available name.
Shift+Click Left	A single symbol. The name on the cursor is attached to the selected symbol and the name attached to the cursor is not incremented. Use this method for gate assignments with multiple sections in the same package and thus with the same reference designator.
Drag a box	All symbols enclosed in the drag box. The symbols are assigned unique names starting with the selected name. The name attached to the cursor is incremented to the next available name.
Shift+Drag a box	All symbols enclosed in the drag box. All selected symbols have the assigned name attached to them and the name attached to the cursor remains the same.

To package iterated instances:

Use the Reference Designator and Pin Numbers commands in the Hierarchy Navigator. The RefDes attribute on an iterated instance consists of a list of reference designators. The list is comma- or blank-delimited. You can form a sequence of reference designators by enclosing the numeric range in parentheses (), brackets [], or curly braces {}.

For example, a symbol with instance name CC[1:20] specifies 20 iterations of a symbol. If you assign this symbol a reference designator of C1,C3,C(5:20), C22,C24, then the 20 iterations of the symbol are referenced as C1, C3, C5, C6, C7, ... C20, C22, C24.

Invalid Assignments

Invalid assignments are allowed, but *only* to move reference designators among symbols. Be sure there are no invalid assignments when you exit this command. Any remaining invalid assignments are trapped later by the checking program.

Processes Menu

Nav

Description

The Process menu is available in the Hierarchy Navigator. Selecting an entry spawns the task associated with that entry. You can add any process or program to the Process menu by editing the Hierarchy Navigator Processes section of the INI Editor.

Use

Several functions are provided as auxiliary processes. This permits the individual process to be attached as needed. Processes you never use can be deleted to conserve memory.

Functions implemented in this manner have access to, but are prevented from modifying, the internal data structures of the main modules. This form of implementation is typically suited to post-processors and database-verification modules.

Netlist Extraction is one class of function implemented in this manner. Each netlist program produces a data file as its only output. Several formats are available. Each format is implemented as a separate module. Most users need only a few formats to interface with other CAD tools.

When a command is run from the Processes menu, the Hierarchy Navigator passes a copy of the hierarchical database to the selected process. The process then performs its task.

The Project Navigator is unavailable while a process is executing. Files created by a process are usually saved in the project directory (but you should not assume this is always the case). Some processes display their files immediately.

Tools ***Menu***

Sch, Sym, Nav

Description

The Tools menu is available in the Hierarchy Navigator. Selecting an entry spawns the task associated with that entry. You can add any process or program to the Tools menu by editing the Hierarchy Navigator Tools section of the INI Editor.

Use

Several functions are provided as auxiliary processes. This permits the individual process to be attached as needed. Processes you never use can be deleted to conserve memory.

Functions implemented in this manner have access to, but are prevented from modifying, the internal data structures of the main modules. This form of implementation is typically suited to post-processors and database-verification modules.

Netlist Extraction is one class of function implemented in this manner. Each netlist program produces a data file as its only output. Several formats are available. Each format is implemented as a separate module. You will probably need only a few formats to interface with other CAD tools.

When a command is run from the Tools menu, the Hierarchy Navigator passes a copy of the hierarchical database to the selected process. The process then performs its task.

The Project Navigator is unavailable while a process is running. Files created by a process are usually saved in the project directory (but you should not assume this is always the case). Some processes display their files immediately.

Tools: **Check Circuit**

Nav

Description

The Check Circuit command from the Tools menu performs basic connectivity checks and analyzes the current loading or fanout of a completed design. It also performs a packaging check on PCB designs to ensure that gates are correctly assigned to physical components.

Use

Check Circuit generates a list box with the errors. Click left on any of the errors listed and the portion of the circuit responsible for the error is highlighted on the schematic.

The Check Circuit utility is a separate module, **checkckt.exe**. It is more fully described in “Hierarchy Navigator” in the *SCS User Manual*.

Tools: *Find Item*

Nav

Description

Locates the output pin driving the net being queried. This is useful for back-tracing signals during the analysis of simulation results.

Use

Select the command, then click on a net. The schematic with the pin that drives that net is displayed, and the pin is highlighted.

Tools: *Probe Item*

Nav

Description

Identifies the name of a symbol instance or net to the currently running tool.

Use

To probe an item:

1. Choose Tools: Probe Item
2. Click on the item you want to probe.

The name of the item is sent to the tool. Probe Item does not display the Query box, but it uses the Query box if it is already open when the command is run. This lets you Query several nodes without sending the names to the tool, then switch to the Probe Item command to send more names to the tool.

The Probe Item command is initially disabled. When a tool is running that allows its use, Probe Item is enabled.

View:	Full Fit	CTRL+F	Sch, Sym, Nav
--------------	-----------------	--------	---------------

Description

Adjusts the magnification so the current drawing just fills the screen. The cursor changes to the zoom cursor, a capital Z.

Use

The Full Fit command has two operating modes, click and drag:

Click Mode

Click mode toggles between a full-screen display, and display at the magnification before the command was run.

Click once to fill the window with the drawing. Then click again on the part of the drawing you want to see in more detail. The window is returned to the original magnification, with the selected component centered. (The component may not be centered if it is near an edge.) Using Click mode is a way to move quickly around a schematic, looking at various areas in detail.

Drag Mode

Click to fill the screen with the drawing. Then drag the mouse to select a rectangular area you want to view in more detail. The selected area is centered in the window, at the highest magnification that permits the full area to be viewed.

You can drag repeatedly to view smaller and smaller areas of the drawing. Or you can click a second time to see the full drawing, then drag to select a different area.

Limits

There is an upper limit to the magnification. When you have reached that limit, a message in the message line will warn you.

Text cannot be drawn below a minimum magnification that corresponds to one vertical pixel for one-quarter of a major grid. Below this point, text strings are replaced by outline boxes. The minimum magnification scale for displayable text is the base magnification. The allowable magnifications in terms of this base are 1/8x, 1/4x, 1/2x, 1x, 2x, 3x, and 4x.

View commands are “nested.” If run while another command (not a View command) is active, the active command’s status is saved. When the View command is terminated by clicking right, the previous command is restored. You can also terminate Full Fit by selecting another command.

View:	<i>Push / Pop</i>	F2	Nav
--------------	--------------------------	----	-----

Description

Traverses the design hierarchy.

Use

Push moves to a lower (more detailed) level in the hierarchy.

Pop moves to a higher (less-detailed) level in the hierarchy.

To push into a symbol:

1. Choose View: Push/Pop.
2. Click within the symbol boundary. If the symbol represents a lower-level schematic, that schematic replaces the schematic currently on the screen. If the symbol represents a behavioral file, that file is displayed in the Text Editor.

To pop back to the parent of the current schematic:

3. Choose View: Push/Pop.

Click outside all symbol boundaries. The parent schematic replaces the schematic currently on the screen, unless the current schematic is the highest level (root) of the hierarchy.

Alternatively, you can type the instance name of the destination schematic at the prompt and press ENTER.

Note: *If you are viewing a behavioral file, you must close the file to return to the previous level.*

Hierarchical Context

Full hierarchical context is maintained when pushing or popping. All net names are shown with their full hierarchical representations. Symbol instance names are shown in an abbreviated format that replaces the leading portion of an instance name with a dot. For example, the instance .AB.CD.EF is displayed as .EF.

Nested Command

Push/Pop is a “nested” command. If Push/Pop is run during another command (such as Query or Attribute), you can cancel Push/Pop and return control to the previously active command by clicking right anywhere in the window.

View: ***Redraw***

Sch, Sym, Nav

Description

Repaints the current window.

Use

Some operations (such as Copy or Delete) can leave “trash” pixels or incomplete lines. Use the Redraw command to clean up the image. The screen is redrawn as soon as this command is selected.

View:	<i>Zoom In</i>	CTRL+Z	Sch, Sym, Nav
--------------	-----------------------	--------	---------------

Description

Increases the magnification, showing a portion of the current drawing in more detail. The cursor changes to the zoom cursor, a capital Z.

Use

Zoom In operates in two modes, click and drag:

Click

Click at the point in the drawing to be centered. The screen is redrawn at the next-higher magnification, centered at the selected point. (If the point is near an edge of the drawing, it may not be centered.)

Each click increases the magnification one step in the scale (1/8x, 1/4x, 1/2x, 1x, 2x, 3x, and 4x). At 4x, a message reminds you that you have reached the maximum magnification.

Drag

Drag the mouse to define a rectangular area. When you release the mouse button, the selected area is centered at the highest magnification that permits the selected area to be fully displayed. Magnification is limited to the same values listed in click mode.

Zoom In can be terminated and the previous command restored by clicking right anywhere in the window. Selecting any other command also terminates Zoom In.

View commands are “nested.” If run while another command (not a View command) is active, the active command’s status is saved while the View command is executed. When the View command is terminated by clicking right, the previous command is restored.

Index

A

- Add Pin Numbers command, 105 – 106
- Add Reference Designator command, 107
- Arc command, 5
- Attribute Display command, 100
- Attribute Location command, 44 – 45
- Attribute Window command, 6 – 7
- Attribute windows
 - defining, 6
 - display options, 103
 - moving, 44
 - positioning, 6
 - reassigning, 7
 - selecting for display, 100
- Attributes
 - assigning values to symbols, 36
 - defining windows, 6
 - deleting values, 18
 - displaying, 100
 - modifying bus attributes, 18
 - moving windows, 44
 - pin, 29
 - table data, 40
 - window options, 103
 - window selection, 100
- Auto Package command, 108
- Auto-increment
 - of net names, 22
 - instance names, 13

B

- Back Annotate command, 71 – 73
- Back annotation, 71
 - file format, 72
 - incorporating data, 85
 - pin numbers, 106
 - sample file, 73
- Big Bubble command, 8
- Birdirectional signals, marking, 12
- Block symbol
 - creating, 25
- Border, 101
- Bubble command, 8
- Bus names
 - attaching compound name, 11
- Bus Tap command, 9
- Bus taps
 - adding, 9
- Buses
 - entering in block symbols, 26
 - expanded bus name, 11
 - modifying attributes, 18
 - querying, 97
 - selecting nets in, 17
 - tapping, 9

C

- C mode (drawing wires), 43
- Change Type command, 46
- Check Circuit command, 118
- Check command, 74 – 75
- Check Packaging command, 109 – 110
- Circle command, 10
- Circuit checking, 118

- Circuit elements
 - querying, 96
- Clear Packaging command, 111
- Clipboard
 - copy to, 50
 - cutting to, 51
 - pasting, 61
- Component symbols, 105
 - numbering pins, 27
- Connect dots, 101
- Consistency Check command, 74 – 75
- Constants command, 47
- Copy command, 48 – 49
- Copy Image command, 50
- Copying, 48, 50
- Crossing wires limitations, 53
- Cursor, 104
- Cut command, 51
- Cutting, 51

D

- Delete command, 52 – 53
- Deleting, 52
- Derived attribute
 - table data, 40
- Design statistics, 90
- Display options, 101
- Display Options command, 101 – 102
- Drag command, 54 – 55
- Dragging
 - use in Schematic Editor, 54
 - use in Symbol Editor, 54
- Drawing options, 103
- Duplicate command, 56 – 57
- Duplicating, 56

E

- Error checking, 74, 109
- Errors
 - checking, 118
- Errors, viewing, 92
- Exit command, 76
- Expand command, 77
- Expanded Bus Name command, 11
- Expanding the symbol work area, 77

F

- File menu
 - Resequenece Sheets, 84
- Find button, 36
- Find Item command, 119
- Font, 103
- Full Cursor, 104
- Full Fit command, 121

G

- Gate symbols, 105
 - changing section, 105
 - common pins, 106
 - copying gate letter or pin number, 105
- Gates
 - querying, 99
- Global constants
 - changing, 47
- Global nets, 23
 - named symbol, 24
 - no symbol, 24
 - types, 23
 - unnamed symbol, 23
- Graphic elements
 - arc, 5
 - circle, 10
 - line, 16
 - rectangle, 32
 - tables, 38
 - text, 41
- Graphic Options command, 103 – 104
- Graphics options, 103
- Grid, 103
 - displaying, 104
- Group-select, 49

H

- Help menu, 93
- Hierarchy
 - moving through, 123
- HiLite command, 94

I

- I/O marker
 - adding/deleting, 12
- I/O Marker command, 12
- I/O markers
 - adding/deleting, 23
- Incorporating back annotation data, 85
- Inputs, marking, 12
- Instance Name command, 13 – 15
- Instance names
 - assigning, 13
 - auto-increment mode, 13
 - conflict, 98
 - iterated instances, 14
 - pin connections to iterated, 15
- Invalid assignments (of reference designators), 115
- Iterated instances
 - packaging, 115
 - pin connections, 15

J

- Justification, 103

L

- Line command, 16
- Lines
 - changing weight, 104

M

- Mark command, 95
- Master symbols
 - positioning, 66
- Matching Symbol command, 78
- Mirror command, 58
- Mirroring, 58
- Move command, 59
- Moving, 59
- Moving through hierarchy, 123

N

- Net Attribute command, 17 – 18
- Net Attribute Window command, 19
- Net attributes
 - assigning values, 17
 - displaying, 19, 101
 - modifying, 17
- Net Name command, 20 – 24
- Net names
 - auto-increment mode, 22
 - compound, 20
 - conflicts, 98
 - editing, 23
 - entering, 21
 - sequential, 20, 22
 - simple, 20
 - simple and compound, 20
 - user-assigned, 20
- Nets
 - adding attributes, 17
 - displaying connect dots, 101
 - displaying off-page connects, 102
 - displaying open ends, 101
 - editing names, 23
 - global, 23
 - marking, 12
 - naming, 20
 - probing for name of, 120
 - querying, 97
 - renaming, 22
 - selecting, 17
 - tracing, 94 – 95
- New Block Symbol command, 25 – 26
- New command, 79
- Number Pins command, 27

O

- Off page connects, 102
- Open command, 80
- Open ends, 101
- Orientation
 - of symbols, 34
 - page, 83
- Origin, setting, 66
- Outputs, marking, 12

P

Packaging
 check, 109
 clear information, 111
 error messages, 109
 iterated instances, 115
 querying, 113
 reference designators, 108
Packaging reference designators, 114
Page orientation, 83
Pan command, 122
Paste command, 61
Pasting, 61
PCB back annotation
 See SCS User Manual
PCB symbols, numbering pins, 27
Pin Attribute command, 1, 29 – 30
Pin attributes, 29
 displaying, 101
 meaning of, 30
Pin command, 28
Pin Name Location command, 31
Pin names, location of, 31
Pin numbers
 assigning, 105
 assignment, 112
Pin Numbers command, 112
Pins, 101
 adding, 28
 assigning attributes, 29
 assigning numbers, 105
 common on Gate symbols, 106
 numbering in component or PCB symbols, 27
 order in block symbol, 26
 querying, 96
 swapping equivalent, 105
 symbol connections, 35
 tracing signals, 119
Point-to-point mode (drawing wires), 42
Print command, 81
Print Image command, 82
Print Setup command, 83
Printer setup, 83
Printing
 page orientation, 83
 parts of the screen, 82
 printer setup, 83

schematics and symbols, 81

Probe Item command, 120
Processes menu, 116
Push / Pop command, 123

Q

Query command, 96 – 99
Query Packaging command, 113
Querying circuit elements, 96
Querying symbols for packaging, 113

R

Rebuilding the design, 85
Rectangle command, 32
Redo command, 63
 See also Undo
Redraw command, 124
Reference designator
 assignment, 108, 114
Reference Designator command, 114 – 115
Reference designators
 assigning, 107
 invalid assignments, 115
 querying symbols by, 99
Repeating commands, 63
Replacing symbols, 34
Resequenece Sheets, 84
Resequenece Sheets command, 84
Restart command, 85
Reversing commands, 70
Rotate command, 64
Rotating, 64

S

Save As command, 87
Save command, 86
Saving files, 86 – 87
Schematic command, 65
Schematic Editor
 exiting, 76
Schematics
 making symbols for, 26
 opening, 80
 opening new, 79

- printing, 81
- saving, 86
- saving as, 87
- Selecting items to copy, 49
- Selection
 - of nets, 17
- Set Origin command, 66
- Setting pin location, 31
- Setting symbol origin, 66
- Sheet command, 88 – 89
- Sheet Setup command, 88 – 89
- Sheets
 - displaying borders and zones, 101
 - reordering, 84
 - selecting, 88
- Show node numbers, 102
- Signal tracing, 119
- Simulation values, 102
- Single-segment mode (drawing wires), 42
- SPICE
 - displaying node numbers, 102
- Statistics, 90
- Statistics command, 90 – 91
- Symbol
 - creating from schematic, 78
- Symbol Attribute command, 36 – 37
- Symbol attributes
 - adding, 36
 - displaying, 101
 - modifying, 37
- Symbol command, 33 – 35, 67
- Symbol Editor
 - calling from Schematic Editor, 67
 - exiting, 76
- Symbol origin
 - setting, 66
- Symbol pins
 - location, 31
- Symbols
 - adding to schematic, 33
 - assigning attribute values, 36
 - calling the Symbol Editor, 67
 - changing orientation, 34
 - changing type of, 46
 - creating for schematics, 78
 - expanding work area for, 77
 - labeled, 24
 - making for schematics, 26
 - new block, 25

- pin connections, 35
- placement checks, 34
- placing, 34
- positioning Master symbols, 66
- printing, 81
- probing for name of, 120
- querying, 98
- querying by reference designator, 99
- querying for packaging, 113
- querying instances of, 99
- replacing, 34
- saving, 86
- saving as, 87
- schematic and symbol incompatibility, 61
- selecting, 33
- selecting by attribute, 37
- selecting by attribute criteria, 36
- tracing, 95
- unlabeled, 23

T

- Table command, 38 – 40
- Table data
 - adding/editing, 38
 - referencing, 39
- Table Data command, 69
- Tables
 - editing data, 69
 - rows and columns, 39
- Text
 - adding, 41
 - displaying symbol, 101
 - font, 103
 - formatting, 104
 - justification, 103
 - vertical, 104
- Text command, 41
- Tools menu, 117
- Tracing nets
 - highlighting, 94
 - marking, 95
- Tracing signals, 119

U

- Unconnected symbol pins, 101
- Undo command, 70
 - See also redo
- Undoing commands, 70
- User-assigned instance names, 13

V

- View Report command, 92
- Viewing controls
 - Full Fit, 121
 - Pan, 122
 - push/pop, 123
 - Zoom In, 125
 - Zoom Out, 126
- Viewing controls:Redraw, 124
- Viewing errors, 92

W

- Window
 - net attribute, 19
- Wire command, 42 – 43
- Wires
 - adding, 42
 - crossing limitations, 53
 - delete limitations, 53

Z

- Z mode (drawing wires), 43
- Zoom In command, 125
- Zoom Out command, 126