



# DEClaser 5100

## QUICK REFERENCE CARD


EK-D5100-RC

Use this card as a guide to locate the printer features and values you want.  
**Note:** Printer must be **Paused** in order to display menu choices.


### Press this KEY To...

- scroll through the values available.
- move down a level.
- scroll back through the menu values.
- move up a level.
- select the feature or value displayed.


© Digital Equipment Corporation 1994. All rights reserved.

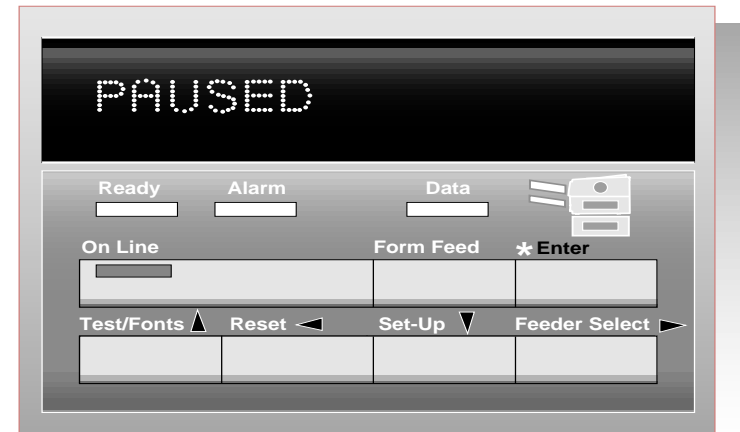

indicates that the value displayed is selected.

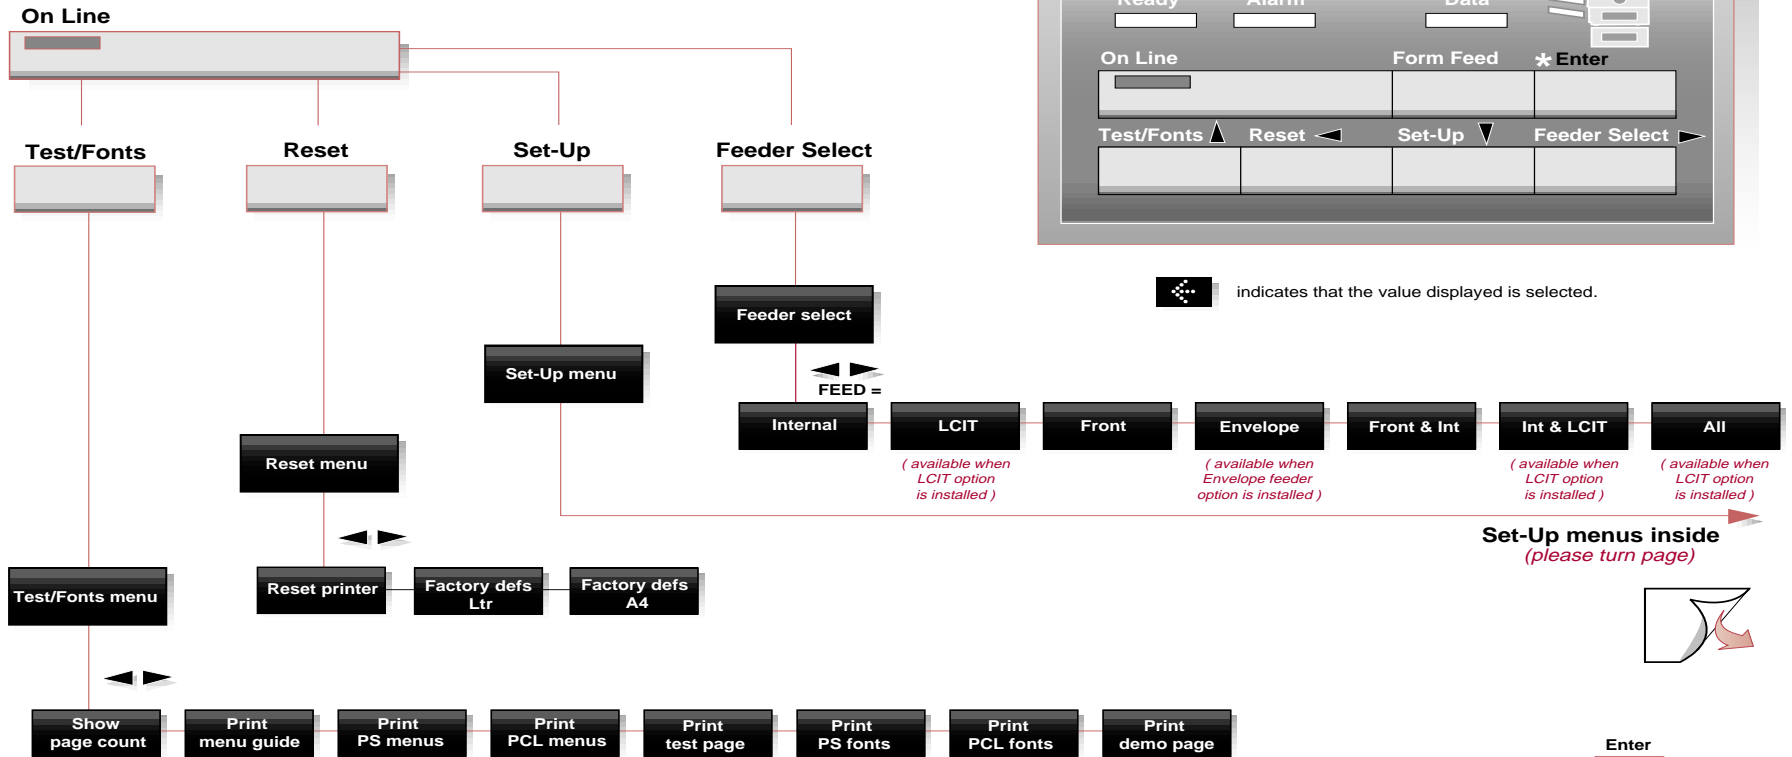


Set-Up menus inside (please turn page)

 


Press to select feature

# DECLaser 5100

## QUICK REFERENCE CARD

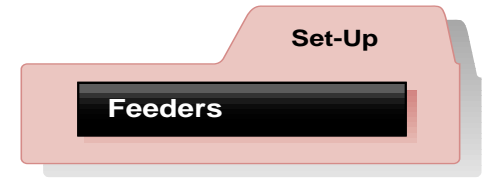


to PostScript menu

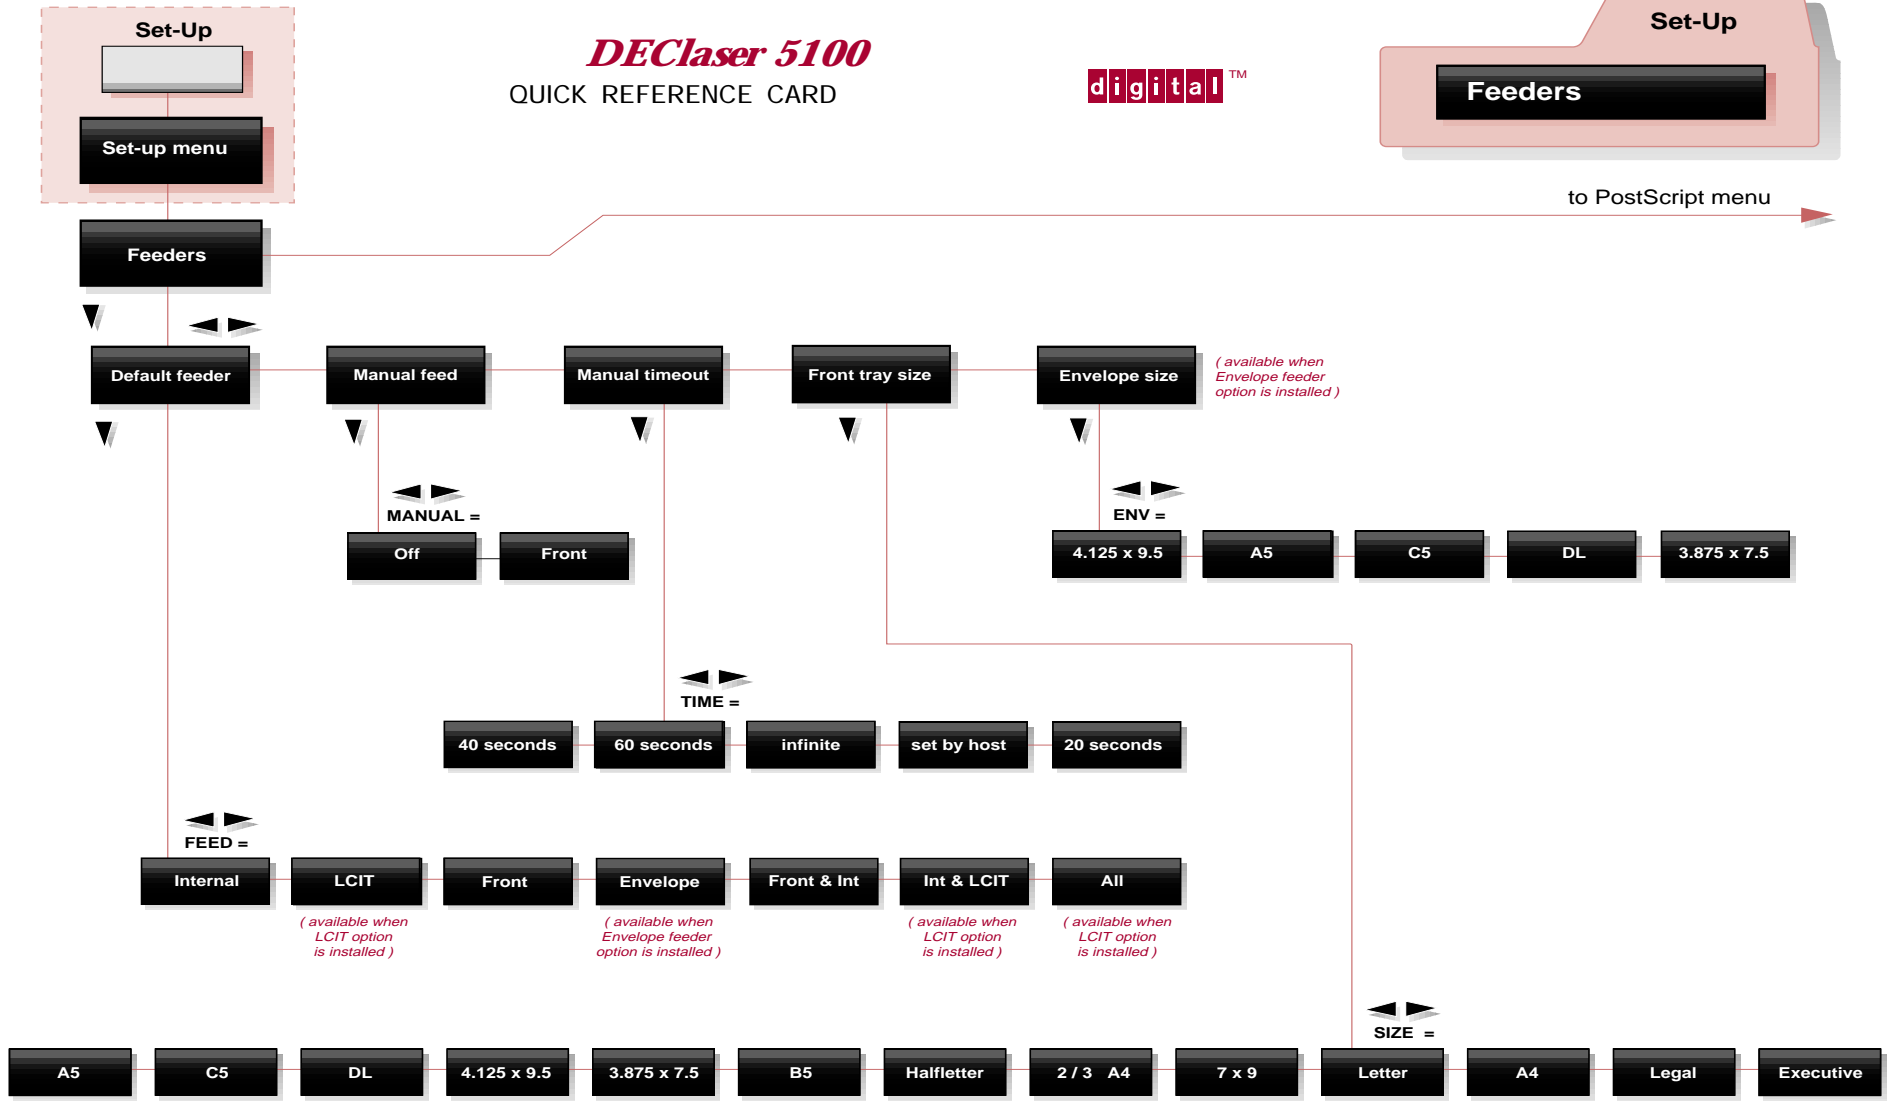

Enter  
Press  to select value

**DECLaser 5100**  
QUICK REFERENCE CARD

digital™

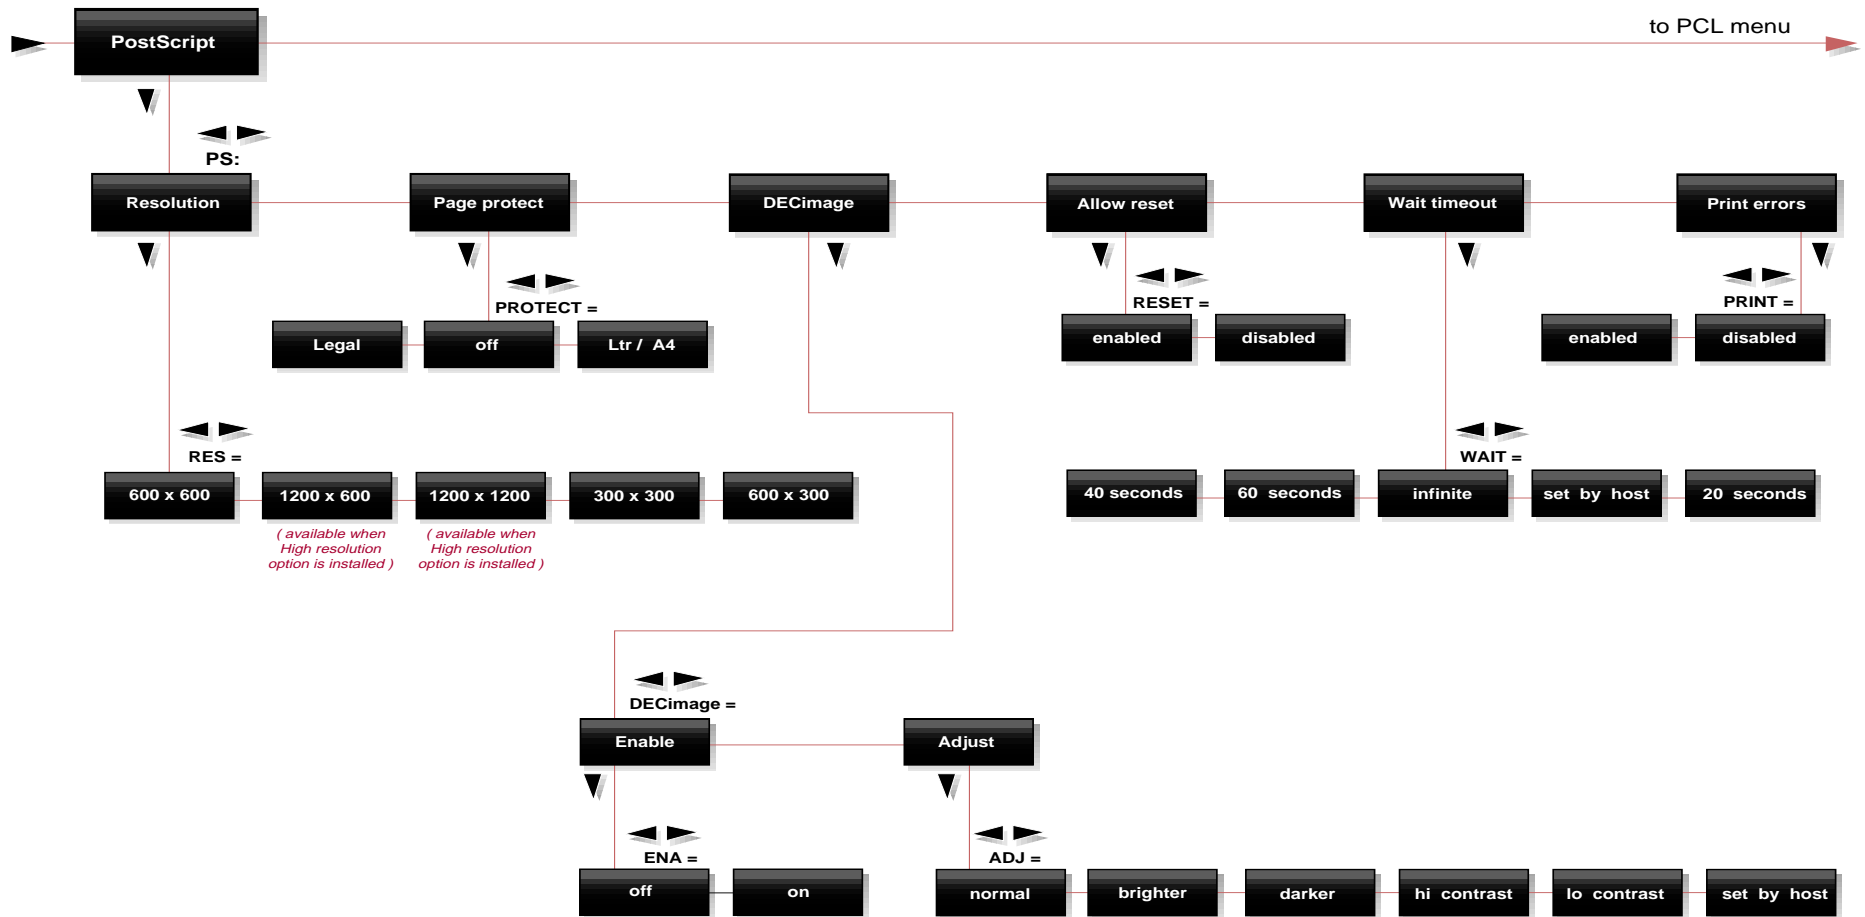


Enter  
Press  to select value

# DEClaser 5100

## QUICK REFERENCE CARD



digital™

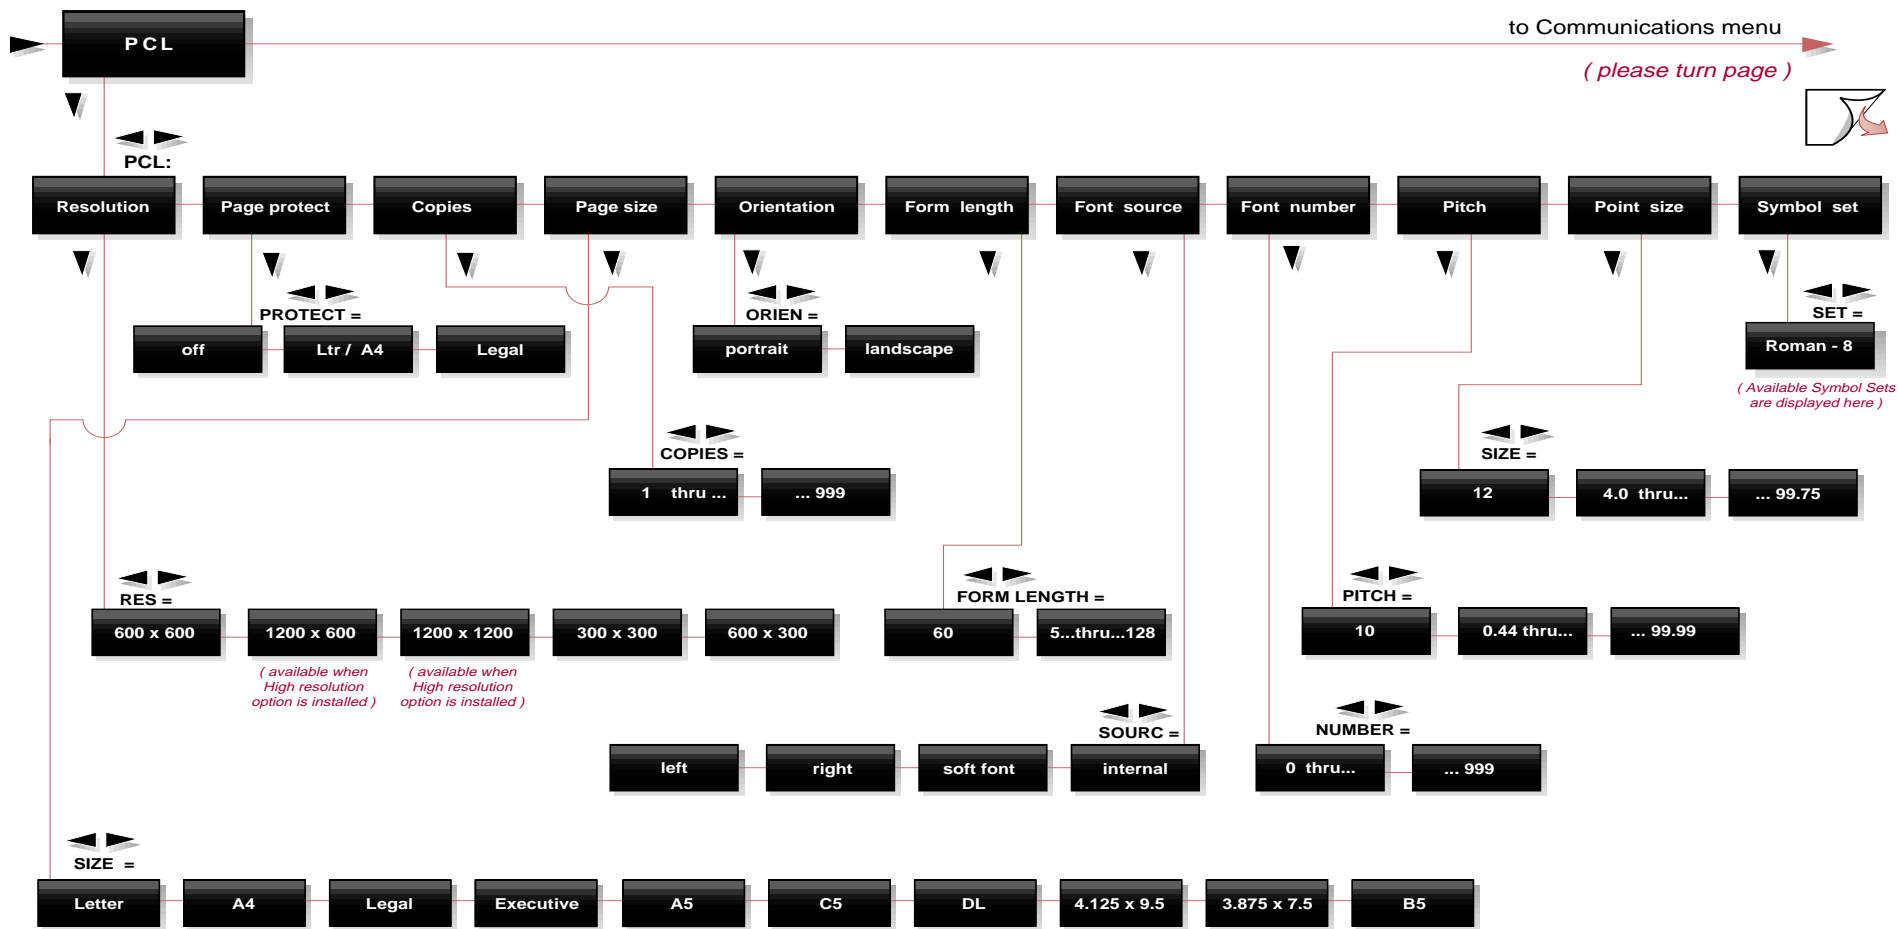

Enter  
Press  to select value

# DECLaser 5100

QUICK REFERENCE CARD

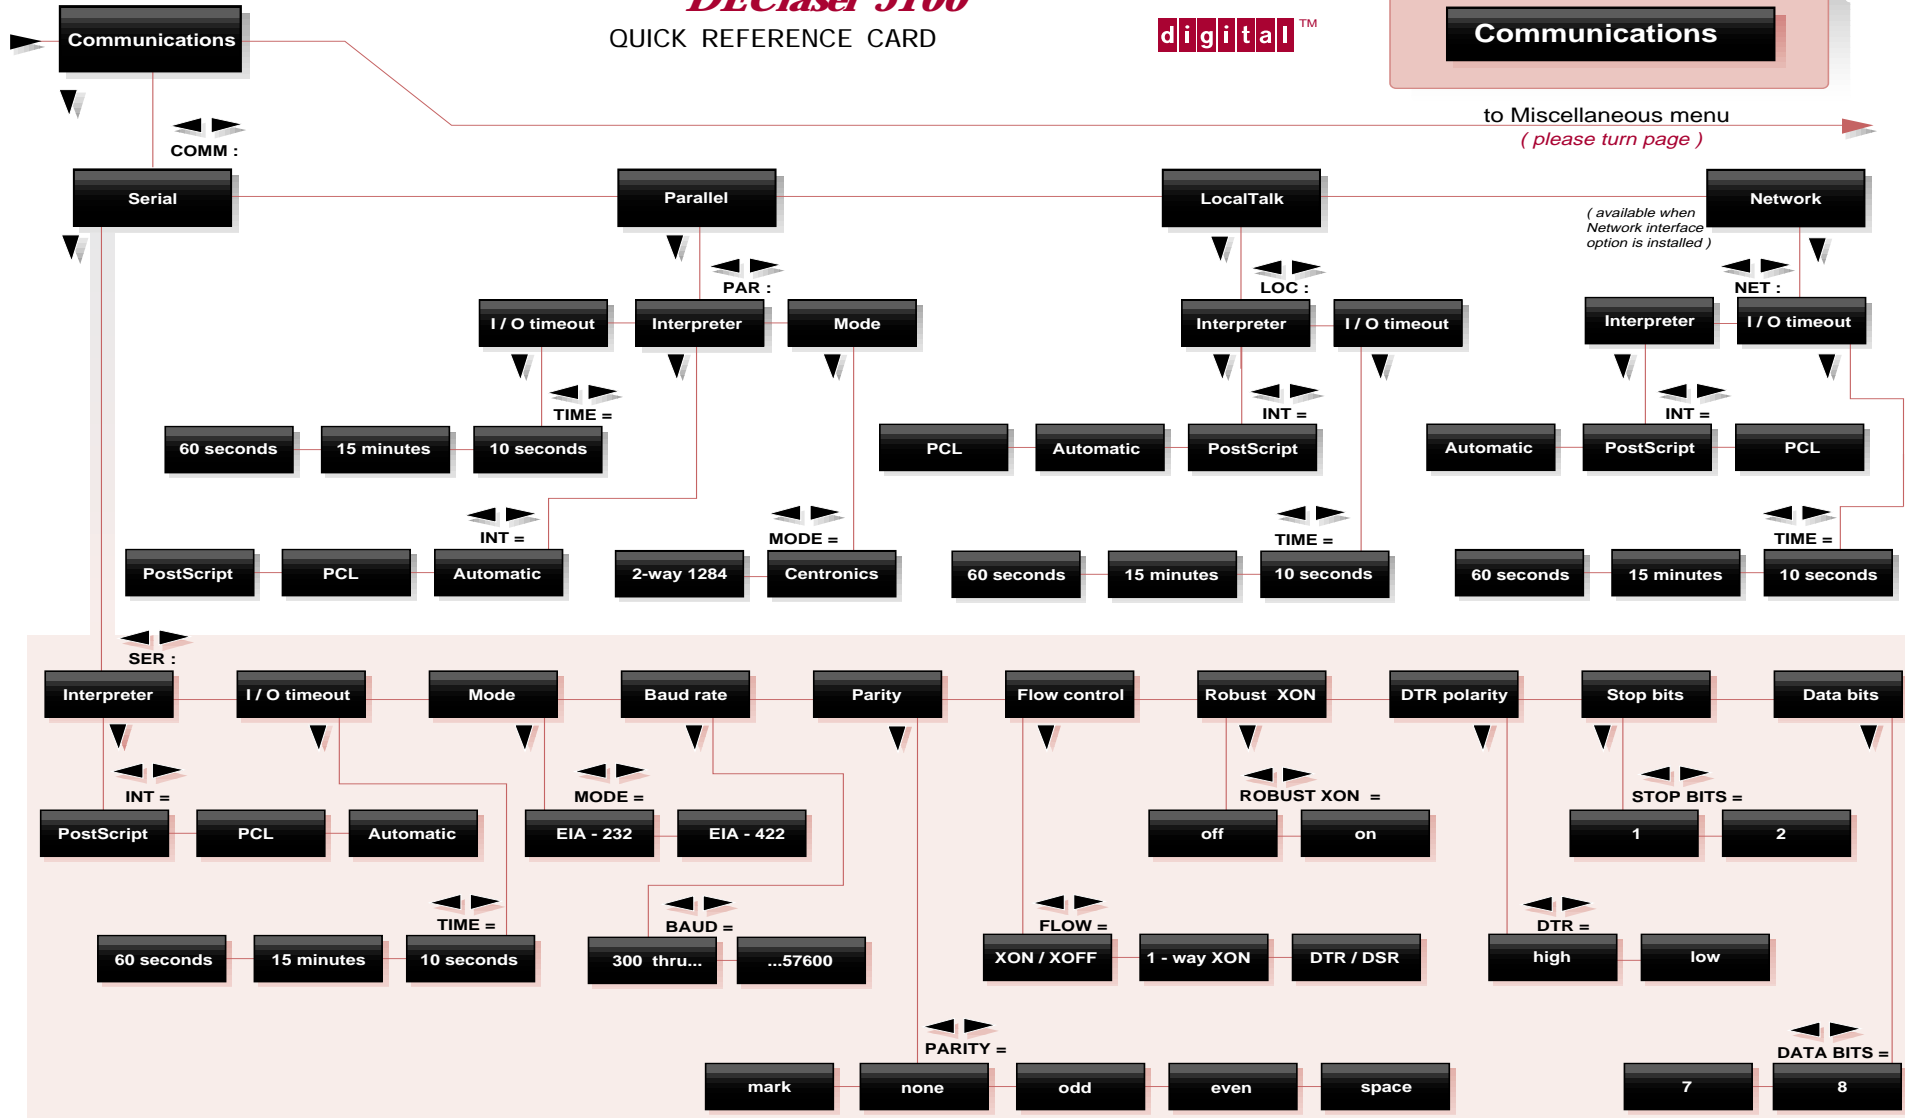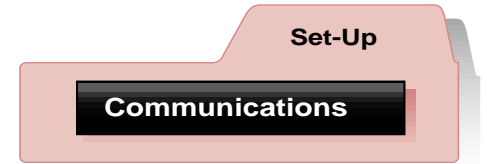

to Miscellaneous menu  
(please turn page)

(available when  
Network interface  
option is installed)


Enter  
Press  to select value

**DEClaser 5100**  
QUICK REFERENCE CARD

digital™

Set-Up

Miscellaneous

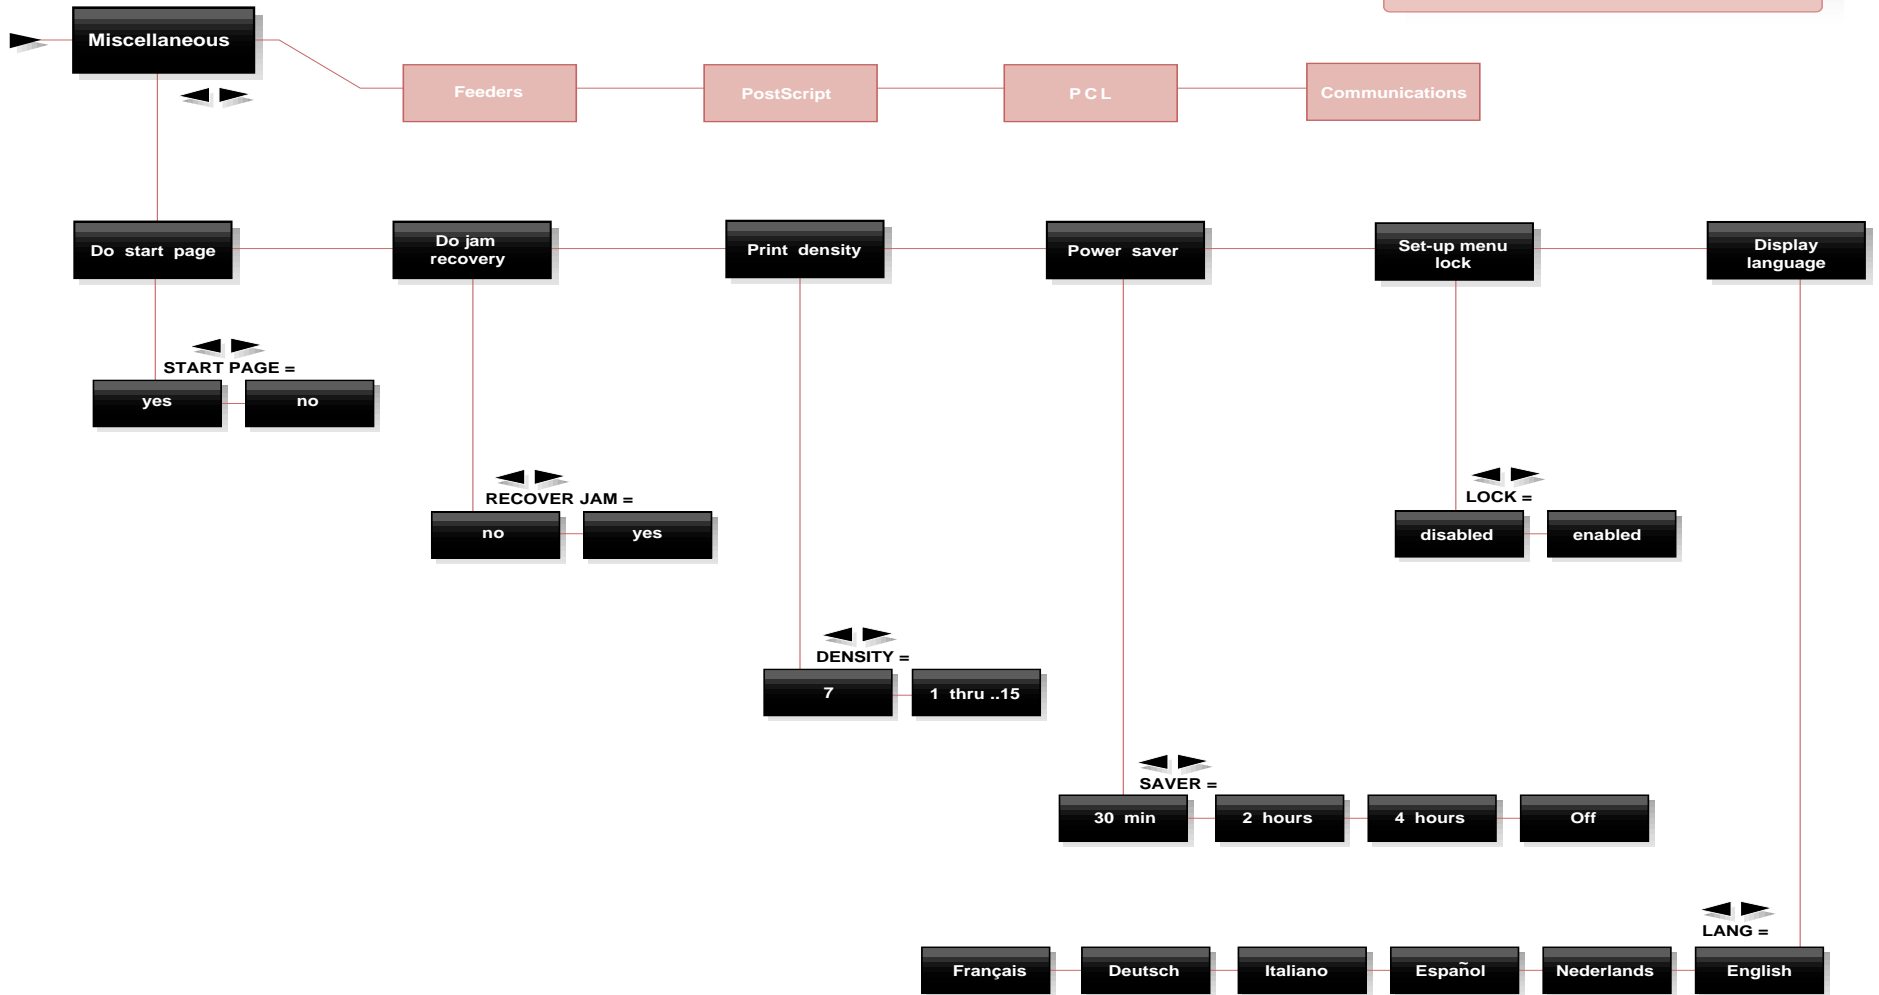

Enter  
Press  to select value