

- **USER MANUAL**

Android laptop

- Please Read the manual before using this product, and save it for future use.

- **Function Overview**



- **SPECIFICATIONS**

| Netbook Specifications | | | |
|-------------------------------|------------|--------------|--|
| Size | 10.1 inch | Connectivity | WIFI/Bluetooth |
| CPU | A133 | RAM | 2GB |
| GPU | GE8300 | Display | IPS/800*1280 |
| ROM | 32GB | Network | WIFI802.11 b/g/n |
| Camera | 0.3MP | Power Supply | DC 5V 2A |
| Battery | 5000mAh | Ports | USB2.0*2/TF Card*1/3.5mm Earphone Jack*1 |
| OS | Android 12 | | |

- **START**

- **Power ON/OFF**

- Press the power button 2-3 seconds to turn on the netbook. Select the language and follow the start up guide to set up the device.
- Press the power button for 2-3 seconds until the screen display power off and restart options. Click power off to turn off the netbook.
- If the netbook freeze, press and hold the power button 6-8 seconds to do a forced shutdown.

- **Battery**

- A rechargeable Li-ion polymer battery is installed in the netbook.
- We suggest you drain the battery completely once a month if you only use your netbook occasionally.
- DO NOT dispose of the netbook in fire.
- Charge the device fully each time to increase the battery life.
- You can charge the device even if the device has some power left in it, as the battery does not need to be fully drained to charge.
- A full charge will use an average of 3 hours.
- **Sleep Mode**

 
- Simply press the power button one time to switch the netbook to Sleep mode when the netbook is ON; press again to wake it up.

Tips:

- Go to setting-Display-Screen timeout to adjust automatic sleep settings.


HOME SCREEN

- Icon on the Bottom Menu

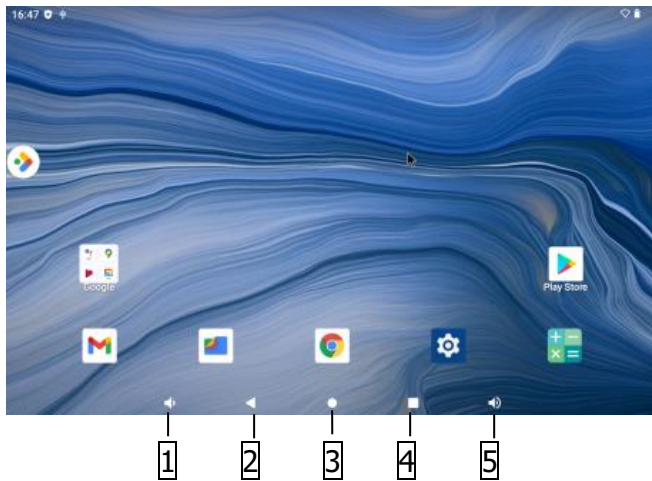

1. Volume-
2. Back
3. Home Screen
4. Recent Activities
5. Volume+

 Wallpapers, Home Settings and Screenshot

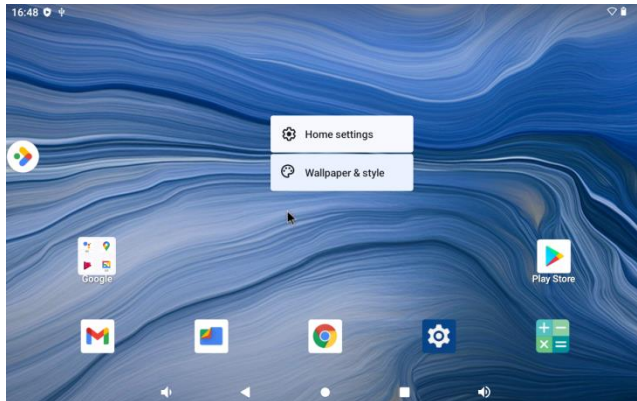

Wallpaper

- Tap and hold the cursor in any blank area on the home screen and you will see a pop-up menu. You can choose a wallpaper & style from the gallery or your downloaded files. Select the one which you like to be the wallpaper.

Home Settings

- Tap and hold the cursor in any black area of the home screen and a pop-up menu will appear. Tap HOME Settings to enable/disable add app icons to the home screen.



Tips:


- Tap an icon and move it on the top of another icon can create a new folder on the

home screen. Open the folder; click "Edit Name" to rename the folder.


BASIC SETTINGS

  
Quick Settings

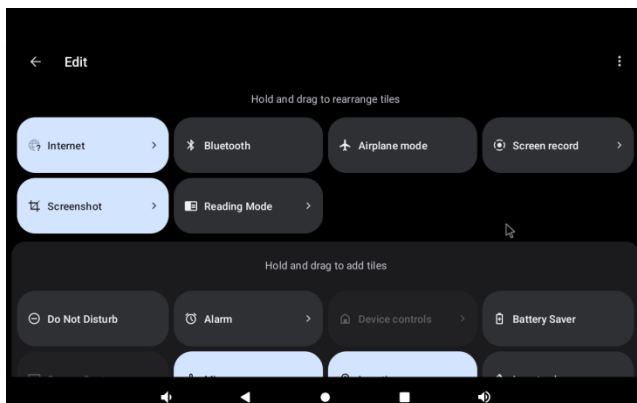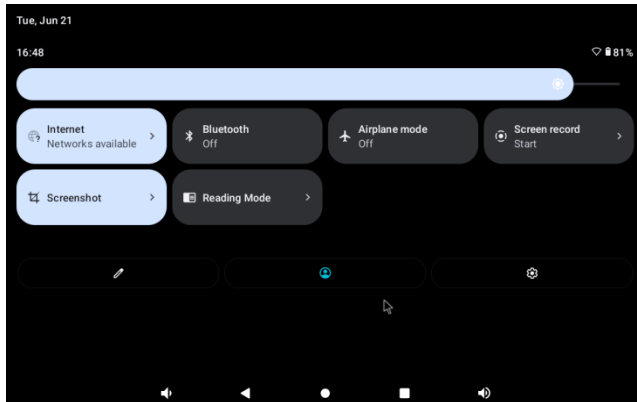


- Swipe down from the top of the screen to access Quick Settings. Tap the  icon to change the options in the Quick settings.

More settings

  - Swipe down from the top of the screen, then tap the  icon to enter the detailed Setting page. You can also tap the Setting icon on the home screen to enter the setting menu.

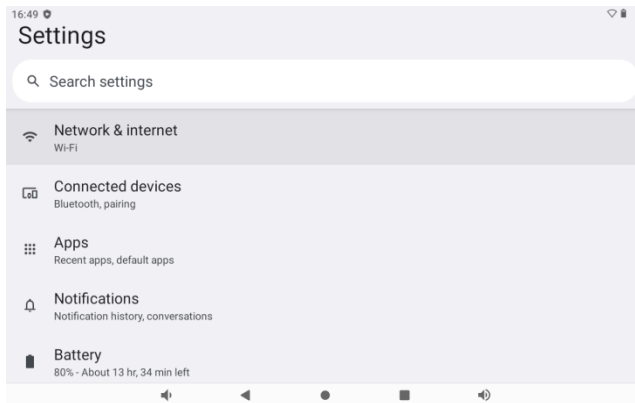

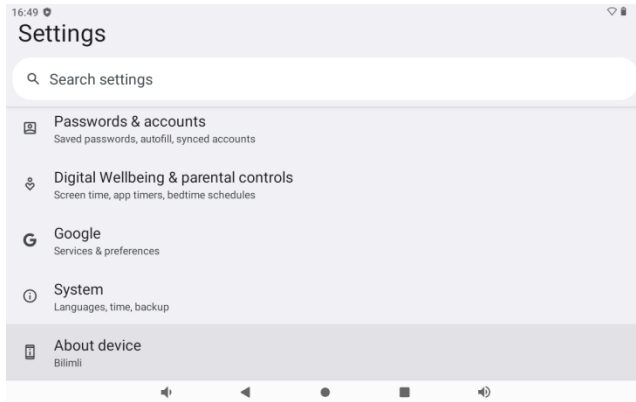

Network & Internet

- Connect to any working Wi-Fi
- Enable/disable airplane mode

Connect Devices

- Cast a device and check casted devices
- Add and check printers

Apps & Notifications

- Check recently opened apps
- Check all apps on the device
- Set app permissions

- Uninstall third-party apps
- Adjust app notification settings
- Clear the cache for apps

Battery

- Display the remaining battery power as a percentage
- Enable/disable battery saver mode

Display

- Adjust the screen brightness
- Adjust the font size and display size
- Set a screensaver
- Change the wallpaper

Sound

- Set volume levels for media, alarms, and notifications
- Set Do not Disturb preferences
- Set the sounds for notifications and alarms
- Turn on/off the sound for screen lock, charging and click

Storage

- View and manage your storage space

Privacy, Security& Location

- Set screen lock pattern, e.g. password, PIN, Swipe etc.
- Enable/disable all notifications while the screen is locked
- Turn on/off the location services for specific apps
- Set show/hide password when input a password

Accessibility

- For vision and hearing impaired users, manage settings for screen readers, subtitles, and more

Google

- Set the preferences for Google related services

System

Set Language

- Tap settings-System-Languages & input-Languages-+Add a language. After added, hold and slide the language to the top to change the language.

Restore Factory Settings

- Tap settings-System-Rest Options-Erase all data(factory reset) to restore to factory settings.

Other Settings

- Set the date and time
- Turn on/off the backup

About Device

 
- Check detailed information about the device.

NETWORK CONNECTION

Go to setting-Network & internet in the setting interface or directly enter through Quick Settings.

Wi-Fi Connection

1. Tap Network & internet, and turn on the Wi-Fi. All available Wi-Fi connections will be listed.
2. Select your Wi-Fi, and input the correct password.

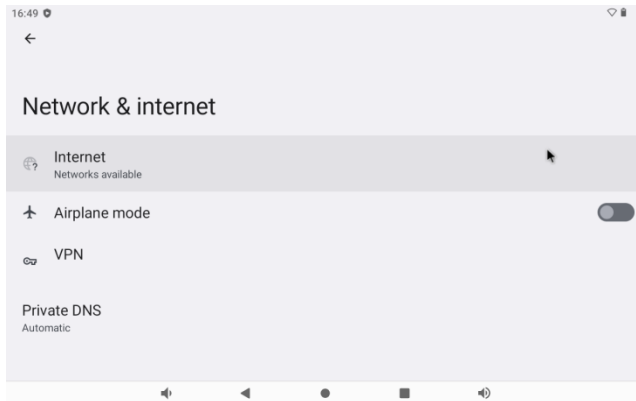

APP MANAGEMENT

App Download and Installation

- Tap and open Play Store on the home screen;

- Log in with your Google account; search and download the apps you need.

Move an App

- Tap and hold the app, then slide to desired screen



Remove an App from the Home Screen

 
- Tap and hold the App, then slide to the X to remove it from your home screen.

 
Uninstall an App

- Tap and hold the app, Then slide to the trash bin to uninstall the app

Clear the App Cache

1. go to setting-Apps-See all apps
2. Select an App- storage & cache-CLEAR CACHE

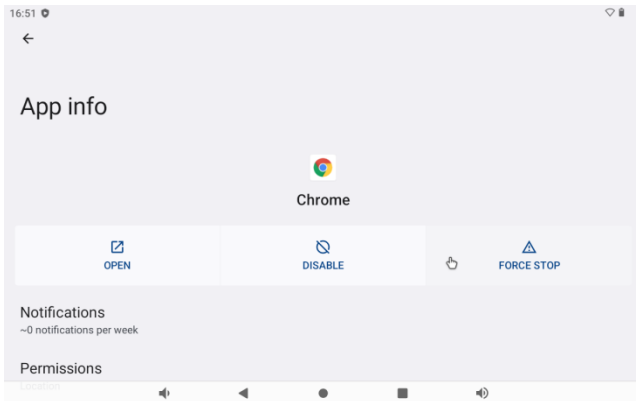

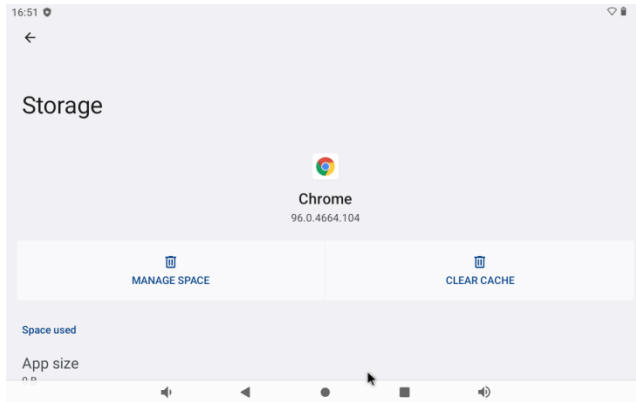

INTERNET NAVIGATION

 
 
Please make sure the device is connected to a working Wi-Fi network before trying to browse the internet.

You can use the Chrome browser that is pre-installed or download another browser from the Play Store.

MULTIMEDIA

Connecting to an External Device

1. Insert a micro SD card or U-disk to the correct slot and go to Quick Settings;
2. Tap to set up;
3. Set the micro SD card or U-disk as a portable storage by selecting use for portable storage, then you can move files between the card and device.

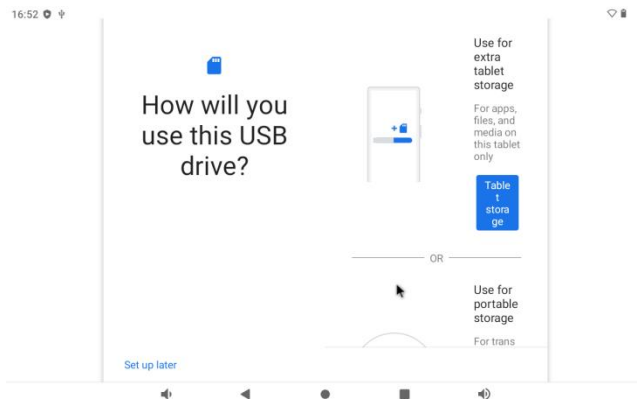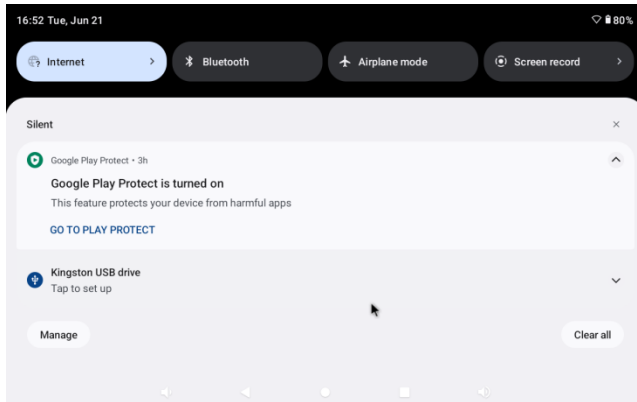

TROUBLESHOOTING

Q1. The device doesn't power on

- Reboot your device after charging for 30 minutes;

- Press the power button to see if the device is in Sleep Mode;

- Press and hold the power button for 8 seconds to turn off the device, then reboot it;

Q2. The device doesn't charge

- Charge the device for at least 30 minutes, in case the battery was completely drained;

- Make sure the charging cable is properly plugged into the charging port;

Q3. Error message occurs during operation

- Uninstall the app displaying the error message, then download and install again;

Q4. The device cannot connect to the Wi-Fi

- Make sure the Wi-Fi on your device is ON;

- Make sure you input the correct password;

- Reboot the router;

- Make sure there is no filter setting or device connection limitation in the settings of the router;

- Forget the current Wi-Fi, reset the router and connect to the network again.

Q5.The storage space of the device is not enough

·Delete the apps you don't use;

·Clear the app cache regularly;

·Insert a micro SD card to expand the storage.

Android is a trademark of Google LLC

Contact Us

For any questions, feel free to contact us. We'll be glad to help you!

E-Mail:Sales@szhonlin.com

Tel: +86-0755-83248907

Manufacturer: Shenzhen Honlin Technology Co., Ltd.

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference

received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types Android laptop (HL-1068-A133) (FCC ID: 2AYBD-HL-1088-A133) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the body is 0.118W/kg. This device was tested for typical body-worn operations with the back of the handset kept 0mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 0mm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided