

001
 (ENTRY POINT A)
 THIS MAP SHOULD NOT BE ENTERED UNLESS AN
 ERROR HAS OCCURRED WHILE EXECUTING
 SYSTEM TEST, AND THEN ONLY WHEN THE
 DEVICE TYPE FIELD IS EQUAL TO HEXADECIMAL'78'.

DOES RTN = 0001 ?
 Y N

002
 DOES RTN = 0002 ?
 Y N

003
 DOES RTN = 0003 ?
 Y N

004
 DOES CKPT = 0000 ?
 Y N

005
 DOES CKPT = 0001 ?
 Y N

006
 DOES CKPT = 0002 ?
 Y N

007
 DOES CKPT = 0003 ?
 Y N

008
 DOES CKPT = 0004 ?
 Y N

009
 DOES CKPT = 0005 ?
 Y N

010
 DOES IO = 07 ?
 Y N

011
 COMMAND REJECT FROM ATTACHMENT CARD
 START INPUT/OUTPUT (ILLEGAL DCB)
 START INPUT/OUTPUT (START CYCLE
 STEAL STATUS)

012
 DOES IN = 03 ?
 Y N

013
 CYCLE STEAL STATUS READ ERROR
 CHECK DCB, FLAGS AND ISB

014
 DOES DEV4 = 0000 ?
 Y N

015
 CYCLE STEAL STATUS RESIDUAL ADDRESS
 ERROR
 DEV4 = EXPECTED ADDRESS
 RSAD = RECEIVED ADDRESS

016
 COMMAND ERROR (ERROR EXPECTED - GOOD
 RECEIVED)
 CHECK DCB, FLAGS AND ISB

017
 DOES IO = 07 ?
 Y N

018
 COMMAND REJECT FROM ATTACHMENT CARD
 START INPUT/OUTPUT (ILLEGAL DCB)
 START INPUT/OUTPUT (START CYCLE STEAL
 STATUS)

019
 DOES IN = 03 ?
 Y N

020
 CYCLE STEAL STATUS READ ERROR
 CHECK DCB, FLAGS AND ISB

021
 DOES DEV4 = 0000 ?
 Y N

022
 CYCLE STEAL STATUS RESIDUAL ADDRESS
 ERROR
 DEV4 = EXPECTED ADDRESS
 RSAD = RECEIVED ADDRESS

023
 COMMAND ERROR (ERROR EXPECTED - GOOD
 RECEIVED)
 CHECK DCB, FLAGS AND ISB

PAGE 3 OF 7

PAGE 4 OF 7

024
DOES IO = 07 ?
Y N

025
COMMAND REJECT FROM ATTACHMENT CARD
START INPUT/OUTPUT (ILLEGAL DCB)
START INPUT/OUTPUT (START CYCLE STEAL
STATUS)

026
DOES IN = 03 ?
Y N

027
CYCLE STEAL STATUS READ ERROR
CHECK DCB, FLAGS AND ISB

028
DOES DEV4 = 0000 ?
Y N

029
CYCLE STEAL STATUS RESIDUAL ADDRESS
ERROR
DEV4 = EXPECTED ADDRESS
RSAD = RECEIVED ADDRESS

030
COMMAND ERROR (ERROR EXPECTED - GOOD
RECEIVED)
CHECK DCB, FLAGS AND ISB

031
DOES IO = 07 ?
Y N

032
COMMAND REJECT FROM ATTACHMENT CARD
START INPUT/OUTPUT (ILLEGAL DCB)
START INPUT/OUTPUT (START CYCLE STEAL
STATUS)

033
DOES IN = 03 ?
Y N

034
CYCLE STEAL STATUS READ ERROR
CHECK DCB, FLAGS AND ISB

035
DOES DEV4 = 0000 ?
Y N

036
CYCLE STEAL STATUS RESIDUAL ADDRESS ERROR
DEV4 = EXPECTED ADDRESS
RSAD = RECEIVED ADDRESS

037
COMMAND ERROR (ERROR EXPECTED - GOOD
RECEIVED)
CHECK DCB, FLAGS AND ISB

038
DOES IO = 07 ?
Y N

039
COMMAND REJECT FROM ATTACHMENT CARD
START INPUT/OUTPUT (ILLEGAL DCB)
START INPUT/OUTPUT (START CYCLE STEAL
STATUS)

040
DOES IN = 03 ?
Y N

041
CYCLE STEAL STATUS READ ERROR
CHECK DCB, FLAGS AND ISB

042
DOES DEV4 = 0000 ?
Y N

043
CYCLE STEAL STATUS RESIDUAL ADDRESS
ERROR
DEV4 = EXPECTED ADDRESS
RSAD = RECEIVED ADDRESS

044
COMMAND ERROR (ERROR EXPECTED - GOOD
RECEIVED)
CHECK DCB, FLAGS AND ISB

045
DOES IO = 07 ?
Y N

046
COMMAND REJECT FROM ATTACHMENT CARD
START INPUT/OUTPUT (ILLEGAL DCB)
START INPUT/OUTPUT (START CYCLE STEAL
STATUS)

047
DOES IN = 03 ?
Y N

048
CYCLE STEAL STATUS READ ERROR
CHECK DCB, FLAGS AND ISB

049
DOES DEV4 = 0000 ?
Y N

050
CYCLE STEAL STATUS RESIDUAL ADDRESS
ERROR
DEV4 = EXPECTED ADDRESS
RSAD = RECEIVED ADDRESS

051
COMMAND ERROR (ERROR EXPECTED - GOOD
RECEIVED)
CHECK DCB, FLAGS AND ISB

052
COMMAND REJECT FROM ATTACHMENT CARD
PREPARE - LEVEL = 1

053
DOES CKPT = 0000 ?
Y N

054
DOES CKPT = 0001 ?
Y N

055
DOES CKPT = 0002 ?
Y N

056
DOES IO = 07 ?
Y N

057
COMMAND REJECT FROM ATTACHMENT CARD
START INPUT/OUTPUT (WRITE SECTOR
CHAINED TO READ SECTOR)

058
DOES IN = 03 ?
Y N

059
WRITE SECTOR CHAINED TO READ SECTOR
FAILED
CHECK DCB, FLAGS AND ISB

PAGE 5 OF 7

PAGE 6 OF 7

060
READ ERROR
DEV4 = XYYY WHERE:
XX = READ DATA
YY = WRITE DATA
CHECK DCB, FLAGS AND ISB

077
DOES CKPT = 0005 ?
Y N

078
GOOD ALTERNATE SECTOR FOUND NOT ON
CYLINDER ONE
DEV4 = CYLINDER NUMBER (OTHER THEN
ONE)

061
DOES IO = 07 ?
Y N

079
ALL SECTORS MARKED BAD ON TRACK ZERO
DEV4 = CYLINDER NUMBER

062
COMMAND REJECT FROM ATTACHMENT CARD
START INPUT/OUTPUT (SEEK C.E. TRACK)

080
SEEK ERROR (WRONG CYLINDER NUMBER)
DEV4 = EXPECTED NUMBER
DEV2 = RECEIVED NUMBER

063
DOES IN = 03 ?
Y N

081
DOES IO = 07 ?
Y N

064
SEEK FAILED
CHECK DCB, FLAGS AND ISB

082
COMMAND REJECT FROM ATTACHMENT CARD
START INPUT/OUTPUT (SEEK CHAINED TO
READ SECTOR ID)
START INPUT/OUTPUT (READ SECTOR ID)

065
RECALIBRATE FAILED OR C.E. TRACK IS BAD
DEV1 SHOULD BE EQUAL TO XX00
DEV2 SHOULD BE EQUAL TO 012E

083
SEEK CHAINED TO READ SECTOR ID FAILED OR
READ SECTOR ID FAILED
CHECK DCB, FLAGS AND ISB

066
DOES IO = 07 ?
Y N

084
DOES IO = 07 ?
Y N

067
COMMAND REJECT FROM ATTACHMENT CARD
START INPUT/OUTPUT (READ SECTOR ID)

085
COMMAND REJECT FROM ATTACHMENT CARD
START INPUT/OUTPUT (READ SECTOR ID)

068
READ SECTOR ID ERROR
CHECK DCB, FLAGS AND ISB

086
DOES IN = 03 ?
Y N

069
DOES IO = 07 ?
Y N

087
READ SECTOR ID FAILED
CHECK DCB, FLAGS AND ISB

070
COMMAND REJECT FROM ATTACHMENT CARD
PREPARE - LEVEL = 1
START INPUT/OUTPUT (RECALIBRATE)

088
SECTOR FLAG BYTE OR CYLINDER NOT EQUAL TO
ZERO
DEV1 NOT EQUAL TO XX00 AND/OR
DEV2 NOT EQUAL TO 0000
CHECK DCB, FLAGS AND ISB

071
RECALIBRATE FAILED
CHECK DCB, FLAGS AND ISB

089
DOES IO = 07 ?
Y N

072
DOES CKPT = 0000 ?
Y N

090
COMMAND REJECT FROM ATTACHMENT CARD
START INPUT/OUTPUT (SEEK)

073
DOES CKPT = 0001 ?
Y N

091
SEEK FAILED - (CYLINDER ZERO)
CHECK DCB, FLAGS AND ISB

074
DOES CKPT = 0002 ?
Y N

092
DOES IO = 07 ?
Y N

075
DOES CKPT = 0003 ?
Y N

093
COMMAND REJECT FROM ATTACHMENT CARD
PREPARE - LEVEL = 1
START INPUT/OUTPUT (RECALIBRATE)

076
DOES CKPT = 0004 ?
Y N

094
RECALIBRATE FAILED
CHECK DCB, FLAGS AND ISB

A
1

095
DOES CKPT = 0000 ?
Y N

096
DOES CKPT = 0001 ?
Y N

097
DOES IO = 07 ?
Y N

098
COMMAND REJECT FROM ATTACHMENT CARD
PREPARE - LEVEL = 2
START INPUT/OUTPUT (SEEK)

099
SEEK FAILED
CHECK DCB, FLAGS AND ISB

100
DOES IO = 07 ?
Y N

101
COMMAND REJECT FROM ATTACHMENT CARD
PREPARE - LEVEL = 1
START INPUT/OUTPUT (SEEK)

102
SEEK FAILED
CHECK DCB, FLAGS AND ISB

103
DOES IO = 07 ?
Y N

104
COMMAND REJECT FROM ATTACHMENT CARD
RESET
READ DEVICE ID
PREPARE - LEVEL = 0
START INPUT/OUTPUT (SEEK)

105
DOES IN = FF ?
Y N

106
SEEK FAILED
CHECK DCB, FLAGS AND ISB

107
WRONG ID RECEIVED ON LEVEL - 0
DEV4 = ID EXPECTED
CS-8 = ID RECEIVED