

FEAT #2095/2096

PAGE 1 OF 4

ENTRY POINTS

-----			
FROM	ENTER THIS MAP		
-----			
MAP	ENTRY	PAGE	STEP
NUMBER	POINT	NUMBER	NUMBER
-----			
EA01	A	1	003

EXIT POINTS

-----			
EXIT THIS MAP		TO	
-----			
PAGE	STEP	MAP	ENTRY
NUMBER	NUMBER	NUMBER	POINT
-----			
4	019	EA03	A

001  
DO NOT LOAD THIS MAP. IT NEEDS  
DATA PASSED FROM ANOTHER MAP  
EA00. LOAD MAP EA00.

CHECK FOR MANUAL LOAD

WAS THIS MAP LOADED BY ANOTHER  
MAP?

MDI=\$TUXX,TEA00,2,FFFF,EQ

Y N

| 002  
| LOAD MAP EA00  
| DO NOT LOAD THIS MAP. IT NEEDS  
| DATA PASSED FROM ANOTHER MAP  
| EA00. LOAD MAP EA00.  
| MDI=\$FIXT

003  
(ENTRY POINT A)

CONNECT INTERRUPT POINTER FOR DCP  
RESULT=0?

MDI=\$TUXX,TEA0F,2,0000,EQ

Y N

| 004  
| GO TO MAP 0070  
| MDI=\$FIXT

COPYRIGHT IBM CORP 1976

16APR82 PN6838101

REVISED 1979

EC326765 PEC876895



B  
2

FPMLC AUTOMATIC MAP

MAP EA02-3

FEAT #2095/2096

PAGE 3 OF 4

011  
CYCLE STEAL TO HIGH STORAGE ADDRESS  
RESULT= 0?  
MDI=\$TUXX,TEA48,2,0000,EQ  
Y N  
012  
TEST FOR BAD STORAGE ACCESS  
RESULTS=5?  
MDI=\$TUXX,TEA49,2,0005,EQ  
Y N  
013  
IMPROPER STORAGE DEFINED  
RESULTS=6?  
MDI=\$TUXX,TEA49,2,0006,EQ  
Y N  
014  
UNEXPECTED ERROR, CHECK  
CONFIGURATION, IF OK,  
EXCHANGE FEATURE CARD  
VERIFY THE REPAIR.  
MDI=\$FIXT  
015  
STORAGE IMPROPERLY DEFINED,  
CHECK CONFIGURATION TABLE  
MDI=\$FIXT  
016  
STORAGE ACCESS ERROR, EXCHANGE  
ADAPTER  
VERIFY THE REPAIR.  
MDI=\$FIXT

VERIFY ABILITY TO ACCESS MAX  
STORAGE

TEST FOR BAD STORAGE ACCESS

CHECK CONFIGURATION TABLE STORAGE  
SIZE

16APR82 PN6838101

EC326765 PEC876895

4  
C

MAP EA02-3

C  
3

FPMLC AUTOMATIC MAP

MAP EA02-4

FEAT #2095/2096

PAGE 4 OF 4

|  
|  
|  
|  
017

RESET COMMAND ALL ATTACHED RESET COMMAND  
DEVICES

RESULT= 0?

MDI=\$TUXX,TEA01,2,0000,EQ

Y N

|  
| 018

| EXCHANGE CONTROLLER CARD

| VERIFY THE REPAIR.

| MDI=\$FIXT

|  
019

END OF MAP EA02

GO TO MAP EA03, ENTRY POINT A.

MDI=\$GOTO,TYPE=XTRNL,EP=A,

MAP=EA03

16APR82 PN6838101

EC326765 PEC876895

MAP EA02-4