

HP 24-Port 4x Fabric Copper Switch Hardware User Guide



November 2004 (First Edition)
Part Number 377709-001

© Copyright 2004 Hewlett-Packard Development Company, L.P.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

HP 24-Port 4x Fabric Copper Switch Hardware User Guide

November 2004 (First Edition)

Part Number 377709-001

Regulatory Notices V

Regulatory Model Number	v
Federal Communications Commission Notice	v
Modifications	v
Cables.....	vi
Canadian Notice (Avis Canadien)	vi
European Union Regulatory Notice.....	vi
Japanese Notice.....	vi
Korean Notice	vii
BSMI Notice	vii
Battery Replacement Notice	vii
Taiwan Battery Recycling Notice.....	viii
Power Cord Statement for Japan.....	viii
Electrostatic Discharge	viii
Preventing Electrostatic Damage.....	viii
Grounding Methods To Prevent Electrostatic Damage	ix
Power Cords.....	ix
Contact Information.....	ix

1: Features Overview 1

System Architecture.....	1
InfiniBand Connectivity	1
Scalability	1
Hi-Availability	1
Non-Blocking Architecture.....	2
Switch Chassis	2
Size.....	2
Connections	3
LEDs	3
Power Supplies/Fan Units.....	3
Administrative Features.....	3
Real-Time Clock.....	3
Latency.....	3
Non-Volatile Memory.....	3
Vital Product Data Storage	4
Diagnostics.....	4

2: Installing the HP 24-Port 4x Fabric Copper Switch..... 5

Prepare the Site	5
Read the Cautionary Statements	5
Prepare the Physical Environment for the Switch	5

Configure Basic Connectivity	6
Attach a Serial Management Cable to a PC or Terminal	6
Power on the Chassis	6
Mount the Switch Chassis in a Rack	7
Requirements	7
Rack Mount Installation	7
Connect Network Devices	11
About Connectors	11
Connecting InfiniBand Devices	12
Connecting Management Devices	14
Manage the System	15

3: Managing Individual Components..... 17

Power/Fan Modules	17
About a Failed Power/Fan Unit	17
Locating the Power Supply/Fan Unit	17
Removing a Power Supply/Fan Unit	17

4: Monitoring the HP 24-Port 4x Fabric Copper Switch..... 19

Using the LEDs	19
Chassis Status LEDs	19
Interpreting the Chassis LEDs	20
InfiniBand Port LEDs	20
Power Supply/Fan LEDs	21
Monitoring the System with Element Manager	22
Interpreting the Summary Tab	22
Interpreting the Power Supplies Tab	22
Interpreting the Fans Tab	23
Interpreting the Sensors Tab	23
Monitor the System With the CLI	23

5: Hardware Diagnostic Tests 27

Diagnostic Tests	27
The Self Test	27
Running a Card Self-Test	28
Run a Test on the Power Supply/Fan	30
Run an LED Test on the Power Supply/Fan	30
Displaying Hardware Errors	30

6: Specifications and Compliance Certifications 33

Chassis and Management Interface	33
Electrical Specifications	34
EMC/Immunity	34
Safety	34
Acoustics.....	34
Product Markings.....	35

Regulatory Notices

Regulatory Model Number

For the purpose of regulatory compliance certifications and identification, this product has been assigned a unique regulatory model number. The regulatory model number can be found on the product nameplate label, along with all required approval markings and information. When requesting compliance information for this product, always refer to this regulatory model number. The regulatory model number is not the marketing name or model number of the product.

Federal Communications Commission Notice

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at personal expense.

Modifications

The FCC requires the user to be notified that any changes or modifications made to this device that are not expressly approved by Hewlett-Packard Company may void the user's authority to operate the equipment.

Cables

Connections to this device must be made with shielded cables with metallic RFI/EMI connector hoods in order to maintain compliance with FCC Rules and Regulations.

Canadian Notice (Avis Canadien)

This Class A digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

Cet appareil numérique de la classe A respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

European Union Regulatory Notice

This product complies with the following EU Directives:

- Low Voltage Directive 73/23/EEC
- EMC Directive 89/336/EEC

Compliance with these directives implies conformity to applicable harmonized European standards (European Norms) which are listed on the EU Declaration of Conformity issued by Hewlett-Packard for this product or product family.

This compliance is indicated by the following conformity marking placed on the product:



This marking is valid for non-Telecom products and EU harmonized Telecom products (e.g. Bluetooth).



This marking is valid for EU non-harmonized Telecom products.
*Notified body number (used only if applicable - refer to the product label)

Japanese Notice

この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準に基づくクラス A 情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。

Korean Notice

A급 기기 (업무용 정보통신기기)

이 기기는 업무용으로 전자파적합등록을 한 기기이오니 판매자 또는 사용자는 이 점을 주의하시기 바라며, 만약 잘못판매 또는 구입하였을 때에는 가정용으로 교환하시기 바랍니다.

BSMI Notice

警告使用者：

這是甲類的資訊產品，在居住的環境中使用時，可能會造成射頻干擾，在這種情況下，使用者會被要求採取某些適當的對策。

Battery Replacement Notice

Your computer is equipped with an internal lithium battery or battery pack. There is a danger of explosion and risk of personal injury if the battery is incorrectly replaced or mistreated. Unless specific replacement instructions are provided as part of this guide, replacement is to be done by an authorized service provider using the HP spare designated for this product. For more information about battery replacement or proper disposal, contact your authorized reseller or your authorized service provider.



WARNING: Your computer contains an internal lithium battery or battery pack. There is risk of fire and burns if the battery pack is not properly handled. To reduce the risk of personal injury:

- ² Do not attempt to recharge the battery.
- ² Do not expose to temperatures higher than 60°C.
- ² Do not disassemble, crush, puncture, short external contacts, or dispose of in fire or water.
- ² Replace only with the HP spare designated for this product.



Batteries, battery packs, and accumulators should not be disposed of together with the general household waste. To forward them to recycling or proper disposal, please use the public collection system or return them to HP, your authorized HP partners, or their agents.

Taiwan Battery Recycling Notice

The Taiwan EPA requires dry battery manufacturing or importing firms in accordance with Article 15 of the Waste Disposal Act to indicate the recovery marks on the batteries used in sales, giveaway or promotion. Contact a qualified Taiwanese recycler for proper battery disposal.



Power Cord Statement for Japan

製品には、同梱された電源コードをお使い下さい。
同梱された電源コードは、他の製品では使用出来ません。

Electrostatic Discharge

Preventing Electrostatic Damage

A discharge of static electricity from a finger or other conductor may damage system boards or other static-sensitive devices. This type of damage may reduce the life expectancy of the device.

To prevent electrostatic damage when setting up the system or handling parts:

- Avoid hand contact by transporting and storing products in static-safe containers.
- Keep electrostatic-sensitive parts in their containers until they arrive at static-free workstations.
- Place parts on a grounded surface before removing them from their containers.
- Avoid touching pins, leads, or circuitry.
- Handle parts by edges only.

- Avoid contact between the parts and clothing (for example, a wool sweater) . Wrist straps only protect parts of the body from ESD voltages.
- Do not wear jewelry.
- Always be properly grounded when touching a static-sensitive component or assembly.

Grounding Methods To Prevent Electrostatic Damage

There are several methods for grounding. Use one or more of the following methods when handling or installing electrostatic-sensitive parts:

- Use a wrist strap connected by a ground cord to a grounded workstation or computer chassis. Wrist straps are flexible straps with a minimum of 1 megohm \pm 10 percent resistance in the ground cords. To provide proper ground, wear the strap snug against the skin.
- Use heel straps, toe straps, or boot straps at standing workstations. Wear the straps on both feet when standing on conductive floors or dissipating floor mats.
- Use conductive field service tools.
- Use a portable field service kit with a folding static-dissipating work mat.

If you do not have any of the suggested equipment for proper grounding, have an authorized reseller install the part.

For more information on static electricity, or assistance with product installation, contact your authorized reseller.

Power Cords

The power cord set included with your product meets the requirements for use in with a power distribution unit in a rack environment. If you need use this server elsewhere, you should purchase a power cord that is approved for use in that environment and country.

The power cord must be rated for the product and for the voltage and current marked on the product's electrical ratings label. The voltage and current rating of the cord should be greater than the voltage and current rating marked on the product. In addition, the cross sectional area of the wire must be a minimum of 1.00 mm² or 18AWG, and the length of the cord must be between 6 feet (1.8 m) and 12 feet (3.6 m). If you have questions about the type of power cord to use, contact your Compaq authorized service provider.

A power cord should be routed so that it is not likely to be walked on or pinched by items placed upon it or against it. Particular attention should be paid to the plug, electrical outlet, and the point where the cord exits from the product

Contact Information

Table 1-1: Customer Contact Information

For the name of your nearest authorized HP reseller:	In the United States, call 1-800-345-1518. In Canada, call 1-800-263-5868.
--	---

Table 1-1: Customer Contact Information

For HP technical support:	<p>In the United States and Canada, call 1-800-HP-INVENT (1-800-474-6836). This service is available 24 hours a day, 7 days a week. For continuous quality improvement, calls may be recorded or monitored.</p> <p>Outside the United States and Canada, refer to www.hp.com</p>
---------------------------	--

Features Overview

The HP 24-Port 4x Fabric Copper Switch provides data center managers with a high-performance, low-latency interconnect.

- [“System Architecture” on page 1.](#)
- [“Switch Chassis” on page 2.](#)
- [“Administrative Features” on page 3.](#)

System Architecture

InfiniBand Connectivity

The HP 24-Port 4x Fabric Copper Switch can be used in a variety of networking environments, including database tiers, application tiers, and web tiers. The HP 24-Port 4x Fabric Copper Switch provides 10 Gbps connectivity to servers.

InfiniBand™ enabled servers are automatically recognized as they are connected.

Scalability

The HP 24-Port 4x Fabric Copper Switch can scale to manage up to 256 hosts.

Hi-Availability

Hardware

The HP 24-Port 4x Fabric Copper Switch features hot-swappable redundant power and cooling.

Ports

No failure on any single InfiniBand™ port will result in interruptions in service for any of the other ports.

Fabric

For redundancy, InfiniBand Host Channel Adapters can be dual-connected to a redundant pair of HP 24-Port 4x Fabric Copper Switches.

In an InfiniBand fabric that includes more than one HP 24-Port 4x Fabric Copper Switch: if the subnet manager on the switch that is acting as the master fails, another subnet manager will take over within seconds.

There should be no interruption in traffic on the InfiniBand fabric or on the failed device if the only part that failed was the management board, and all necessary state information is kept in sync.

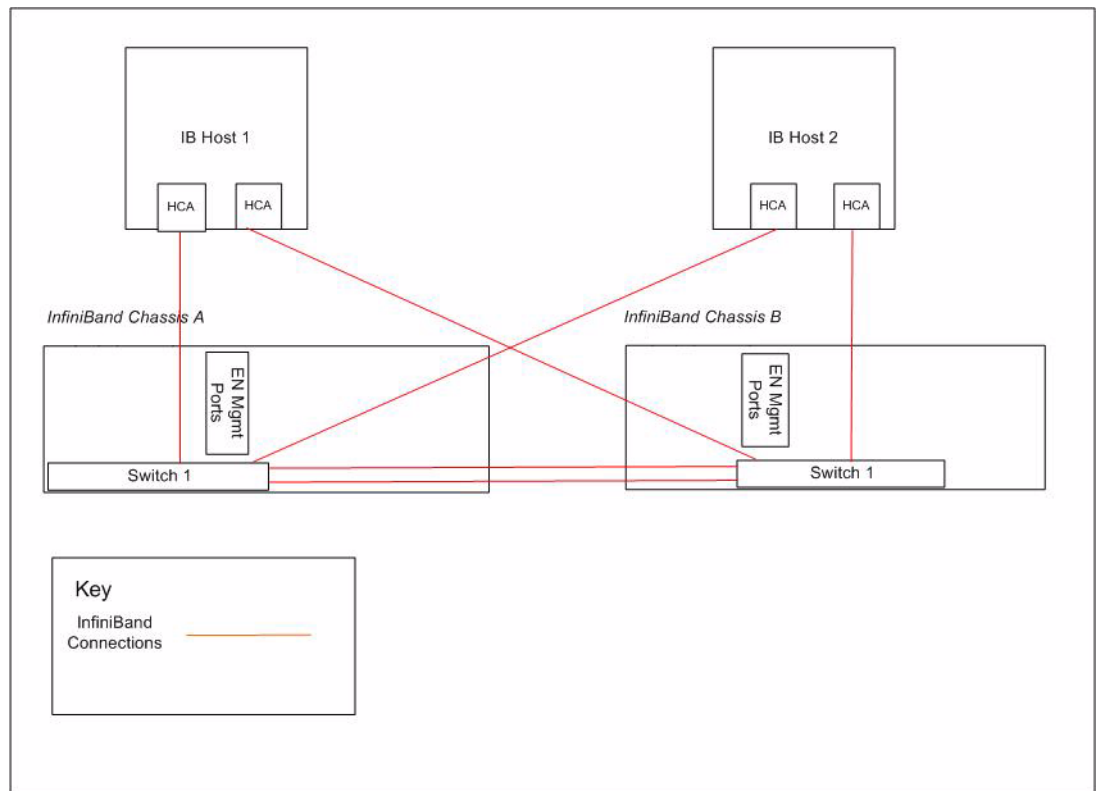


Figure 1-1: Example of Redundant InfiniBand Fabric

Non-Blocking Architecture

The HP 24-Port 4x Fabric Copper Switch provides non-blocking switch element architecture with full bisectional bandwidth for the switch chassis.

Switch Chassis

The HP 24-Port 4x Fabric Copper Switch includes the following hardware features:

Size

- **Height:** 1U unit.

- **Width:** Standard 19" rack mount width.
- **Weight:** 30 lbs.

Connections

- 24 ports of 10 Gbps 4X Copper InfiniBand.
- One 10/100 Ethernet RJ-45 Management-Ethernet port for out-of-band management.
- One RJ-45 Console Port used to configure and monitor the switch.

LEDs

Chassis LEDs

The chassis LEDs show overall system status, power status, and fan status. LEDs and their use are described in (see [“Chassis Status LEDs” on page 19](#)).

InfiniBand Port LEDs

The InfiniBand port LEDs show link status, diagnostics, and network traffic. LEDs and their use are described in [“Using the LEDs” on page 19](#).

Power Supplies/Fan Units

Refer to [“Removing a Power Supply/Fan Unit” on page 17](#) for more information.

About the Power Supply Bay

The chassis provides dual independent IEC connectors, left and right justified.

About the Power Supplies/Fan Trays

The power supplies are:

- redundant, and hot-swappable
The replacement of any one power supply/fan tray does not disrupt the operation of the device in anyway, and can be successfully completed without having to remove the device from a rack, or disconnecting any cables.
- auto-ranging 90-264VAC, 47-63Hz.

Administrative Features

Real-Time Clock

The HP 24-Port 4x Fabric Copper Switch maintains correct time regardless of power conditions or connectivity.

Latency

The HP 24-Port 4x Fabric Copper Switch has port to port latency of less than 200ns.

Non-Volatile Memory

The memory supports up to:

- three stored system images (not including recovery image)
- one week of log files at normal verbosity; and one day of log files at maximum verbosity

Vital Product Data Storage

Vital Product Data is stored in non-volatile memory in the power supply and is available electronically. The following Vital Product Data is accessible by the maintenance processor and made available to the RS-232 and Ethernet ports regardless of power conditions or connectivity.

- Power on hours
- Manufacturing part number
- Serial number
- Final test date
- Card ID
- Failure code
- Failure date
- Operation status
- Failure log
- OEM part number

Diagnostics

Refer to [“Hardware Diagnostic Tests” on page 27](#) for more detailed information.

The following tests are used to run to determine operational status:

- Power On Self Test (POST) is performed on all system components is required during power on to determine operational readiness.
- Redundant components' operational status is ensured periodically during normal operation, including the logic required to perform the transition from faulted/primary to redundant component. Detection of abnormal status is reported.
- Concurrent port loopback tests, including the capability to wrap an external signal from input port to output port, are available.

Installing the HP 24-Port 4x Fabric Copper Switch

This chapter describes how to install and manage the HP 24-Port 4x Fabric Copper Switch hardware.

- [“Prepare the Site” on page 5](#)
- [“Configure Basic Connectivity” on page 6](#)
- [“Mount the Switch Chassis in a Rack” on page 7](#)
- [“Connect Network Devices” on page 11](#)
- [“Manage the System” on page 15](#)

Prepare the Site

This section provides information that you need to safely and successfully prepare your environment for your HP 24-Port 4x Fabric Copper Switch. Read this section carefully before you install your device.

Read the Cautionary Statements

Refer to the “Regulatory Notices.”

Prepare the Physical Environment for the Switch

- Ground yourself using an approved ground wrist-strap.
- Make sure you have the right cables and sufficient ventilation.
- Unpack the HP 24-Port 4x Fabric Copper Switch package.
- Prepare a management workstation, such as a PC running a terminal program.

Configure Basic Connectivity

Attach a Serial Management Cable to a PC or Terminal

1. Connect the cable from the switch serial console to your terminal or management workstation; use the straight-through serial management cable, which is provided in the HP 24-Port 4x Fabric Copper Switch package.
2. Open a terminal emulation window using a program such as HyperTerminal for Windows. Set your terminal parameters to the following:
 - Baud: **9600 bps**
 - Data Bits: **8**
 - Parity: **None**
 - Stop Bits: **1**
 - Flow control: **None**

Power on the Chassis

Use only the power cables provided with your InfiniBand system or an equivalent cable.

1. Inspect the power cables and determine if they provide the proper plug and is appropriately certified for use with your electrical system. Discard the cables if they are inappropriate for your national electrical system and obtain the proper cable, as required by your national electrical codes or ordinances.

Grounding is supplied by the ground-prong on the 3-prong power plug. Do not attach a separate ground cable. Do not use adapter plugs. Do not remove the ground prong from the cable. Ensure the ground connection on the power supply is correct and functioning before applying power to the chassis.

2. Remove the power cables from the shipping package.
There should be two power cables, IEC C14.
3. Insert the power cables to the power jacks on the rear of the chassis.
Refer to [Figure 2-1](#) for power jack locations.

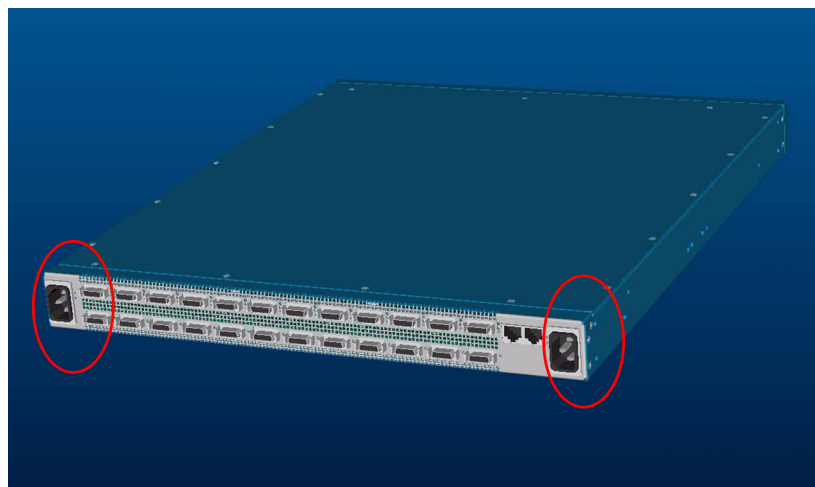


Figure 2-1: Power Jack Locations

4. Plug the other end of each power cable into a 90-264VAC power outlet operating at 47-63Hz. The chassis automatically starts and boots. Use the correct external power-source. Attach the chassis only to approved power sources, as indicated by the electrical ratings label. If you are unsure of the correct power-source to use, contact your support personnel or your local power company.
5. Check the LEDs on the front of the HP 24-Port 4x Fabric Copper Switch. When the system first powers up, it performs a power-on self test (POST). Refer to [“Using the LEDs” on page 19](#).
6. In the terminal emulation window of the system being used to administer the switch, press **Enter** one or more times to display the CLI prompt.

Login:

Once you see this prompt, you can log in and assign a network address.

The default login is:

- **super**
- **super**

Proceed to the *HP 24-Port 4x Fabric Copper Switch User Guide* for additional management information.

Mount the Switch Chassis in a Rack

This section describes how to install the HP 24-Port 4x Fabric Copper Switch chassis in an equipment rack.

Requirements

In addition to the accessories provided with the switch, you should have:

- A #1 Phillips screw driver
- 12 screws and any associated mounting clips to secure the brackets to your rack (2 for each rail of the rack).

Note: Installing the rack to the system with screws other than the ones provided could be hazardous.

- Two people are recommended to perform install.

Rack Mount Installation

To mount the switch chassis in a rack:

1. Remove the chassis, rack brackets, parts bag, and documentation from the box.
2. Place the chassis on a secure, clean surface.
3. Open the plastic bag containing mounting parts.
4. Check the slot in the rack for sufficient clearance.
5. Determine the desired method of installation:
 - [“Installing the Switch with One Person” on page 8](#)
 - [“Installing the Switch with Two People” on page 10](#)

Installing the Switch with One Person

The following method of installation is easier with two people, but can be accomplished with one person. It can be difficult to align the switch correctly along the rack rails with only one person.

1. Take one set of rack brackets and separate them. Each side arrives assembled to its counterpart, but should be separated before attaching to the switch when using this method of installation.

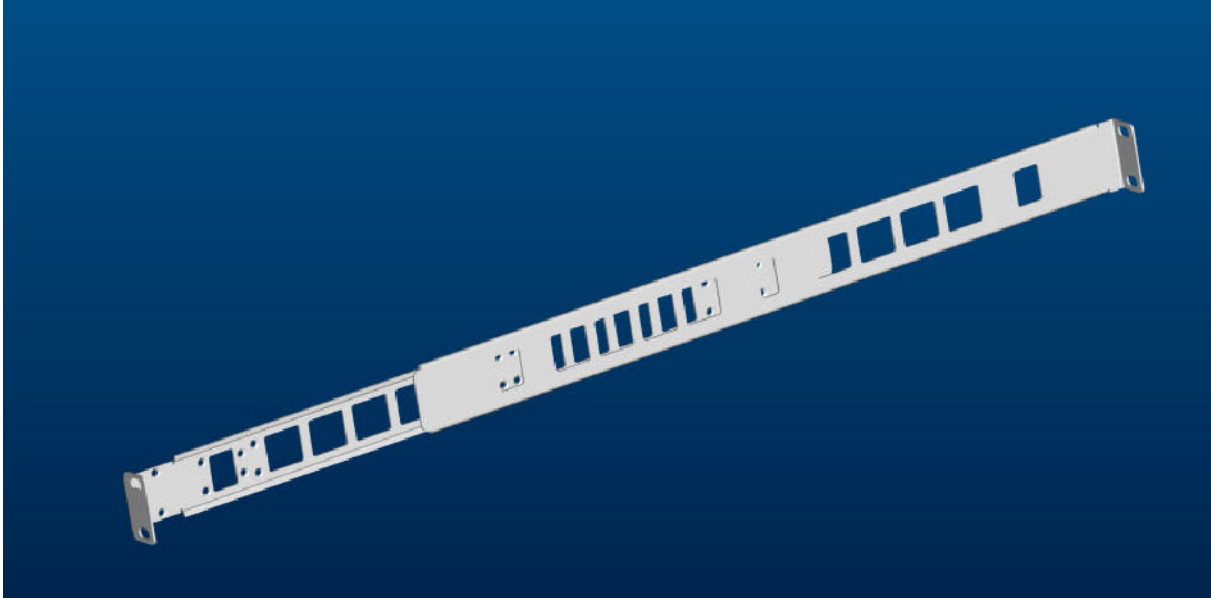


Figure 2-2: Assembled Rail Brackets

2. Attach the bracket that has the screw holes to the side of the chassis with the flange facing away from the switch, as shown in [Figure 2-3](#).

The standard method is to face the flange toward the front of the chassis. However, you can also mount the flange toward the back if you want to mount the switch backward in the chassis (service-side forward).



Figure 2-3: Attaching One Rail to Switch Chassis

3. Repeat steps [1](#) and [2](#) on the opposite side of the switch chassis.
The two counterparts to these sliding rack brackets (that do not have screw holes) should still be unattached.
4. Check the rack for clearance for the switch. The switch can be installed either directly on top of another device, or be suspended from the rack posts.

5. Attach the remaining 2 rack brackets to your rack.
 - a. Orient a bracket toward the back of the rack with the flange facing away from the rack. The flange should go around the outside of the rack post, as shown in [Figure 2-4](#).
(Note: If you are mounting the switch backward, the rack bracket should be installed to the front of the rack).
 - b. Secure the rack bracket with your screws through the back of the rack, as shown in [Figure 2-5](#).
 - c. Repeat on both sides of the rack.

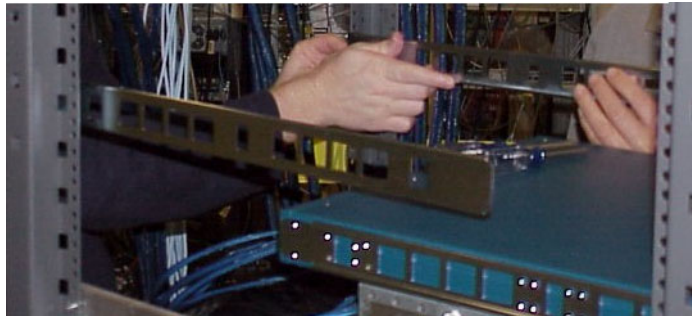


Figure 2-4: Holding Bracket Against Inside of Rack



Figure 2-5: Secure Rail Bracket to Rack with Screws

6. Lift the switch unit and align the brackets on the switch with the brackets in the rack before sliding the brackets together.
7. Carefully push the switch unit into the rack.
If the brackets do not slide easily, the alignment may be off. Pull the switch back toward you and realign the brackets.



Figure 2-6: Sliding the Switch Into the Rack

8. Maintain at least six inches between the cooling vents and any obstructions.

9. Secure the switch with your screws through the front of the rack, as show in [Figure 2-7](#).



Figure 2-7: Secure switch with screws through the front of the rack

Installing the Switch with Two People

The following method of installation requires two people to mount the chassis into the rack. One person holds the switch while another person secures it to the rack.

1. Separate the assembled rack brackets.

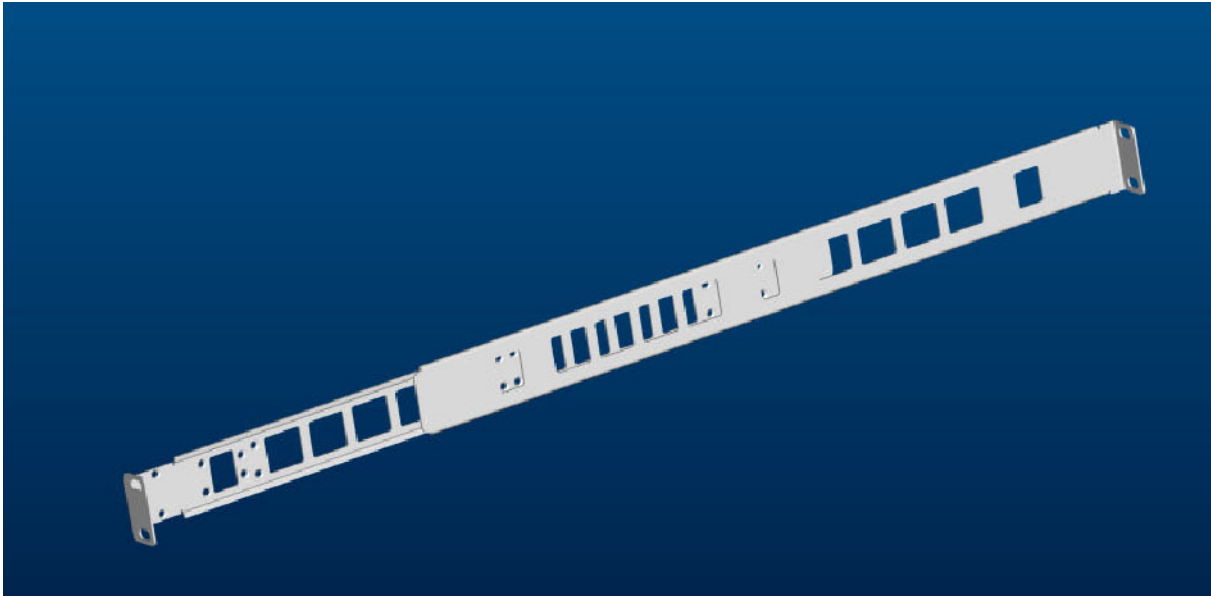


Figure 2-8: Separate Assembled Brackets before Mounting onto Switch

2. Attach the rack bracket that has screw holes to the sides of the switch chassis with the screws provided.

When attaching the rack bracket, the flanges of the rack bracket should be facing away from the switch chassis, as shown in [Figure 2-9](#).



Figure 2-9: Fasten Bracket to Switch Chassis

3. Assemble rack bracket to their counterparts before inserting the switch into the rack.
4. Insert the switch into the rack with the rack bracket attached. You will have to tilt the switch unit to one side to avoid hitting the sides of the rack bracket with the brackets as they pass around the back rails.

Return the switch unit to a horizontal position once the switch is inside the rack. The rear bracket flanges should wrap around the outside of the back rack post.

5. Have one person hold the switch while another person secures the switch to the rack.
6. Maintain at least six inches between the cooling vents and any obstructions.
7. Attach the rack bracket to the back of the rack posts with the screws included with the switch.
8. Attach the front rails to the front of the rack with the included screws, as shown in [Figure 2-10](#).



Figure 2-10: Secure the Switch Through the Front Rack Rail

Connect Network Devices

This section describes how to connect the InfiniBand system to other network devices. InfiniBand devices can be connected to InfiniBand-enabled servers.

About Connectors

The HP 24-Port 4x Fabric Copper Switch supports the following types of connectors:

- Management ports:
 - Serial console port: male DB-9 connector.
 - Ethernet Management port: RJ-45 jack for unshielded twisted-pair connections.
- Switch card: 4x 10 Gbps InfiniBand connectors.

Connecting InfiniBand Devices

To connect using InfiniBand to other workstations or switches, standard 4x InfiniBand cables are required. InfiniBand cables can be used to connect any two InfiniBand devices, whether switch or host.

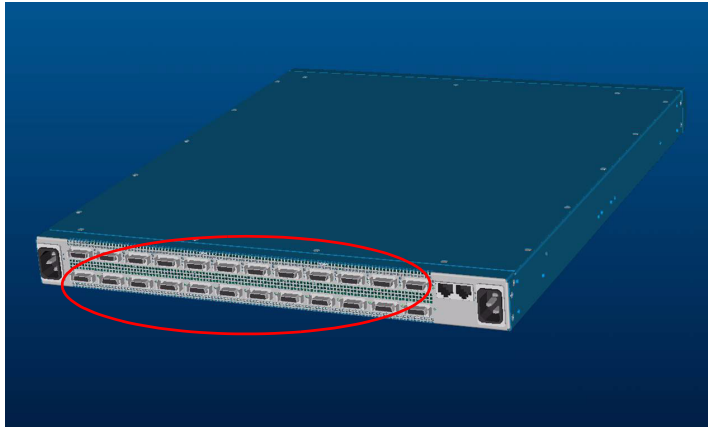


Figure 2-11: InfiniBand Port Connections

1. Plug InfiniBand Cables from the host to the InfiniBand switch.
 - a. To plug in an InfiniBand cable, push the connector into the interface until you hear/feel a click.

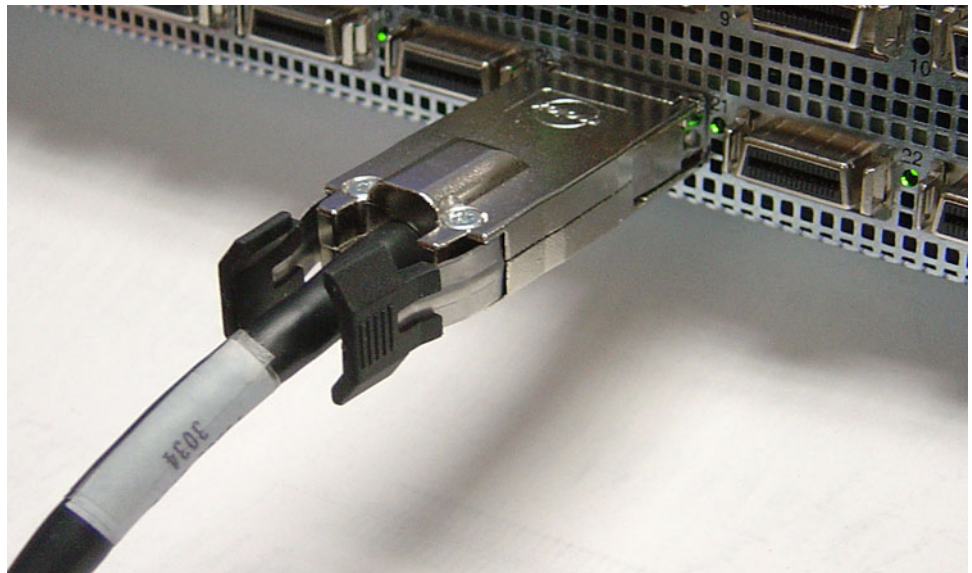


Figure 2-12: Fully Installed IB Cable with Pinch Connector



Figure 2-13: Fully Installed IB Cable with Pull Connector



NOTE: If your host does not provide an ample amount of free space around a given IB port, double-check that your IB cable connector engages fully. Wiggle your connector back and forth to be sure that both sides of the connector have locked firmly into place.

- b. To remove a cable with a pinch connector, pinch both sides of the back of the connector and pull the connector away from the port.

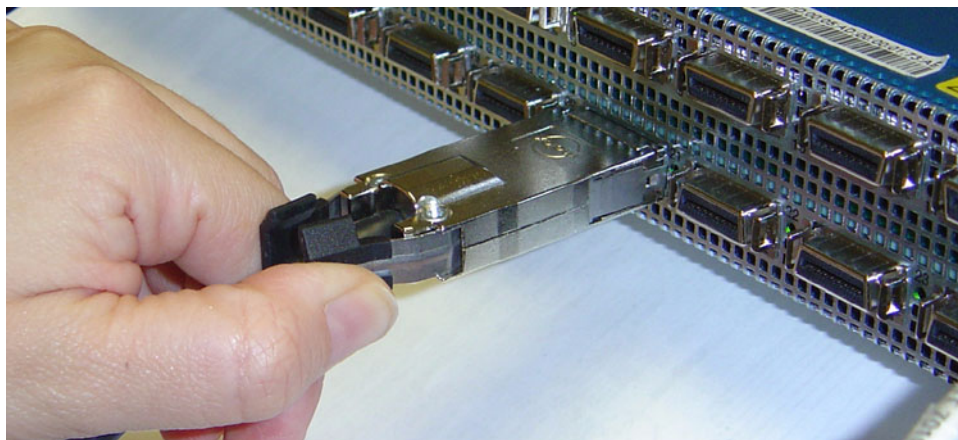


Figure 2-14: Removing a Pinch Connector

- c. To remove a cable with a pull connector, grasp the connector with one hand and push it *toward* the port, then pull the latch away from the port with your other hand and gently wiggle the connector away from the port.

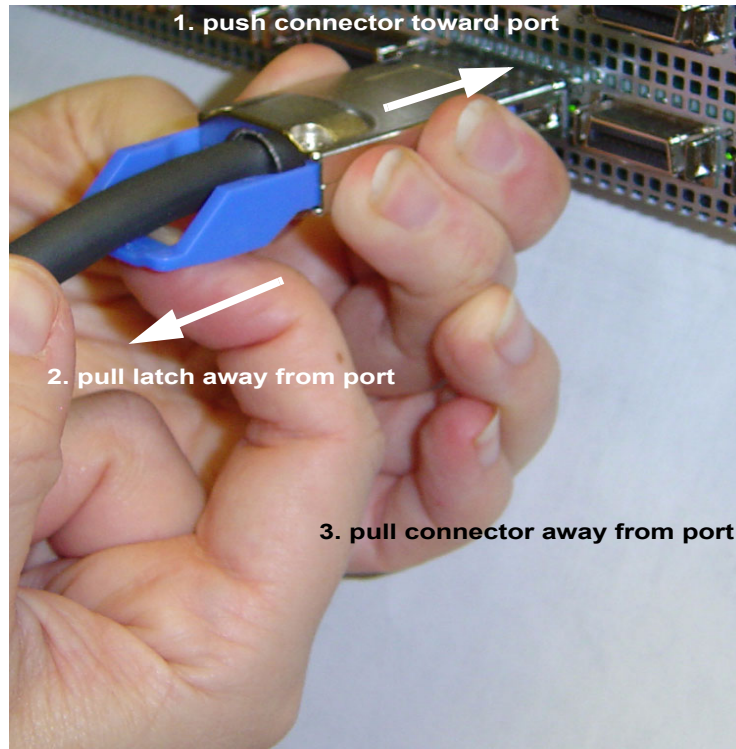


Figure 2-15: Removing a Pull Connector

Connecting Management Devices

To connect the management ports, use either a serial cable or an Ethernet cable.

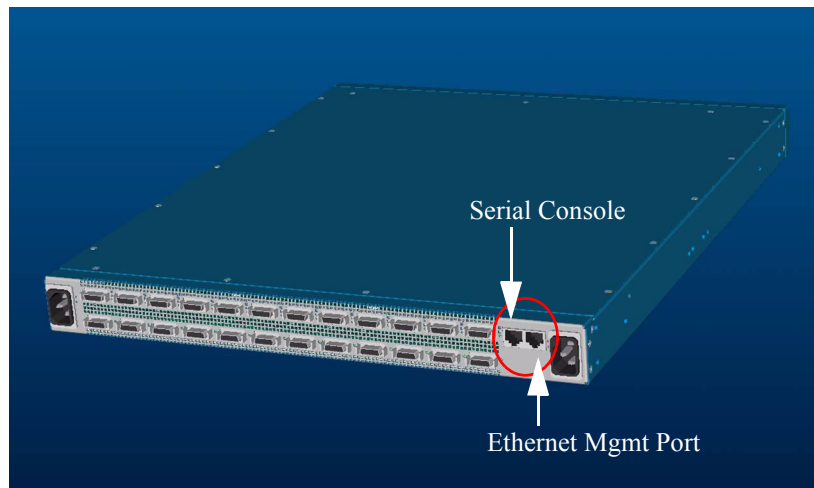


Figure 2-16: Serial and Ethernet Management Ports

Manage the System

You can manage the InfiniBand server-switch system using the following methods:

- Command Line Interface (CLI) - a text-based interface accessible through a direct serial connection, Telnet over IP, or SSH over IP.
- Chassis Manager (GUI) - A web-based graphic user interface.
- Element Manager (GUI) - A graphic interface installed on a workstation, accessible over IP.

Refer to the *HP 24-Port 4x Fabric Copper Switch User Guide*, the *HP 24-Port 4x Fabric Copper Switch Command Line Reference Guide*, or the *HP 24-Port 4x Fabric Copper Switch Chassis Manager User Guide* for more information about managing the InfiniBand systems.

Managing Individual Components

This chapter describes how to install the Power/Fan Modules in the HP 24-Port 4x Fabric Copper Switch.

Power/Fan Modules

The HP 24-Port 4x Fabric Copper Switch power supplies/fan units are hot-swappable. You can add a second module without powering off the chassis. If you have two power/fan units installed, you can remove one of them without removing power from the chassis.

About a Failed Power/Fan Unit

If you believe a power supply module has failed, check the LEDs and view the status through the Element Manager.

In most cases, vital information can be retrieved from the console port of Management Ethernet Port. Refer to [“Vital Product Data Storage” on page 4](#).

Locating the Power Supply/Fan Unit

Each power supply and fan unit is a single module. Both power/fan units are located on the front of the chassis. When facing the front of the switch with the bezel cover removed, the power modules are located in the left and right receptacles of the switch chassis.

Removing a Power Supply/Fan Unit

Caution: Never place your hand inside an empty card or module bay. You should never have cause to place a hand anywhere inside the switch chassis.


Caution: To ensure proper safety, ventilation and cooling power supply bays should not be left empty.

To insert a power/fan unit:


1. Ground yourself appropriately.
2. Remove the bezel cover from the front of the switch.



3. Remove the power supply/fan unit, if one is in place by pulling on the black handle.

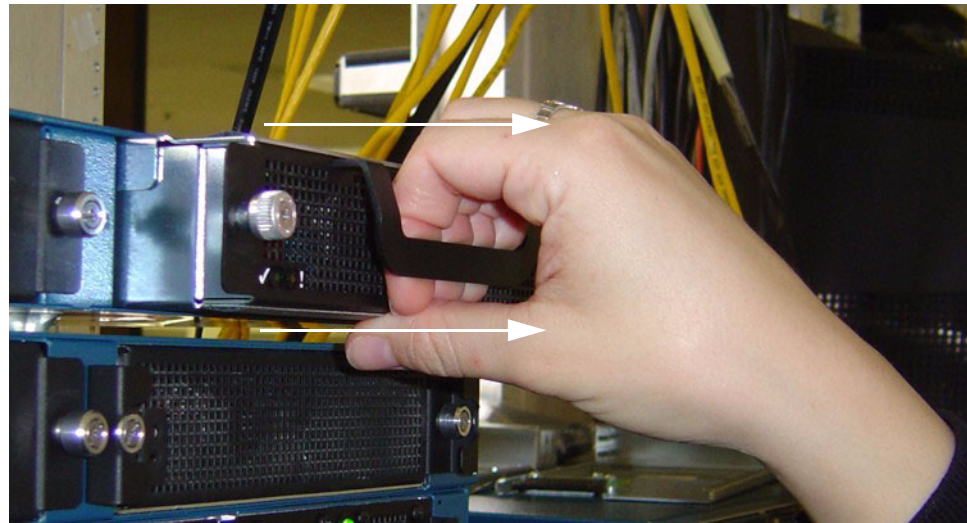

4. Insert the new power supply/fan unit into the open slot until it is fully seated. You may need to push the unit with your thumbs, to get it completely into the bay.
5. Secure fasteners with a #1 phillips screwdriver.
6. Check the LEDs to verify the status of the module. Refer to [“Power Supply/Fan LEDs” on page 21](#).

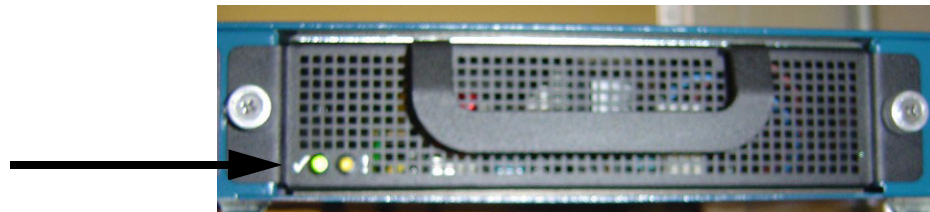

Monitoring the HP 24-Port 4x Fabric Copper Switch

This chapter describes how to install and manage the HP 24-Port 4x Fabric Copper Switch hardware.

- [“Using the LEDs” on page 19](#)
- [“Monitoring the System with Element Manager” on page 22](#)
- [“Monitor the System With the CLI” on page 23](#)

Using the LEDs

The HP 24-Port 4x Fabric Copper Switch has the following types of LED indicators:

- [“Chassis Status LEDs” on page 19](#)
- [“InfiniBand Port LEDs” on page 20](#)
- [“Power Supply/Fan LEDs” on page 21](#)

Chassis Status LEDs

Location

The front of the chassis has a single bi-color chassis status led, which is located behind the bezel. The rear of the chassis has one green and one yellow system status LED.

Interpreting the Chassis LEDs

Table 4-1: Interpreting the Chassis LEDs

color	indication
off	No system power or LED failure.
Yellow (solid)	Operator intervention required. An system error was detected, such as a Fan error, a POST failure, or a power supply failure. The “!” label (available on the back of the chassis) indicates a failure.
Yellow (blinking)	The yellow blinking LED is initiated automatically during the LED test that follows the application of power (16 seconds).
Solid Green	Solid green indicates proper operation and no critical errors

Interpreting the Rear Chassis LEDs


Table 4-2: Interpreting the Chassis LEDs

color	indication
off	No system power or LED failure.
Yellow (solid)	Operator intervention required. An system error was detected, such as a Fan error, a POST failure, or a power supply failure. The “!” label (available on the back of the chassis) indicates a failure.
Yellow (blinking)	The yellow blinking LED is initiated automatically during the LED test that follows the application of power (16 seconds).
Solid Green	Solid green indicates proper operation and no critical errors.

InfiniBand Port LEDs

Location

The InfiniBand port LED is located next to each InfiniBand port. The InfiniBand LED represents the logical link and the logical link activity.

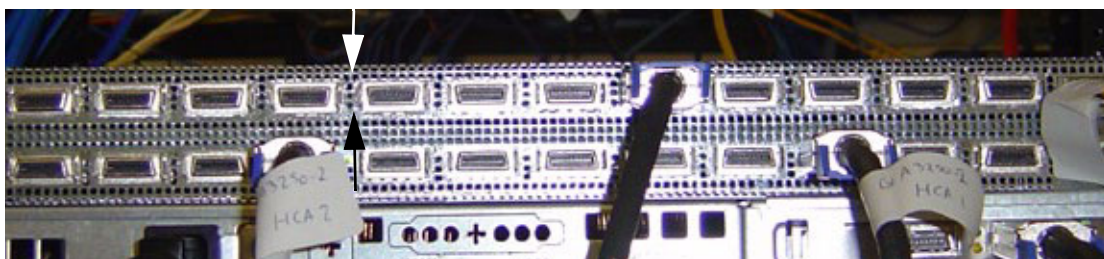


Interpreting the InfiniBand Port LED

Table 4-3: Interpreting the InfiniBand Port LED


color	indication
off	Logical link has not been established.
Solid Green	Logical link established.
Blinking Green	Logical link with activity.

Power Supply/Fan LEDs

Location

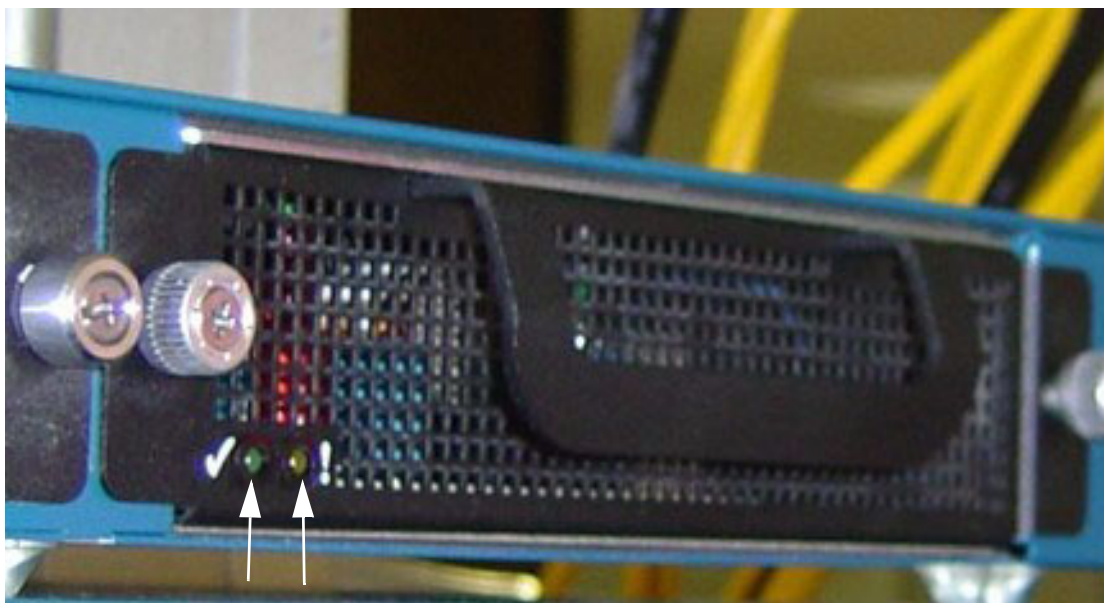

The Power Supply/Fan unit LEDs are located on the bottom left corner of each Power Supply/Fan unit.

- the green LED is labelled with “OK” or a  symbol.
- the yellow LED is labelled with a “!” symbol

Interpreting the Power Supply/Fan Unit LEDs

Table 4-4: Interpreting the Power Supply/Fan Unit LEDs

color	indication
off	DC output failure.
Green (solid)	AC connected, DC output OK.
Yellow (off)	No failure on the power supply.
Yellow (solid)	Operator intervention required. Failure detected within the Power Supply.
Yellow (blinking)	<p>Identify. Assists in identifying a particular Field Replaceable Unit on the chassis.</p> <p>Must be initiated by the user.</p> <p>This LED can be initiated manually by using the diag rack-locator command in the global configuration mode, or is initiated . Refer to the <i>HP 24-Port 4x Fabric Copper Switch Command Line Reference Guide</i> for more information.</p> <p>To run identity test on Power Supply 1:</p> <p>config mode -> diag power-supply 1 -> test led -></p> <p>-> start - start flashing</p> <p>-> stop - stop flashing</p>

1. Launch the Element Manager.
2. Select **Health > Status**. The Health Status window opens.



- ## Interpreting the Power Supplies Tab

The screenshot shows a window titled "Health Status" with a blue header bar. Below the header, there are four tabs: "Summary", "Power Supplies" (which is selected and highlighted with a dotted border), "Fans", and "Sensors". Below the tabs is a table with the following data:




PsId	Type	OperStatus	Utilization	Voltage	ProductSerialNum	PcaSerialNum	PcaAssemblyNum	FruNum
1	ac	up	n/a	12	n/a	n/a	n/a	n/a

Below the table, there are four buttons: "Refresh" (with a circular arrow icon), a document icon, a floppy disk icon, and a printer icon. To the right of these icons are the labels "Close" and "Help". At the bottom left of the window, it says "Data cached at 10:43:13".

Interpreting the Fans Tab

Use the **Health > Status > Fans** tab to view the operating status of the fans.

Health Status						
Summary Power Supplies Fans Sensors						
FanId	OperStatus	Speed	ProductSerialNum	PcaSerialNum	PcaAssemblyNum	FruNum
1	up	68	n/a	n/a	n/a	n/a
2	up	74	n/a	n/a	n/a	n/a
3	up	68	n/a	n/a	n/a	n/a

Refresh    Close Help




Data cached at 10:43:16

- Note the **OperStatus** field. A status of “up” means that the blower is operating correctly within the power/blower unit.
- Note the **Speed** field. The integer in this field represents a percentage. The percentage changes based on the ambient temperature of the unit, and will increase as the temperature rises.

Interpreting the Sensors Tab

Use the **Health > Status > Sensors** tab to view the operating status of the temperature sensor of the system.

Health Status			
Summary Power Supplies Fans Sensors			
SlotId	SensorId	OperStatus	Temperature
1	1	up	39

Refresh    Close Help

Data cached at 10:43:17

- Note the **OperStatus** field. A status of “up” indicates that the sensor is functioning properly.
- Note the **Temperature** field. The internal system temperature is displayed in Celsius. The system’s maximum external ambient temperature is 35 degrees C (0 – 10,000 ft). Acceptable internal temperature ranges are 30 degrees C above external ambient, plus 1 degree for every 1,000 ft above sea-level. The system reboots at an internal temperature of 75 degrees C.
A warning will appear if the temperature reaches 65 degrees C (at sea level).
The system reboots at an internal temperature of 75 degrees C (at sea level).

Monitor the System With the CLI

Use the following CLI commands to monitor the Power Supplies, the fans, and the sensors:

Monitor the Power Supplies

- **show power-supply**

Example

```

HP# show power
=====
Power-supply Information
=====
ps      type      oper-status  utilization  voltage
-----
1       AC        up           55           12
2       AC        up           55           12

=====
Power-supply Seeprom
=====
ps      product  pca      pca      fru
serial-number  serial-number  number        number
-----
1       200000    820000    820000    1
2       200000    820000    820000    1
HP#

```

Monitor the Fans

- **show fan**

An **oper-status** of “up” means that the blower is operating correctly within the power/blower unit.

Note the **Speed** field. The integer in this field represents a percentage. The percentage changes based on the ambient temperature of the unit, and will increase as the temperature rises.

Example

```

HP# show fan
=====
Fan Information
=====
fan      oper-status  speed(%)
-----
1        up        68
2        up        74
3        up        80
4        up        80

```

Monitor the Sensors

- **show sensor**

Example

```
HP-120# show sensor
```

```
=====
                        Sensor Information
=====
sensor    oper-status    temperature (c)
-----
1/1       up              42
12/1      up              36
HP#
```

Note the **Temperature** field. The internal system temperature is displayed in Celsius. The system's maximum external ambient temperature is 35 degrees C (0 – 10,000 ft). Acceptable internal temperature ranges are 30 degrees C above external ambient, plus 1 degree for every 1,000 ft above sea-level.

A warning will appear if the temperature reaches 65 degrees C (at sea level).

The system reboots at an internal temperature of 75 degrees C (at sea level).

Hardware Diagnostic Tests

This chapter describes how to run diagnostic tests on the HP 24-Port 4x Fabric Copper Switch hardware.

- [“Diagnostic Tests” on page 27](#)
- [“Displaying Hardware Errors” on page 30](#)

Diagnostic Tests

The Self Test

For complete diagnostic command information, refer to the *HP 24-Port 4x Fabric Copper Switch Command Line Reference Guide*.

The HP 24-Port 4x Fabric Copper Switch provides the following diagnostic tests:

- Card Test
- Interface Test
- Power/Fan

Running a Card Self-Test

To perform a diagnostic self-test on a card:

1. Enter the **diag card #** command.
You cannot stop the card test once it has begun.

Example

```
HP> enable
HP# config
HP(config)# diag card 1
HP(config-diag-card-1)# test self-test
HP(config-diag-card-1)# start
```

2. Exit the test to view the progress of the test.
The test takes approximately 5 - 8 minutes.

Example of test in progress

```
HP(config-diag-card-1)# exit
HP(config)# exit
HP# show diagnostic card 1
=====
Diagnostic Tests For Cards
=====
test : self-test
slot-id : 1
iterations : 1
action : start
result : In progress
percentage-completed : 0
result-string :
```

Example of completed test

```
HP(config-diag-card-1)# exit
HP(config)# exit
HP# show diagnostic card 1
=====
Diagnostic Tests For Cards
=====
test : self-test
slot-id : 1
iterations : 1
action : start
result : success
percentage-completed : 100
result-string : Card Test, Final report : PASSED; Please reboot
system
```

3. Use the **more** *file-system:file-name* command to display the log file and view the detailed results of the **diag** test.

Example of log results

```

HP# more syslog:hwif_log
Thu Mar 4 10:57:49 2004: POST: SEEPROM: PASSED
Thu Mar 4 10:57:49 2004: POST: FPGA: PASSED
Thu Mar 4 10:57:49 2004: POST: SUMMIT: PASSED
Thu Mar 4 10:57:50 2004: POST: RTC: PASSED
Thu Mar 4 10:57:54 2004: POST: FAN: PASSED
Thu Mar 4 10:57:54 2004: card_startup.x : card is starting up
Thu Mar 4 10:57:54 2004: Anafa2Init: a2update set to IGNORE
Thu Mar 4 10:58:16 2004: Anafa2 POST: firmware check PASSED
Thu Mar 4 19:01:55 2004: POST: SEEPROM: PASSED
Thu Mar 4 19:01:55 2004: POST: FPGA: PASSED
Thu Mar 4 19:01:55 2004: POST: SUMMIT: PASSED
Thu Mar 4 19:01:56 2004: POST: RTC: PASSED
Thu Mar 4 19:02:00 2004: POST: FAN: PASSED
Thu Mar 4 19:02:00 2004: card_startup.x : card is starting up
Thu Mar 4 19:02:00 2004: Anafa2Init: a2update set to IGNORE
Thu Mar 4 19:03:56 2004: POST: SEEPROM: PASSED
Thu Mar 4 19:03:56 2004: POST: FPGA: PASSED
Thu Mar 4 19:03:57 2004: POST: SUMMIT: PASSED
Thu Mar 4 19:03:58 2004: POST: RTC: PASSED
Thu Mar 4 19:04:02 2004: POST: FAN: PASSED
Thu Mar 4 19:04:02 2004: card_startup.x : card is starting up
Thu Mar 4 19:04:02 2004: Anafa2Init: a2update set to IGNORE
Thu Mar 4 19:04:23 2004: Anafa2 POST: firmware check PASSED
Thu Mar 4 19:07:07 2004: POST: SEEPROM: PASSED
Thu Mar 4 19:07:07 2004: POST: FPGA: PASSED
Thu Mar 4 19:07:07 2004: POST: SUMMIT: PASSED
Thu Mar 4 19:07:08 2004: POST: RTC: PASSED
Thu Mar 4 19:07:12 2004: POST: FAN: PASSED
Thu Mar 4 19:07:12 2004: card_startup.x : card is starting up
Thu Mar 4 19:07:12 2004: Anafa2Init: a2update set to IGNORE
Thu Mar 4 19:07:34 2004: Anafa2 POST: firmware check PASSED
Fri Mar 5 16:19:48 2004: POST: SEEPROM: PASSED
Fri Mar 5 16:19:48 2004: POST: FPGA: PASSED
Fri Mar 5 16:19:48 2004: POST: SUMMIT: PASSED
Fri Mar 5 16:19:49 2004: POST: RTC: PASSED
Fri Mar 5 16:19:53 2004: POST: FAN: PASSED
Fri Mar 5 16:19:53 2004: card_startup.x : card is starting up
Fri Mar 5 16:19:53 2004: Anafa2Init: a2update set to IGNORE
Fri Mar 5 16:20:15 2004: Anafa2 POST: firmware check PASSED
Fri Mar 5 16:21:54 2004: POST: SEEPROM: PASSED
Fri Mar 5 16:21:54 2004: POST: FPGA: PASSED
<output truncated>

```

4. Enter **reload** to reboot the switch after the test is complete. If you do not reboot the switch after running the self-test, the switch will remain in an unknown state.

Run a Test on the Power Supply/Fan

The status for a power supply and fan for the switch are shown together because they are a single unit.

1. Enter the **diag power-supply** command.

Example

```
HP> enable
HP# config
HP(config)# diag power-supply all
```

Run an LED Test on the Power Supply/Fan

Example

```
HP(config)# diag power-supply 1
HP(config-diag-power-supply-1)# test led
HP(config-diag-power-supply-1)# start
HP(config-diag-power-supply-1)# stop
HP(config-diag-power-supply-1)#
```

Displaying Hardware Errors

To display POST results, non-fatal errors that can be recovered, informational logging (such as firmware updates), and hardware errors:

1. Use the **more syslog:hwif_log** command to locate the:
/topspin/log/hwif_log

Example of output without errors

```
HP> enable
HP# more syslog:hwif_log
Thu Mar 4 10:57:49 2004: POST: SEEPROM: PASSED
Thu Mar 4 10:57:49 2004: POST: FPGA: PASSED
Thu Mar 4 10:57:49 2004: POST: SUMMIT: PASSED
Thu Mar 4 10:57:50 2004: POST: RTC: PASSED
Thu Mar 4 10:57:54 2004: POST: FAN: PASSED
Thu Mar 4 10:57:54 2004: card_startup.x : card is starting up
Thu Mar 4 10:57:54 2004: Anafa2Init: a2update set to IGNORE
Thu Mar 4 10:58:16 2004: Anafa2 POST: firmware check PASSED
Thu Mar 4 19:01:55 2004: POST: SEEPROM: PASSED
Thu Mar 4 19:01:55 2004: POST: FPGA: PASSED
Thu Mar 4 19:01:55 2004: POST: SUMMIT: PASSED
Thu Mar 4 19:01:56 2004: POST: RTC: PASSED
Thu Mar 4 19:02:00 2004: POST: FAN: PASSED
Thu Mar 4 19:02:00 2004: card_startup.x : card is starting up
Thu Mar 4 19:02:00 2004: Anafa2Init: a2update set to IGNORE
<output truncated>
```

In the following example the fan did not pass the POST test.

Example of output with error

```
# ./hw_diag.x post
POST: SEEPROM: PASSED
POST: VPD: PASSED
POST: FPGA Revision = 0xa8
POST: FPGA: PASSED
POST: SUMMIT: PASSED
POST: RTC: PASSED
POST: FAN ctrlr2: fan 2 speed 330 is not in range for 100 percent of speed 9500;
system yellow LED on: FAILED
```

In the following example, the Field Programmable Gate Array (FPGA) is not working correctly.

Example of output with error

```
# ./hw_diag.x post
POST: SEEPROM: PASSED
POST: VPD: PASSED
POST: FPGA Revision = 0xa8
POST: FPGA: system yellow LED on: FAILED
POST: SUMMIT: PASSED
POST: RTC: PASSED
POST: FAN ctrlr2: PASSED
```

Error Types

The following types of hardware errors are logged for the switch baseboard:

Table 5-1: Switch Baseboard Errors

Error Number	Description
1	Summit Power Controller Configuration Error
2	I2C Communication Error
3	Serial EEPROM Error
4	DiskOnChip Error
5	Memory Error
6	March SSO Error
7	Realtime Clock Error
8	Fan Error
9	FPGA Error
10	Summit High Temp Error
12	Summit High Current Error
14	Summit Voltage Out of Range Error
16	Firmware Error on the switch chip
17	Bus error on switch chip
18	ID Module Error
19	Management Module Error

The following types of hardware errors are logged for the HP 24-Port 4x Fabric Copper Switch power supply:

Table 5-2: Switch Power Supply Errors

Error Number	Description
1	Power Supply DC Fail Error
2	Power Supply Fan Fail Error
3	Power Supply I2C Communication Error

Specifications and Compliance Certifications

This chapter details the HP 24-Port 4x Fabric Copper Switch specifications and compliance certifications.

Chassis and Management Interface

Table 6-1: Chassis and Management General Specifications

Environmental Specifications	
Operating Temperature	0 to 35C
Non-Operating Temperature	-40 to 70C
Operating Temperature Gradient	20C max. per 60 minutes
Operating Altitude	0 to 10,000 ft
Non-Operating Altitude	0 to 40,000 ft
Operating Humidity:	8 to 80% non-condensing
Non-Operating Humidity:	5 to 90% RH at 65C for 24 hrs., Non-condensing
Operating Humidity Gradient	10% maximum per 60 min.
Operating Shock	5G max., 11ms half-sine wave., 10G max. 5ms half-sine wave
Non-Operating Shock	10G max., 11ms half-sine wave.
Operating Vibration, Sinusoidal	0.25G max., 3-200Hz 15min.
Non-Operating Vibration, Sinusoidal	0.50G max., 3-200Hz 15min.
Non-Operating Vibration, random	2.09Grms, 3-axis, bottom/top, left/right, front/back

Table 6-1: Chassis and Management General Specifications

Environmental Specifications	
Max. Operating Inclination	15 degrees

Electrical Specifications

Table 6-2: Electrical Specifications

Category	Specification
AC Input	Auto-ranging 90-264VAC, 47-63Hz.
Power consumption	< 65W

EMC/Immunity

Table 6-3: EMC/Immunity

Description
FCC: CFR 47 Part 15, Subpart B Class A
Canada: ICES-003 Issue 2
EN 61000-3-2 (Harmonics), EN 61000-3-3 (Flicker), EN 55022:1998, EN 55024:1998; EN61000-4-1,2,3,4,5,6,8,11
Japan: VCCI-V3/02.04

Safety

Table 6-4: Safety

Country Deployment	Description
USA	UL60950, 3rd ed.
Canada	CSA 22.2 No. 60950:2000
Europe	Europe: IEC60950, EN60950, EN60825-1 and EN60825-2
Japan	Japan: IEC60950

Acoustics

Table 6-5: Acoustics

Country Deployment	Description
Sound Pressure	25dB at 25C ambient ISO 7779 and section 8.5 of ISO 3744:1994(E)
Sound Power	<40dB at 25C ambient ISO 7779, section 8.6 of ISO 3744:1994(E)

Product Markings

- cUL, FCC Statement, VCCI, CE, ICES.

