

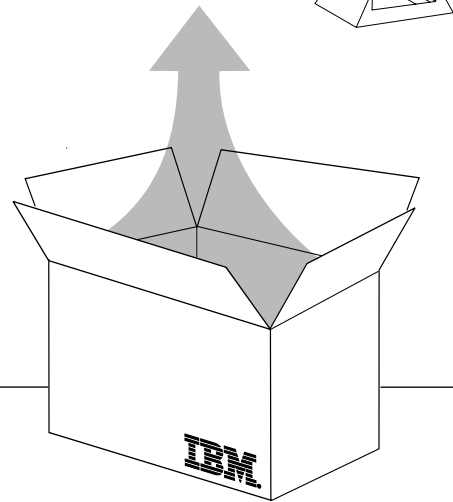
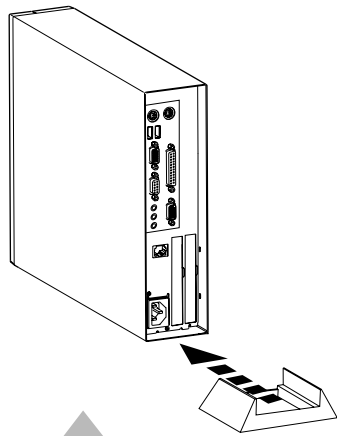
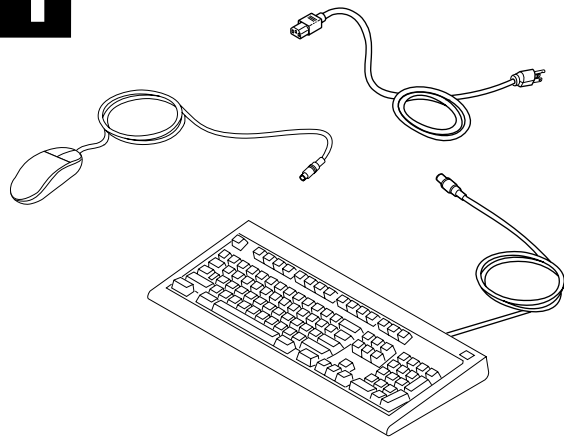





1

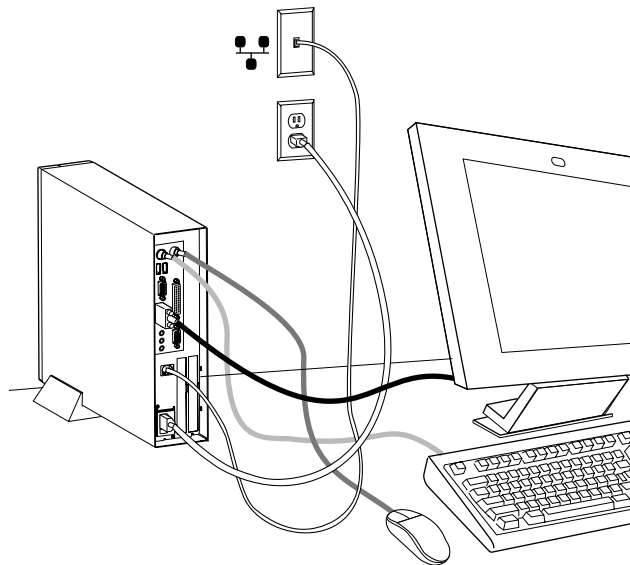

2

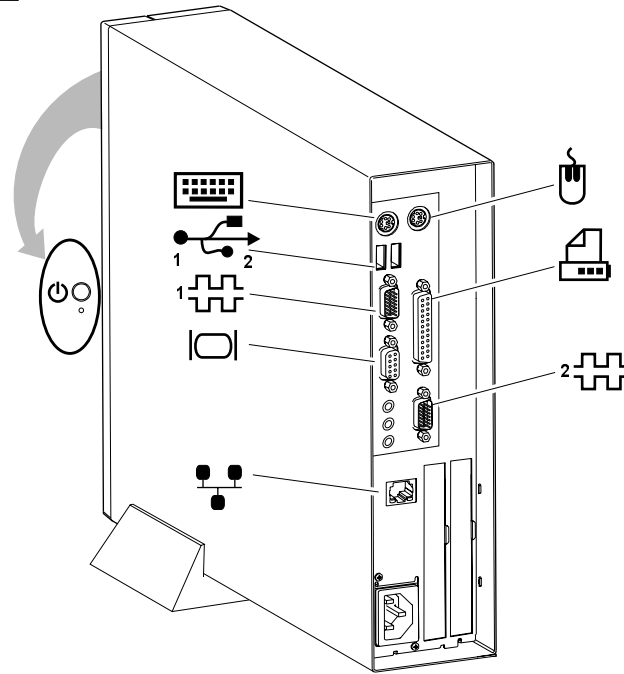

3

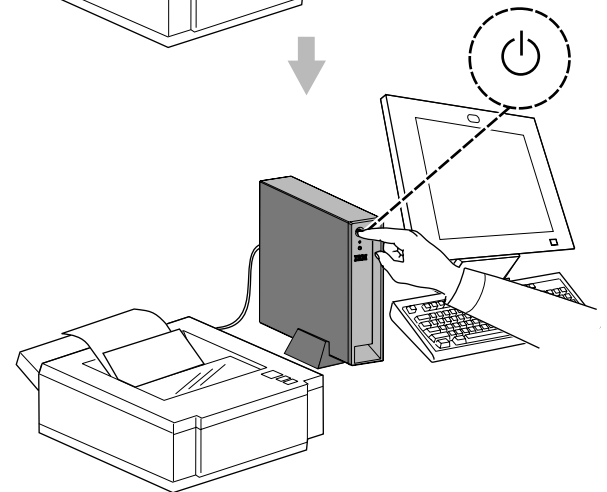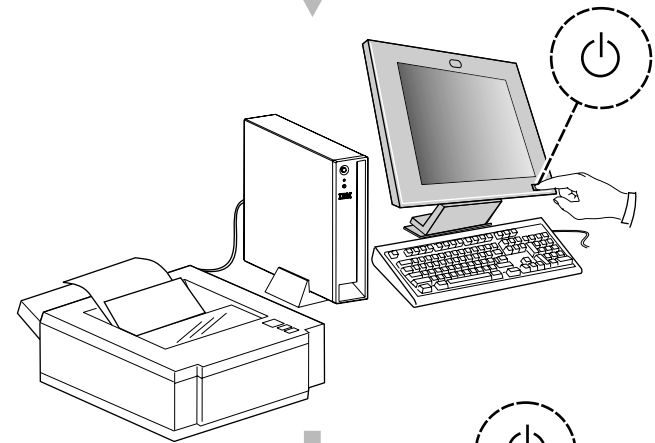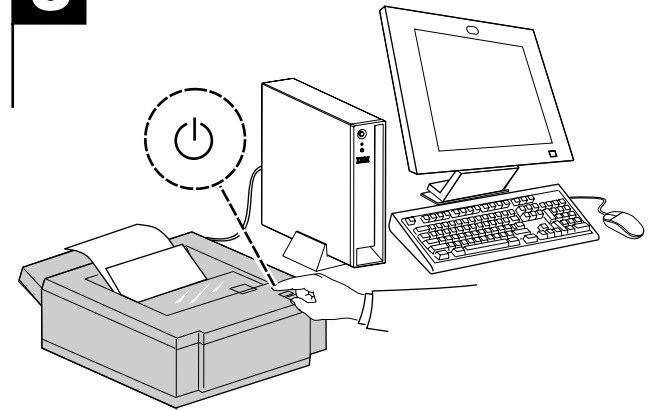

4



NetVista



www.pc.ibm.com/support

↳ Enter *type-model*

or

↳ Select NetVista thin client to browse the support site



www.ibm.com/nc/pubs

NetVista

Quick Setup for NetVista N70 Thin Client

Type 8366 (Model xxx)

5

```

IBM NetVista Configuration Program
DHCP/Static      = Static
Ethernet/TR     = Ethernet
BootMethod      = IDE
IP              = 192.168.1.110
Gateway         = 192.168.1.1
Netmask         = 255.255.255.0
BootServer1 URL = nfs://192.168.1.10/xxx/xxx/xxx
BootServer2 URL = nfs://192.168.1.11/yyy/aaa/bbb
RamDisk         = Enabled
Verbose         = Disabled

[Save]          [Cancel]

 
Use up and down arrows to scroll between fields.
Type in new value, use Backspace to delete.

```



First Edition (November 2001)

© Copyright 2001 International Business Machines Corporation. All rights reserved.



Part Number: 22P0979
SA23-2824-00



www.ibm.com/nc/pubs

