



Important information for the IBM Radial Arm User's Guide

The information provided below supplements the installation instructions given in the *IBM Radial Arm User's Guide* (IBM® part number 19K4573).

Location of change	Additional information
Page 1-1: "Product Description" section	Among the parts included in this option are four monitor brackets, not all of which are used.
Page 1-2: "Installing the radial arm" section	Refer to the four illustrations on pages 1-3 and 1-4 when assembling the radial arm.
Page 1-3: Item 8.	 <p>This illustration shows the tilt-and-turn mechanism.</p>
Page 1-3: Item 9.	 <p>This illustration shows the 10-32 x 3/8-in. screws that you need to use when attaching the monitor adapter bracket to the tilt-and-turn mechanism.</p>
Page 1-5: Step 2.	The illustration for step 2 is on page 1-6 of the <i>User's Guide</i> .
Page 1-6: Item 6.	Tighten the screw until all pieces fit firmly together.
Page 1-9: Item 15.	Use the 7/32-in. Allen wrench that is included in the option package.

© Copyright International Business Machines Corporation 2000.
All rights reserved.

Note to U.S. Government Users – Documentation related to restricted rights – Use, duplication or disclosure is subject to restrictions set forth in GSA ADP Schedule Contract with IBM Corp.

IBM is a trademark of the IBM Corporation in the United States, other countries, or both.



P09N4195